



**Truck Tent Set Up Guide**

**Set Up The Truck Tent**


**CAUTION:** Do not use excessive force when raising the poles or tightening the straps. Make sure the pole sleeves slide over the poles without hanging up.

**1-**Open the tailgate. Place the tent in your truck bed with the no-see-um mesh side facing up. Slip the tailgate pockets over the end of the tailgate and run the tailgate strap underneath.

**2-**Pull the tent forward so that it covers the entire truck bed (Fig 1). The front corners of the tent have split seams that go over the front corners of the bed (Fig 2).



**3-**Attach straps A and C to the bottom outside lip of the truck bed. Attach strap B to the wheel well (Fig 3). Repeat on the opposite side of the truck bed.

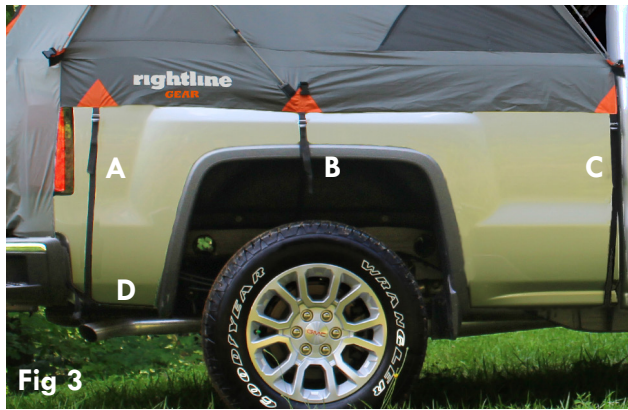

**4-**Tighten the tailgate strap (Fig 4). Place the tailgate side flap behind the bumper on most trucks (Fig 5). Run strap D over strap A and attach it to the bottom outside lip of the truck bed (Fig 6).



Repeat on the opposite side of the truck bed.


**5-**Adjust all straps so that the inner flap seam is even with the top of the bed rail (Fig 7 and Fig 8).



**6-**Open the door of the tent. Tilt the tailgate up and rest it against your body (Fig 9). Thread the (2) orange straps (Fig 9) through the gap between the tailgate and the truck bed (Fig 10).



**7-**Release the tailgate down. The round part of the strap's clips will be held in place against the underside of the tailgate (Fig 11). You may alternatively fasten the clips to any metal frame member behind the truck's bumper (Fig 12). Adjust the orange straps so that the inner flap seam is kept even with the top of the bed rail (Fig 7 and Fig 8).

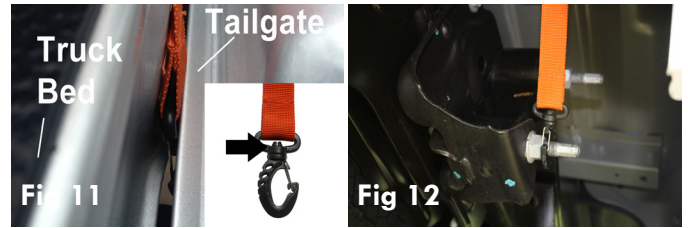

**8-**Position the inner side flap under the orange straps and pull out the slack (Fig 13 and Fig 14).



**9-**The (2) dome tent poles are marked with orange tape and the (1) rear pole is marked with gray tape (Fig 15). Run all (3) tent poles through their matching color pole sleeves (Fig 15 and Fig 16). The gray-marked pole should run under the (2) orange-marked poles (Fig 16).



**10-Raise** each of the orange-marked poles by inserting their ends into their matching color pole pockets (Fig 17). Raise the gray-marked pole by the same method.



**11-Attach** the (4) pole clips to the gray-marked pole (Fig 18). Give all straps a final adjustment as necessary.

---

## Set Up The Rainfly


---

**1-Position** the rainfly over the tent with the Rightline Gear logo towards the rear.

**2-Connect** the (3) buckles on each side of the tent (Fig 19) and adjust their straps. The rainfly should cover the seams under the windows on both sides of the tent (Fig 20).



**3-Tie** the (3) strings around the rear edge of the rainfly to the tent poles (Fig 21). Line up the seams of the rainfly with the tent poles underneath (Fig 22).

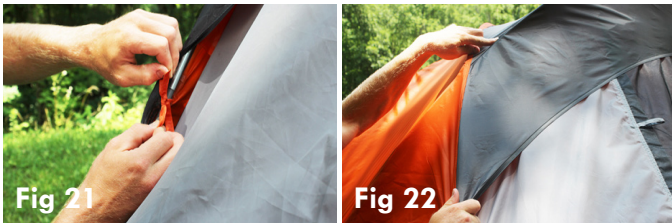

The use of the rainfly is optional, depending on weather conditions.

**CAUTION:** Do not drive with the tent set up. Do not run the truck engine when anyone is inside the tent. Please observe the caution tag on the inside of the tent.

---

## Take Down The Tent

---

**1-Unattach** the pole clips and take the poles out of the pole pockets. Lower the tent and remove the poles from the pole sleeves. Fold the poles and place them into the pole bag.

**2-Unclip** the straps from the outside lip of the truck bed and loosen the tailgate strap.

**3-Slide** the tent to the inside of the bed. Tilt the tailgate up and release the orange straps.

**4-Roll** the tent, the rainfly, and the pole bag together (Fig 23). Place the rolled up tent into the stuff sack (Fig 24).



**WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. THIS TENT MEETS THE FLAMMABILITY REQUIREMENTS OF CPAI-84. THE FABRIC MAY BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE TO THE TENT FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.**