



rightline
GEAR

Package Contents

- tent
- (2) orange-marked tent poles
- (1) gray-marked tent pole
- (1) pole bag
- (1) rainfly
- (1) stuff sack with sewn in set up guide

Set Up The Truck Tent

Open the tailgate and place the tent in your truck bed with the no-see-um mesh side facing up. Slip the tailgate pockets over the end of the tailgate and run the tailgate strap underneath.

Pull the tent forward so that it covers the entire truck bed (Fig 1). The front corners of the tent have split seams that go over the front corners of the bed (Fig 2).




Attach straps A and C to the bottom outside lip of the truck bed (Fig 3). Attach strap B to the wheel well (Fig 4). Repeat on the opposite side of the truck bed.




Tighten the tailgate strap (Fig 5). Place the tailgate side flap behind the bumper on most trucks (Fig 6).



Run strap D from the tailgate flap over strap A and attach it to the bottom outside lip of the truck bed (Fig 7). Repeat on the opposite side of the truck bed.

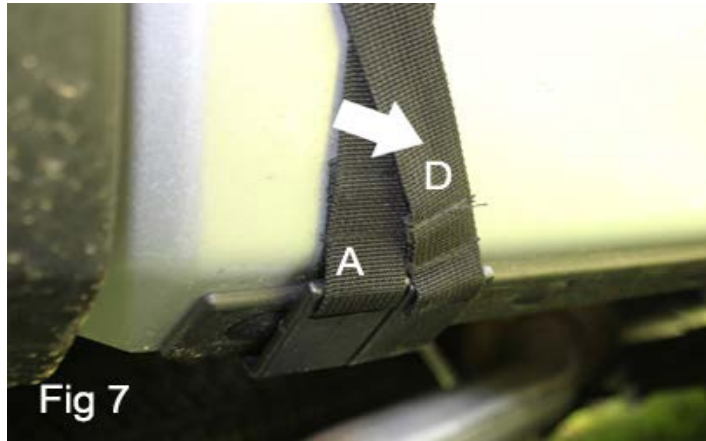

Adjust all straps so that the inner flap seam is even with the top of the bed rail (Fig 8 and Fig 9).

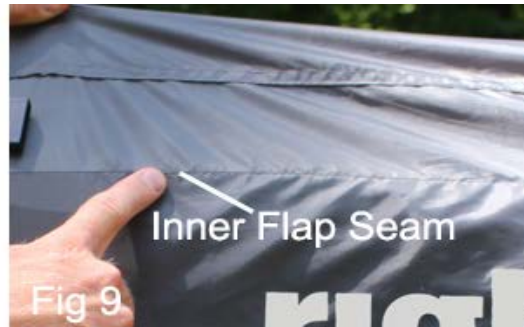

Open the door of the tent. Tilt the tailgate up and rest it against your body (Fig 10). Thread the (2) orange straps (Fig 10) through the gap between the tailgate and the truck bed (Fig 11).



Release the tailgate down. The round part of the strap's clips will be held in place against the underside of the tailgate (Fig 12). You may alternatively fasten the clips to any metal frame member behind the truck's bumper (Fig 13). Adjust the orange straps so that the inner flap seam is kept even with the top of the bed rail (Fig 8 and Fig 9).



Position the inner side flap under the orange straps and pull out the slack (Fig 14 and Fig 15).



The (2) dome tent poles are marked with orange tape and the (1) rear pole is marked with gray tape (Fig 16). Run all (3) tent poles through their matching color pole sleeves (Fig 16 and Fig 17). The gray-marked rear pole will run under the (2) orange-marked dome poles (Fig 17). Make sure the pole sleeves slide over the poles without hanging up.



Raise each of the orange-marked dome poles by inserting their ends into their matching color pole pockets (Fig 18). Raise the gray-marked pole by the same method. Do not use excessive force when raising poles.



Attach the (4) pole clips to the gray-marked pole (Fig 19) and give all straps a final adjustment as necessary.

Set Up The Rainfly

Use of the rainfly is optional, depending on weather conditions. Position the rainfly over the tent with the Rightline Gear logo towards the rear. Connect the (3) buckles on each side of the tent (Fig 20) and adjust their straps. The rainfly should cover the seams under the windows on both sides of the tent (fig 21).



Tie each of the (3) strings around the rear edge of the rainfly to the tent poles (Fig 22). Line up the seams of the rainfly with the tent poles underneath (Fig 23).



Take Down The Truck Tent

Unattach the pole clips and take the poles out of the pole pockets. Lower the tent and remove all (3) poles from their pole sleeves. Fold the poles and place them into the pole bag.

Unclip the straps from the outside lip of the truck bed and loosen the tailgate strap.

Slide the tent to the inside of the bed, tilt the tailgate up, and release the orange straps.

Roll the tent, the rainfly, and the pole bag together (Fig 24). Place the rolled up tent into the stuff sack (Fig 25).

