



ATV

**ATV LIGHT BAR
MOUNTING KIT INSTALLATION INSTRUCTIONS
40630 FITS (1) 6" E-SERIES® OR SA-SERIES®
41030 FITS (1) 10" E-SERIES OR SA-SERIES**

Lights Sold Separately*

PARTS INCLUDED

(1) Mounting Bracket

TOOLS NEEDED

5/16 wrench or socket
17mm wrench or socket

IMPORTANT

Thank you for purchasing Rigid Industries' products for your ATV. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all of these instructions and tips before proceeding with installation. **It is strongly recommended that this product be installed by a professional.**

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

INSTALLATION


To mount your new light kit remove the handle bar mounting system from ATV. Mount the bracket between the handle bar clamp and the steering stem. You shouldn't have to remove your handle bars from the mount or any of the controls on the bars.

Once the mount is installed, as shown in Fig. 1, install the light into the mounting bracket using the hardware provided with light. Make sure the black compression spacers are located between the bracket and the light housing or **damage to the light may occur.**

WIRING

Wire your lights according to the instructions included with the light. Take care to avoid any heat sources and sharp or abrasive surfaces.

Figure 1. Mounting Bracket

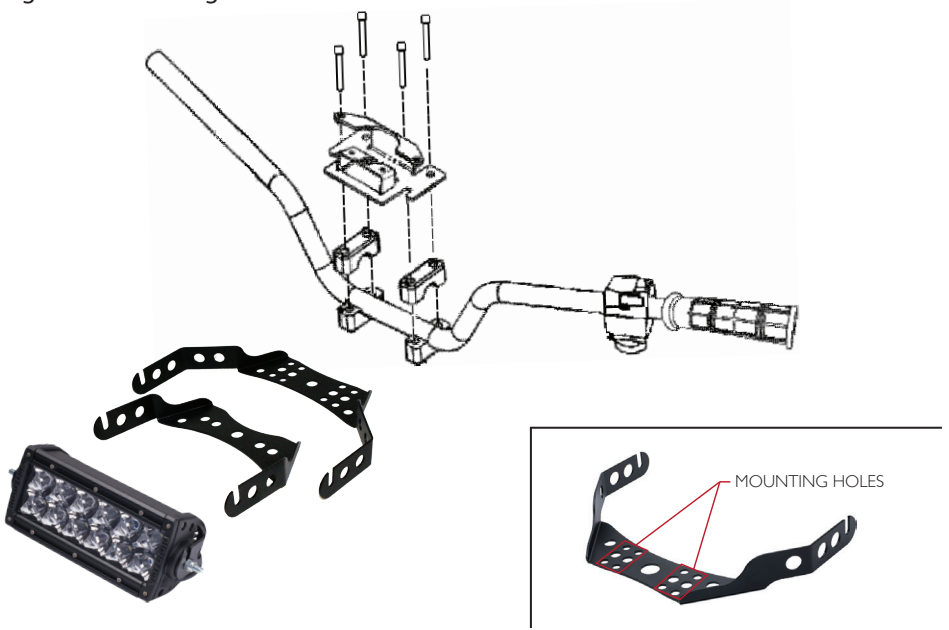

Your installation is now complete.

Welcome to the Rigid Nation!

Rigid Industries provides the best in off-road lights equipment.