

IMPORTANT

Thank you for purchasing Rigid Industries' products for your vehicle. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all of these instructions and tips before proceeding with installation.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

WARRANTY INFORMATION

Rigid Industries warrants that this product will be free from defects in material and workmanship. If you believe your Rigid Industries product is defective, it must be returned to Rigid Industries for inspection by our warranty claims department. If, after inspection, Rigid Industries verifies that the defect was not caused by negligence, abuse, unauthorized repair or disassembly, Rigid Industries will determine whether the product will be repaired or replaced in accordance with Rigid Industries Limited Lifetime Warranty*.

Warranty Periods:

- All LED Lights – Limited Lifetime
- Accessories and Mounts – 2 years
- Flashlights – 1 year
- Batteries – 90 days

All of the following will immediately void all warranties:

- Customer negligence – The customer has modified the light and/or is not using it for the recommend application.
- Customer abuse – Damage to the light beyond normal wear and tear.
- Repair work done by unauthorized personnel without Rigid Industries' approval.
- If the light has been opened or any screws have been removed.



FORD® TRUCK FOG LIGHT BRACKETS

*Lights Sold Separately



1999-2013 Ford® Super Duty® Fog Light Bracket Kit
Mounts two D-Series lights.

PARTS INCLUDED



- Coated Stainless Steel Bracket (2)
- Coated Stainless Steel Spacer (2)
- M6 Bolts (4)
- M6 Flanged Locknut (4)
- M6 Plastic Spacer (4)

INSTRUCTIONS

1. Remove factory fog light and housing by unscrewing three 8mm bolts. As shown in Figure #1.
2. Remove factory fog light from housing assembly as shown in Figure #2.
3. Install bracket on D-Series light using hardware provided with light.
4. Attach bracket with D-Series light onto housing assembly utilizing the factory clip, spring and adjuster bolt. Use provided plastic spacers between outside edge of bracket and inside edge of housing assembly.
4. (Cont'd) Insert the stainless steel spacer between the bracket and factory plastic clip on the bottom of the bracket (spacer just adds thickness to match clip). As shown in Figure #3.
5. Re-install fog light assembly with D-Series light onto vehicle.
6. Wire your lights according to the instructions included with the light(s). Take care to avoid any heat sources and sharp or abrasive surfaces.

**Your installation is now complete.
Welcome to the Rigid Nation!**



Figure 1



Figure 2

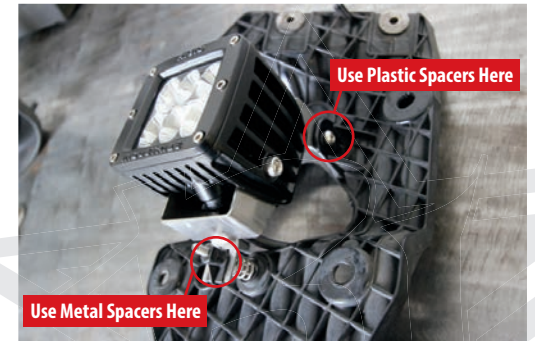


Figure 3

Light your way with the highest quality off-road lights on the market.