



**ROCK HARD 4X4 JEEP WRANGLER JL 2/4-DOOR  
2018 - CURRENT TUBULAR ROCKER GUARD  
PART #: RH-901XX  
Installation Instructions**



## **PACKING LIST:**

### **4-DOOR MODEL**

- 1 - DRIVER SIDE TUBULAR  
ROCKER GUARD**
- 1 - PASSENGER SIDE TUBULAR  
ROCKER GUARD**
- 12 - 5/16" NYLOCK NUTS**
- 4 - LONG HOLE PLATES**
- 4 - SHORT HOLE PLATES**
- 6 - 8MM x 1.25 x 30 BOLTS  
(IF FACTORY GUARDS NOT  
INSTALLED - SPORT MODEL)**
- 6 - 5/16" WASHERS**

## **REQUIRED TOOLS:**

- 13MM SOCKET**
- 18MM SOCKET**
- 10MM SOCKET**
- 8MM SOCKET**

**DRILL BIT (OPTIONAL IF PINCH  
SEAM ISN'T ALIGNED FROM  
FACTORY)**

**Thank you for your purchase! Whether you bought this Rock Hard 4x4 product from one of our fantastic dealers or our factory direct team, we thank you for your business.**

Rock Hard 4x4 is a family owned and operated business. We are headquartered in Saint Paul, Nebraska where we design, fabricate, and produce every single one of our products. Every single part we manufacture is 100% Made in the USA and exclusively in house by the Rock Hard 4x4 team.

We outsource zero processes.


**To you**, that means the product you are installing is the highest quality and longest lasting component on the market.

**To us**, that means you've selected a part we've spent years developing. Each Rock Hard 4x4 part has gone through more research and development and evolution than most people realize. While our parts may have the same striking look year after year, subtle revisions and refinements we implement maintain their status as the most durable and easy to install on the market.

1. Remove factory rocker guards or steps if equipped. Remove 6 factory body mount bolts.
2. Install Rock Hard 4x4 tubular rocker guards into factory pinch weld holes.

***NOTE: It's rare, but the stamping process when your tub is mated to your floor pan results in misaligned pinch seam bolt holes. A quick enlarging with a drill bit will help our bolts slip into these holes easier.***

3. Install LONG washer plates over rear and center sets of studs, install 2 small plates on front studs. Do not tighten.

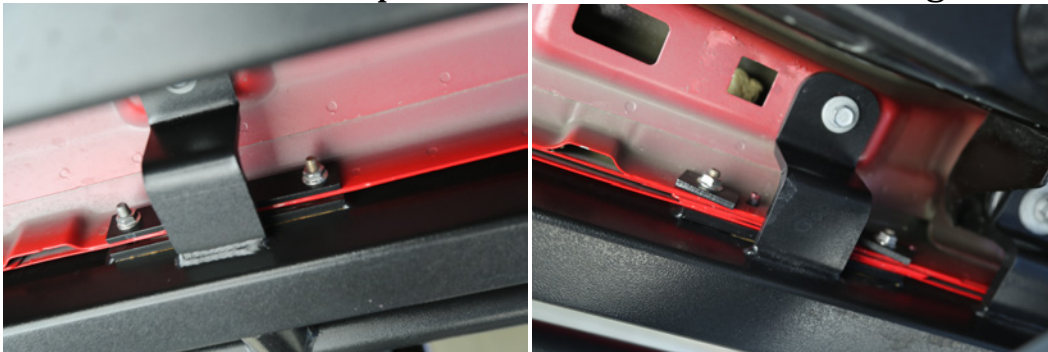

4. Reinstall body mount bolts, do not tighten.
5. Install supplied 8MM bolts and washers through welded floor pan braces, do not tighten.
6. Install nylock nuts over pinch seam studs, do not fully tighten.
7. Tighten all hardware.