



**ROCK HARD 4X4 JEEP WRANGLER JL 2/4-DOOR  
2018 - CURRENT TUBULAR ROCKER GUARD  
PART #: RH-901XX  
Installation Manual**



## **PACKING LIST:**

### **4-DOOR MODEL**

- 1 - DRIVER SIDE TUBULAR  
ROCKER GUARD**
- 1 - PASSENGER SIDE TUBULAR  
ROCKER GUARD**
- 12 - 5/16" NYLOCK NUTS**
- 4 - LONG HOLE PLATES**
- 4 - SHORT HOLE PLATES**
- 6 - 8MM x 1.25 x 30 BOLTS  
(IF FACTORY GUARDS NOT  
INSTALLED - SPORT MODEL)**
- 6 - 5/16" WASHERS**
- 6 - 12MM x 1.75 x 100 BOLTS**
- 4 - 2-3/4" BLACK MACHINED  
WASHERS**
- 2 - 1-5/8" BLACK MACHINED  
WASHERS**

### **2-DOOR MODEL**

- 1 - DRIVER SIDE TUBULAR  
ROCKER GUARD**
- 1 - PASSENGER SIDE TUBULAR  
ROCKER GUARD**
- 8 - 5/16" NYLOCK NUTS**
- 2 - LONG HOLE PLATES**
- 4 - SHORT HOLE PLATES**
- 4 - 8MM x 1.25 x 30 BOLTS  
(IF FACTORY GUARDS NOT  
INSTALLED - SPORT MODEL)**
- 4 - 5/16" WASHERS**
- 4 - 12MM x 1.75 x 100 BOLTS**
- 4 - 2-3/4" BLACK MACHINED  
WASHERS**
- 2 - 1-5/8" BLACK MACHINED  
WASHERS**

## **REQUIRED TOOLS:**


- 13MM SOCKET**
- 18MM SOCKET**
- 10MM SOCKET**
- 8MM SOCKET**

**DRILL BIT (OPTIONAL IF PINCH  
SEAM ISN'T ALIGNED FROM  
FACTORY)**

1. Remove factory rocker guards or steps if equipped. Remove factory body mount bolts.
2. Install Rock Hard 4x4 tubular rocker guards into factory pinch weld holes.

***NOTE: It's rare, but the stamping process when your tub is mated to your floor pan results in misaligned pinch seam bolt holes. A quick enlarging with a drill bit will help our bolts slip into these holes easier.***

3. Install LONG washer plates over rear and center sets of studs, install 2 small plates on front studs. Do not tighten.

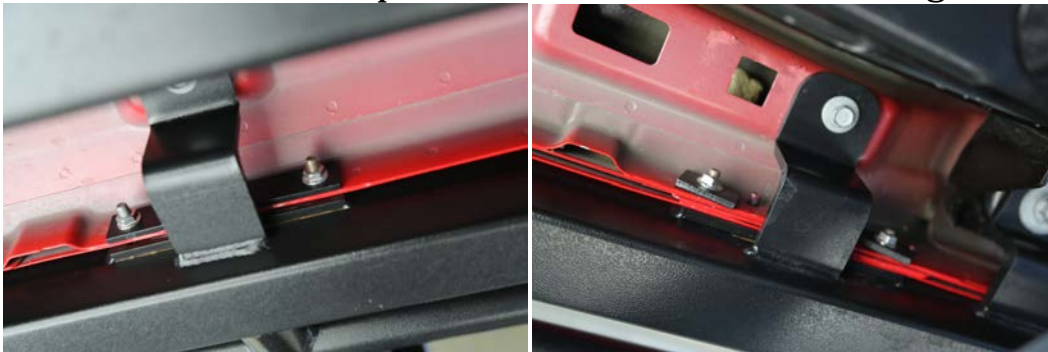

4. Install supplied body mount bolts with large black machined washers, do not tighten.
5. Install supplied 8MM bolts and washers black machined washers through welded floor pan braces, do not tighten.
6. Install nylock nuts over pinch seam studs, do not fully tighten.
7. Make any final adjustments to sliders, tighten all hardware.