




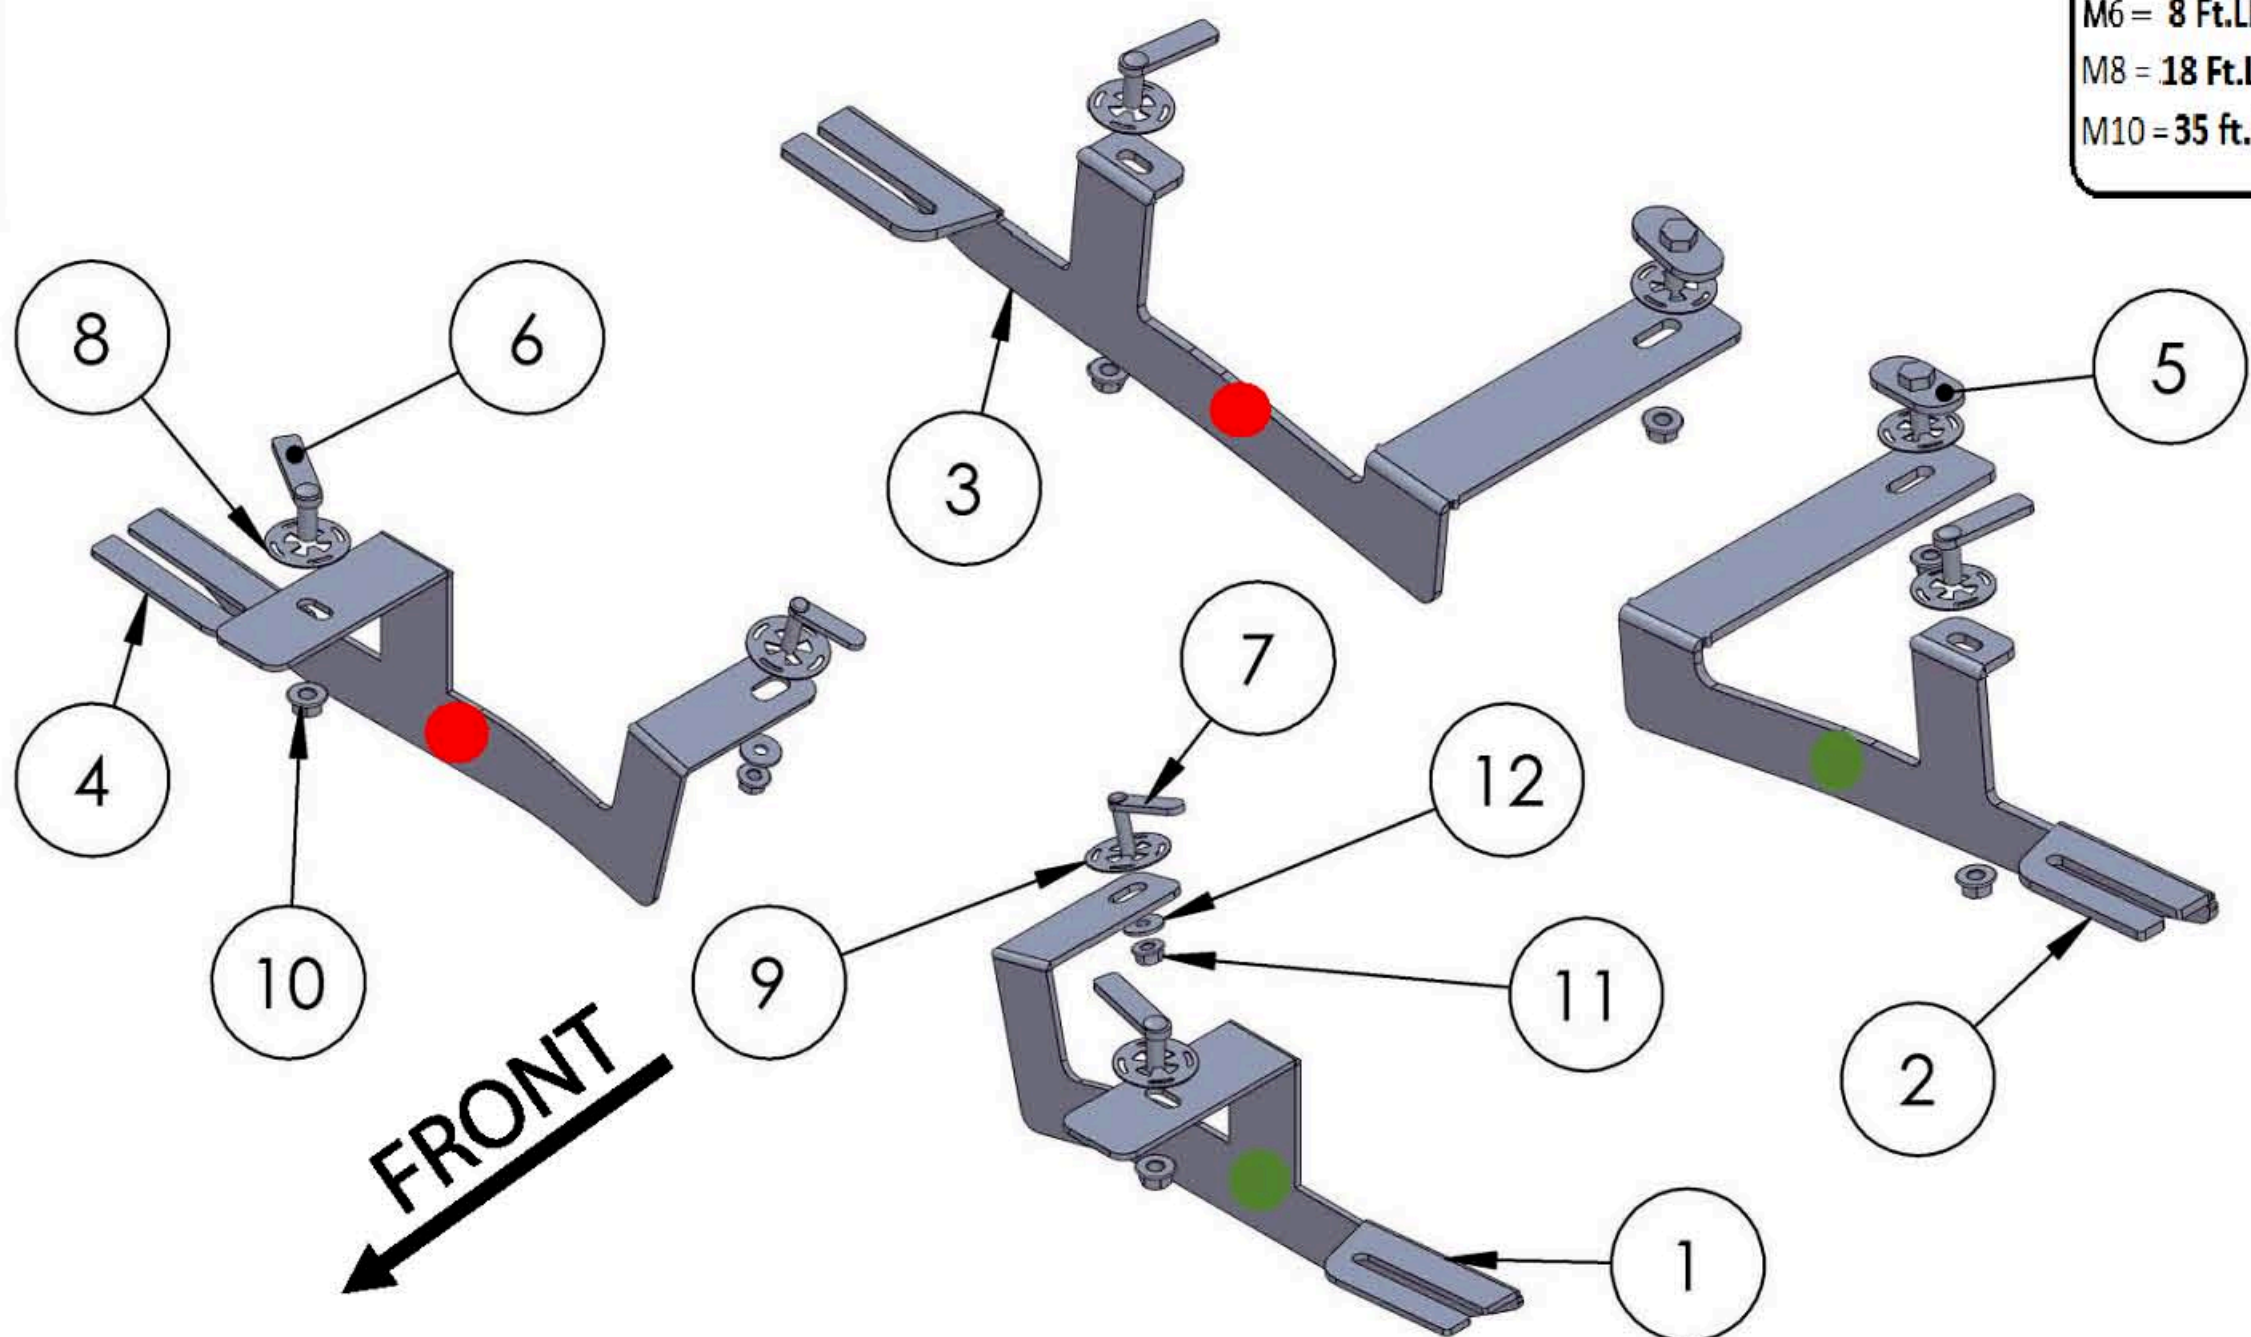
1426 Chevrolet Equinox 2010-2017

Installation Instructions




60 minutes

M6 = 8 Ft.Lb
M8 = 18 Ft.Lb
M10 = 35 Ft.Lb

ITEM	PART NAME	QTY.
1	1426850F0 Driver	1
2	1426850B0 Driver	1
3	1426850B0 Passenger	1
4	1426850F0 Passenger	1
5	HTC 240 - M10X30 ORTADAN DELİKLİ YAPRAK CIVATA (5X34X60)	2
6	HTC 262 - M10X30 (5X15X60)	4
7	HTC 226 - M8X30 (4X10X37)	2
8	HTC 269 - CLIPS (M10)	6
9	HTC 271 - CLIPS (M8)	2
10	DIN 6923 Flange Nut M10	6
11	DIN 6923 Flange Nut M8	2
12	DIN 9021 Washer M10	2



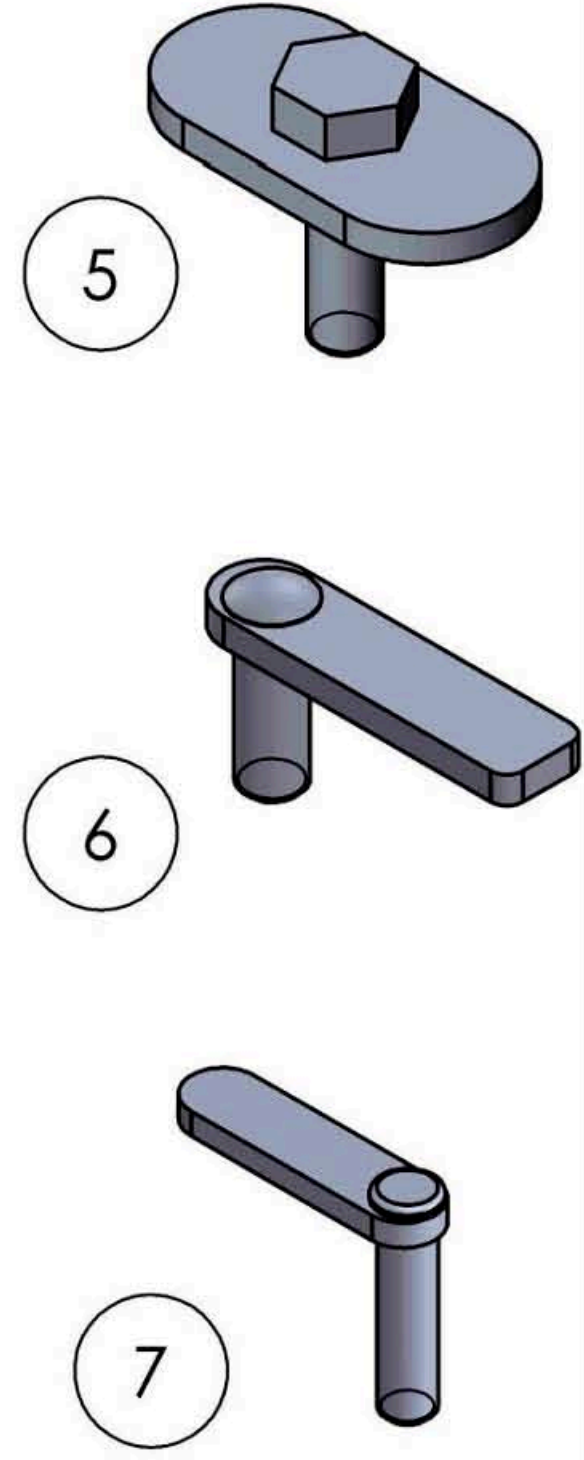

Front Bracket area




Rear Bracket area



- 1) Locate front mounting bracket area image #1
- 2) Insert HTC 262 with HTC 269 as shown on image #2 and image #3
- 3) Insert HTC 226 with HTC 271 as shown on image #4 and image #5
- 4) Attach front bracket as shown on image #6 do not tighten yet,
- 5) Locate rear mounting bracket area as shown on image #7
- 6) Insert HTC 240 with HTC 269 as shown on image #8
- 7) Locate second mounting point as shown on image #9
- 8) Insert HTC 226 with HTC 271 as shown on image #10
- 9) Attach rear bracket as shown on image #11 do not tighten yet.
- 10) Proceed to loosen 8mm bolts from the bottom of the steps
- 11) Install steps onto brackets and hand tight only
- 12) Proceed to tighten brackets M10 to 35 ft lbs and M8 to 18 ft lbs

- 13) Proceed to tighten M8 bolts on bottom of the steps to 18 ft lbs
- 14) Repeat procedure on the other side.

Warning: Use of powertools will void the warranty

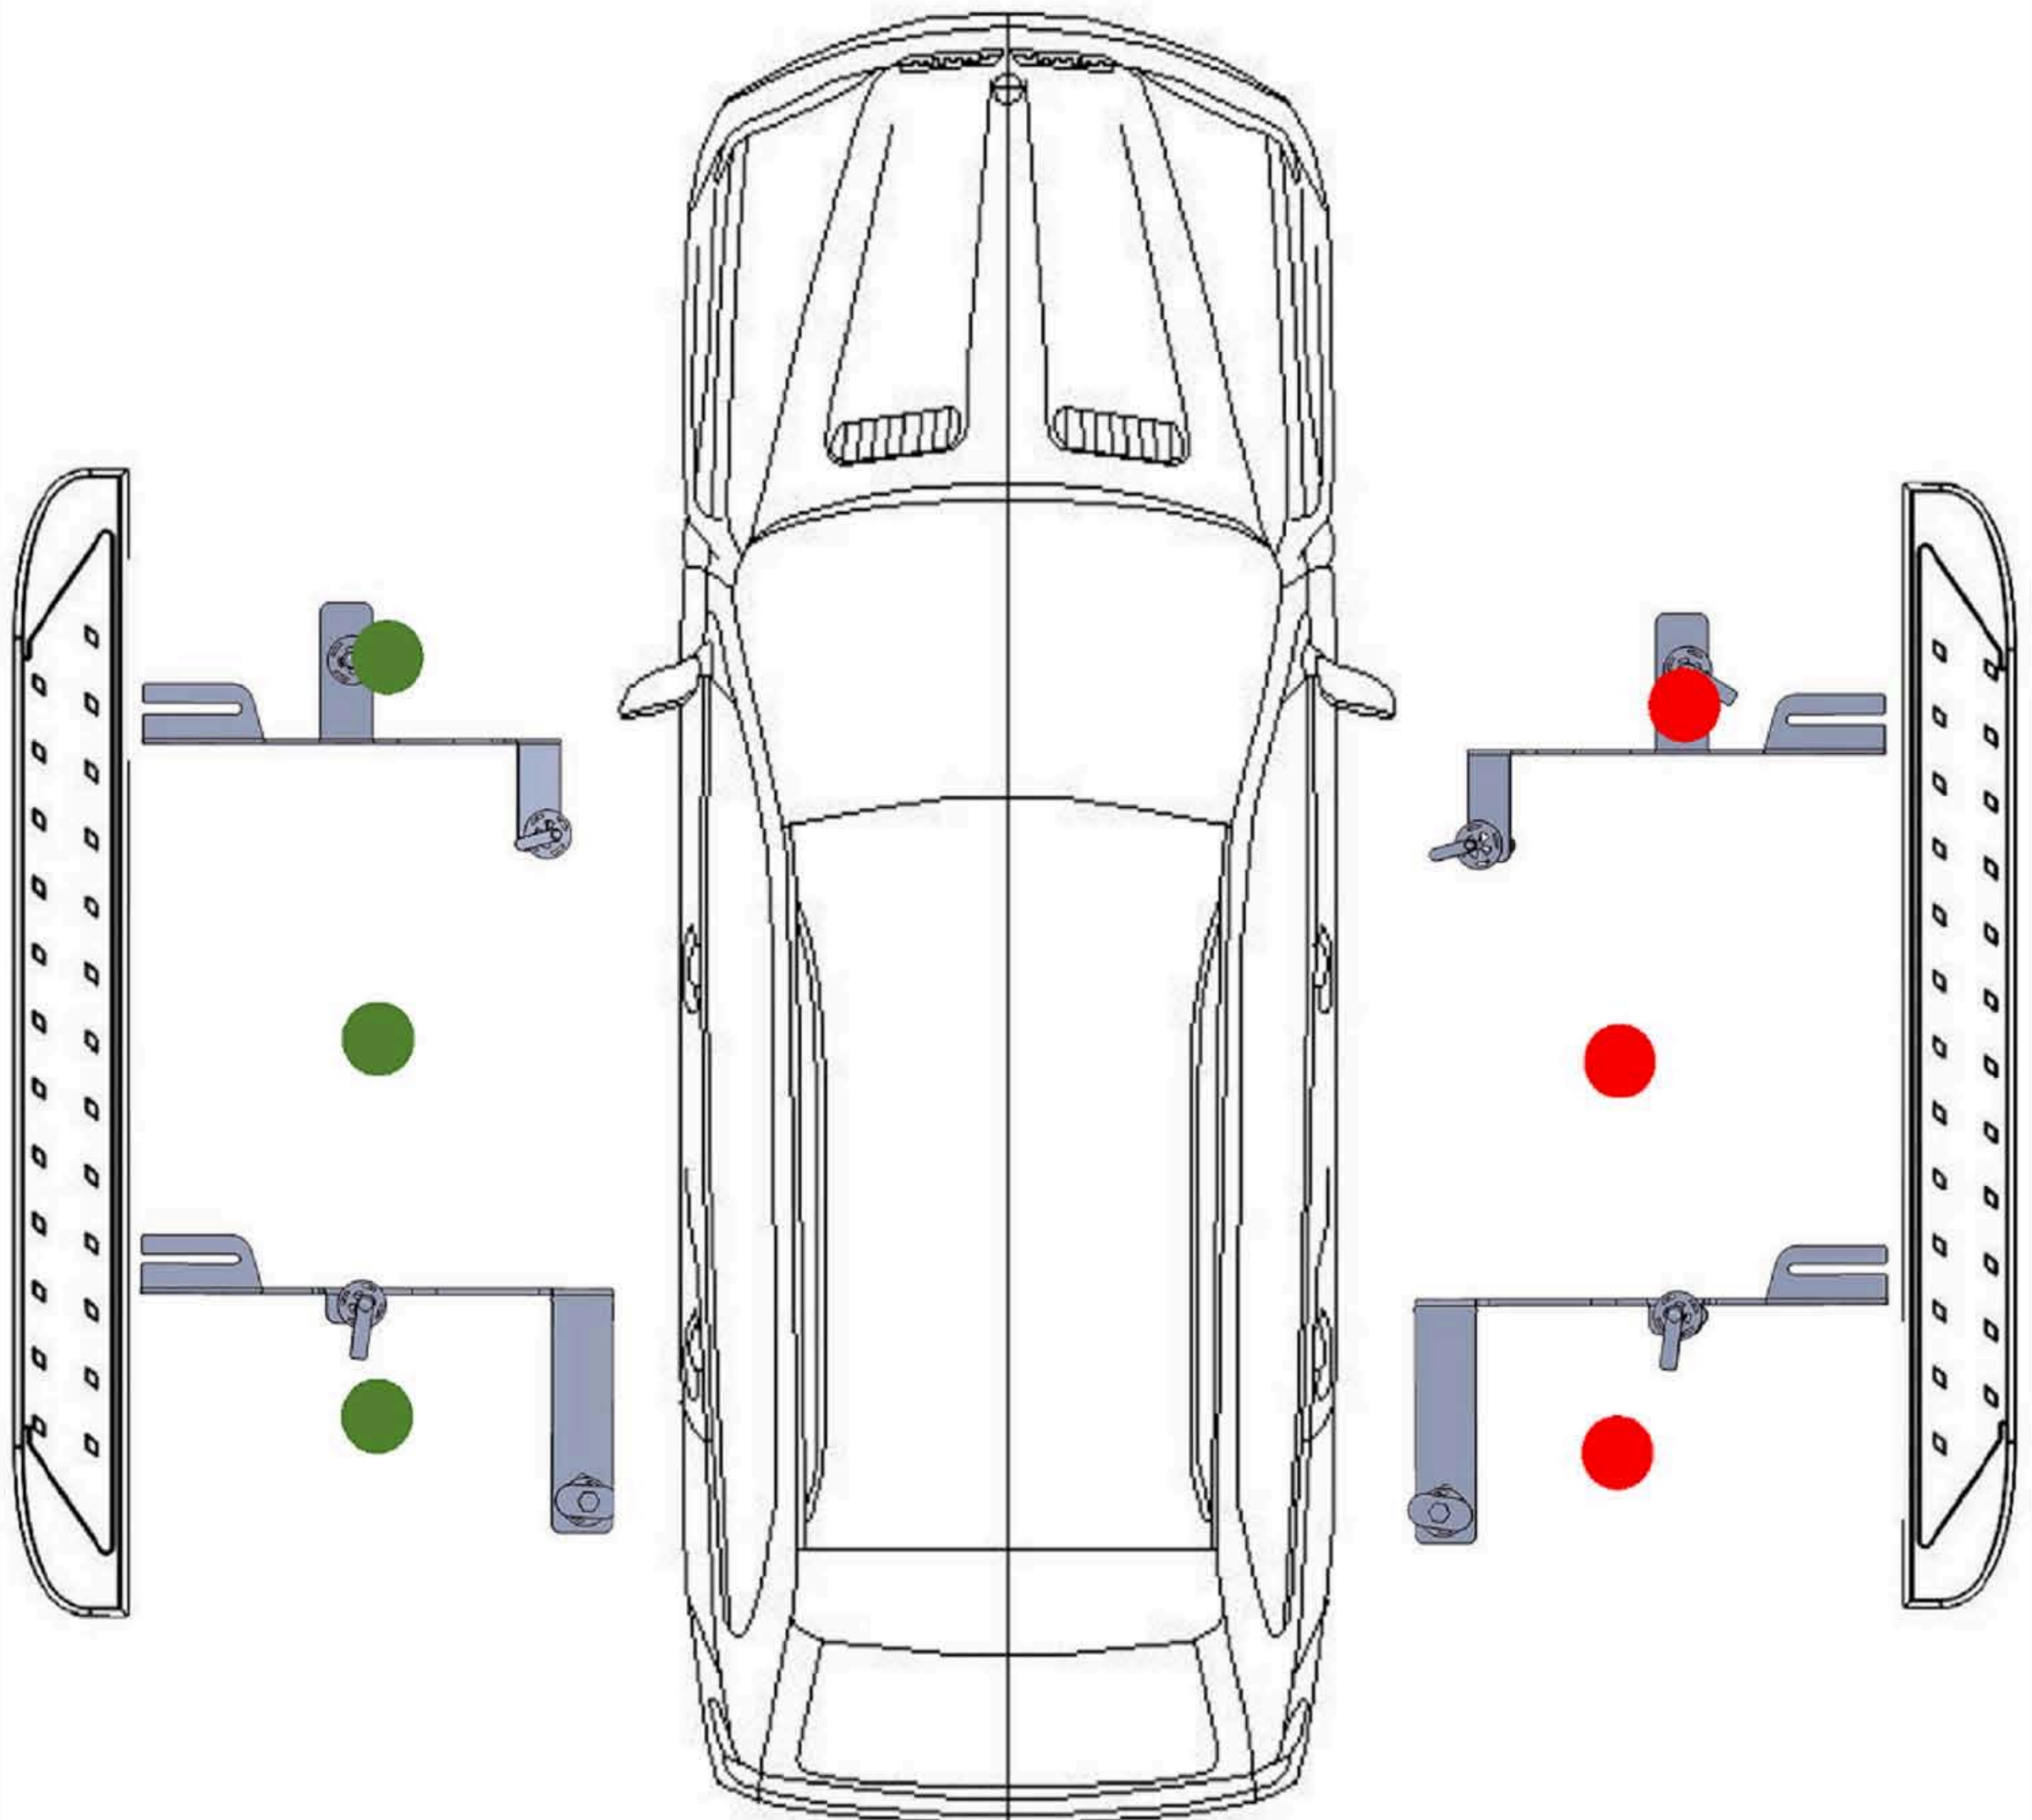

ATTENTION PLEASE! : DO NOT TIGHTEN ALL OF THE SCREWS UNTIL ALL OF THE PARTS ARE INSTALLED.

Keep your Romik accessories clean. To prevent corrosion and to maintain your high quality finish, wax or polish regularly with quality stainless polish. Use a non abrasive type automotive wax. Any use of abrasive soaps, polishes or waxes can be detrimental to the finish.

On our website you'll find a wide variety of high-quality Running Boards & Step Bars from Romik.