




2149 Ford F-150 2015 - Present
2149 Ford Super Duty 2017-Present

Installation Instructions



50 Min.

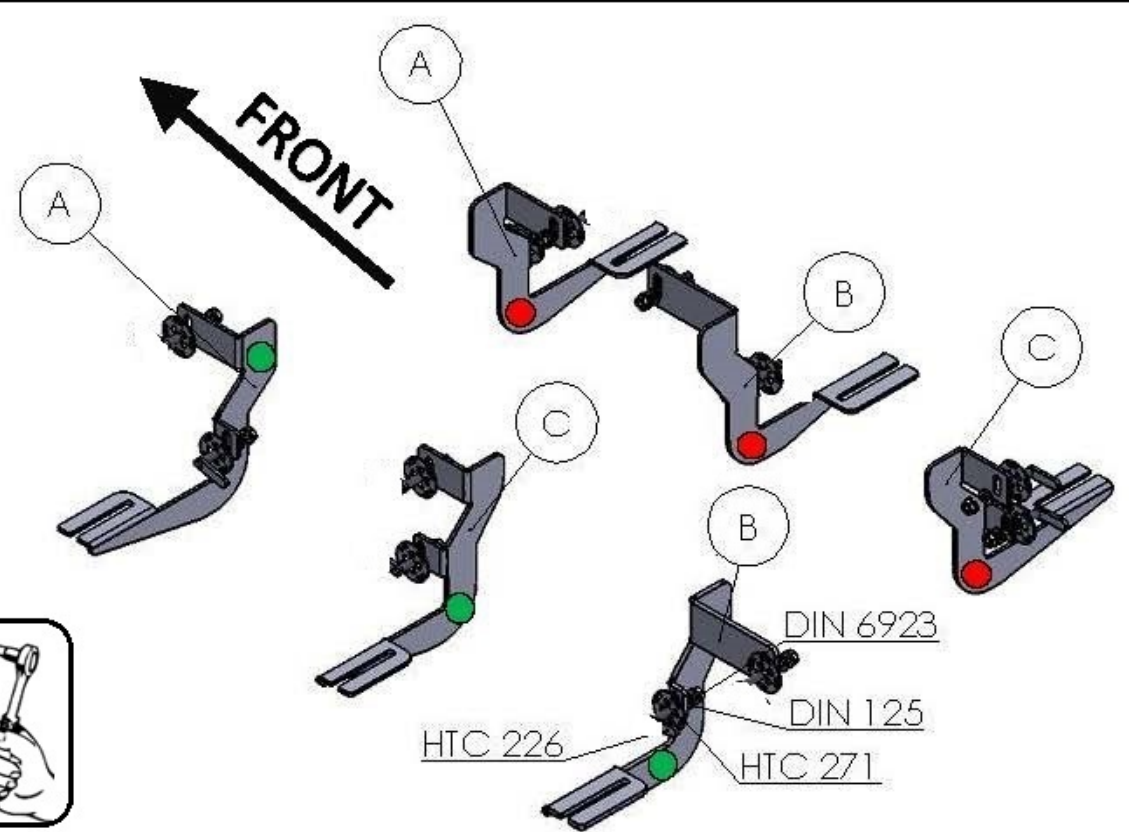


FRONT ←



M6 = 8 Ft.Lb
 M8 = 18 Ft.Lb
 M10 = 35 Ft.Lb


SUPER CREW BRACKET DIRECTION


HARDWARE

12		M8 DIN 6923	12		HTC 271 K_LIPS (M8)	12		M8 WASHER DIN 125
----	---	-------------	----	---	---------------------	----	---	-------------------

WARNING: Use of powertools will void warranty

BRACKETS

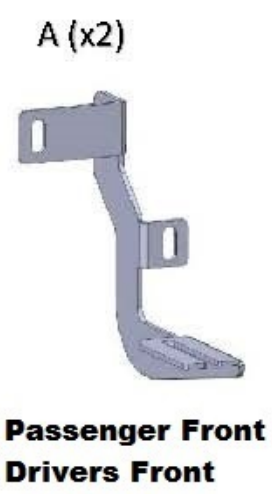

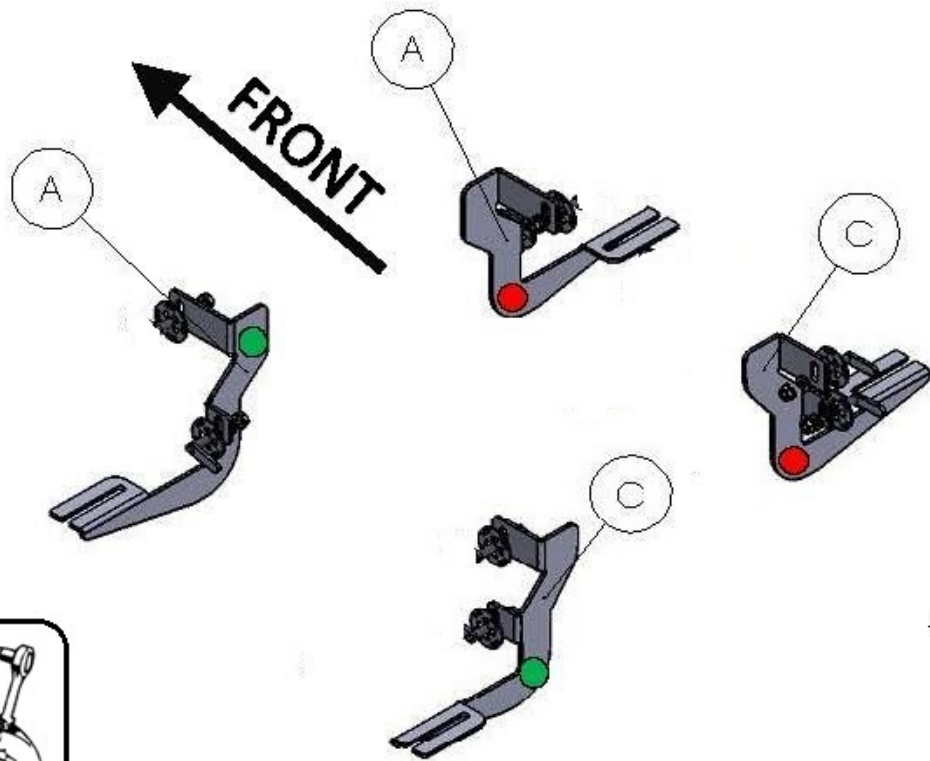

M6 = 8 Ft.Lb
 M8 = 18 Ft.Lb
 M10 = 35 ft.Lb

SUPER CAB BRACKET DIRECTION


HARDWARE

12		M8 DIN 6923	12		HTC 271 K_LIPS (M8)	12		M8 WASHER DIN 125
----	--	-------------	----	--	---------------------	----	--	-------------------

WARNING: Use of powertools will void warranty

BRACKETS

A (x2)

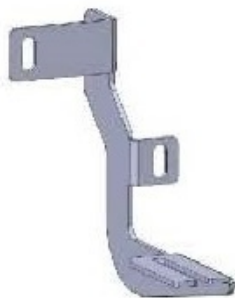


**Passenger Front
Drivers Front**


C (x2)



**Passenger Rear
Drivers Rear**

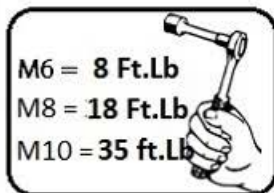

2149 Ford F-150 2015+ 2149 Ford Super Duty 2017+

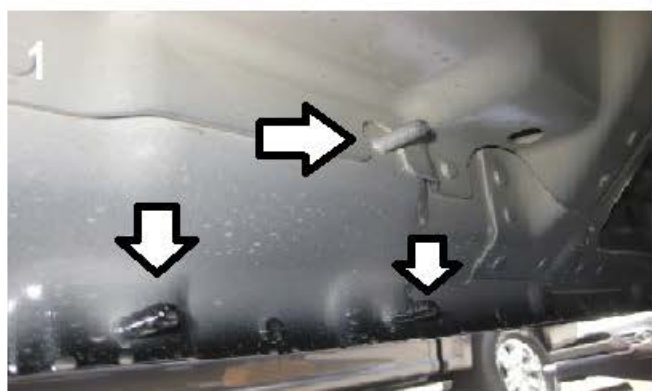

- 1) Locate mounting points for your particular vehicle. If necessary clean threads on factory studs.
- 2) Install HTC 271 plastic round washers on factory studs. Please use the bracket direction guide to determine which combination you need to perform Image #2 and Image #3
- 3) Install mounting brackets with supplied M8 hardware do not tighten
- 4) Perform this procedure six (6) times in total making sure to follow the bracket directions listed on page #2 or page #3
- 5) Loosen M8 hardware on back of steps
- 6) Install steps on brackets hand tight only
- 7) Proceed to tighten bracket hardware M8 to 18 ft lbs
- 8) Proceed to tighten step hardware M8 to 18 ft lbs

On our website you'll find a wide variety of high-quality [Running Boards & Step Bars](#) from [Romik](#).

WARNING: Use of power tools will void warranty