



ROMIK

2011 - DODGE JOURNEY 2008 PRESENT

Installation Instructions



90 Minutes

NOTE : Before starting this installation make sure all the hardware is included and this part number matches your vehicle


6		DIN 6923;M10	2		HTC 262 M10x30	6		HTC 269 M10
6		DIN 934 ; M6	4		HTC 230 ; M10x30	12		DIN 125 M6
6		DIN 933 ; M6x25						



M6 = 8 Ft.Lb


M8 = 18 Ft.Lb

M10 = 35 ft.Lb


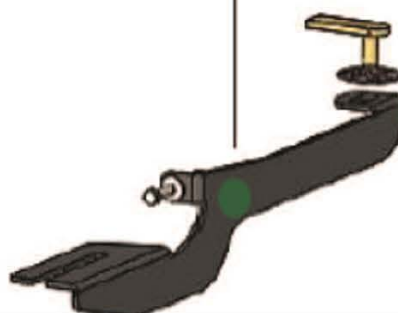


ATTENTION PLEASE ! DO NOT TIGHTEN ALL OF THE SCREWS UNTIL ALL OF THE PARTS ARE INSTALLED


Keep your accessories clean. To prevent corrosion and to maintain your high quality finish, wax or polish regularly with quality stainless polish. Use a non abrasive type automotive wax. Any use of abrasive soaps, polishes or waxes can be detrimental to the finish

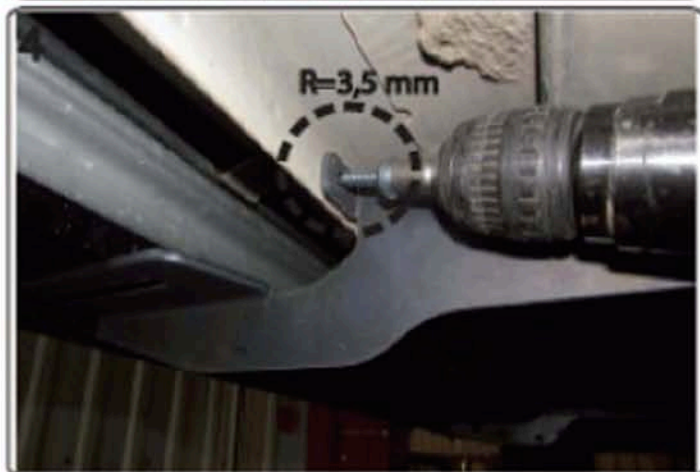


- 1) Locate front mounting area #1
- 2) Insert HTC 230 as shown on #2
- 3) Install bracket as shown on #6
- 4) Mark hole for drilling #4 and proceed to drill 3.5 mm or #28 US
- 5) Install bracket but do not tighten yet. Move to middle bracket.

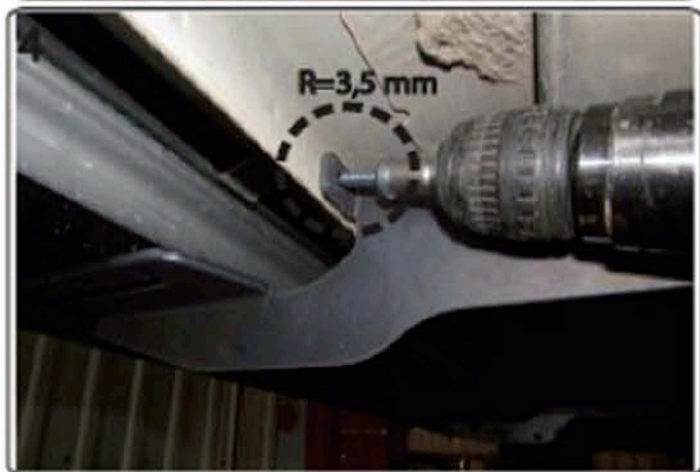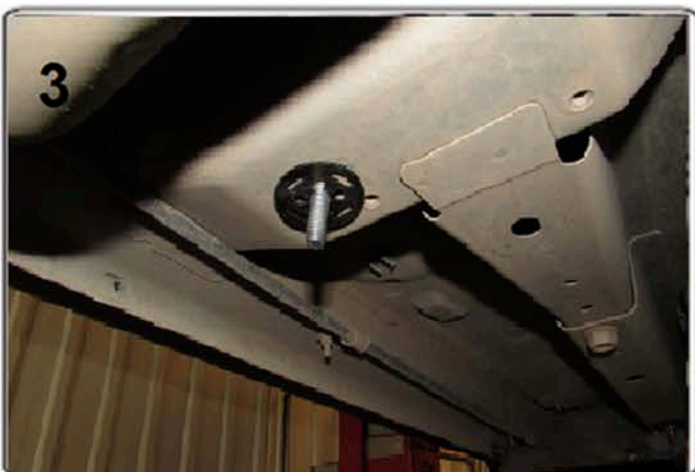

- 1) Locate middle mounting area # 1
- 2) Insert HTC 262 as shown on # 2
- 3) Install bracket as shown on #6
- 4) Mark hole for drilling # 4 and proceed to drill 3.5 mm or #28 US
- 5) Install bracket but do not tighten yet. Move to rear bracket

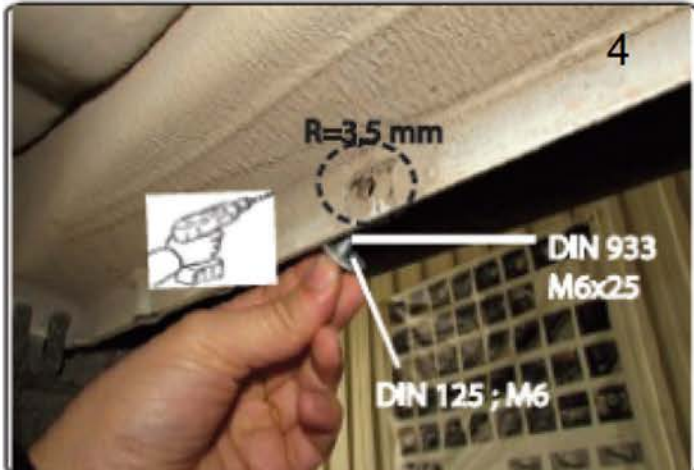

- 1) Locate rear mounting area # 1
- 2) Insert HTC 230 as shown on # 2
- 3) Install bracket as shown on # 3
- 4) Mark hole for drilling # 4 and proceed to drill 3.5 mm or #28 US
- 5) Install bracket but do not tighten yet. Proceed to install running boards and align, once aligned you may go back and tighten hardware M10 to 35 ft lbs and M8 to 18 ft lbs M6 to 8 ft lbs. Do not use power tools as this may damage the running boards and void your warranty.

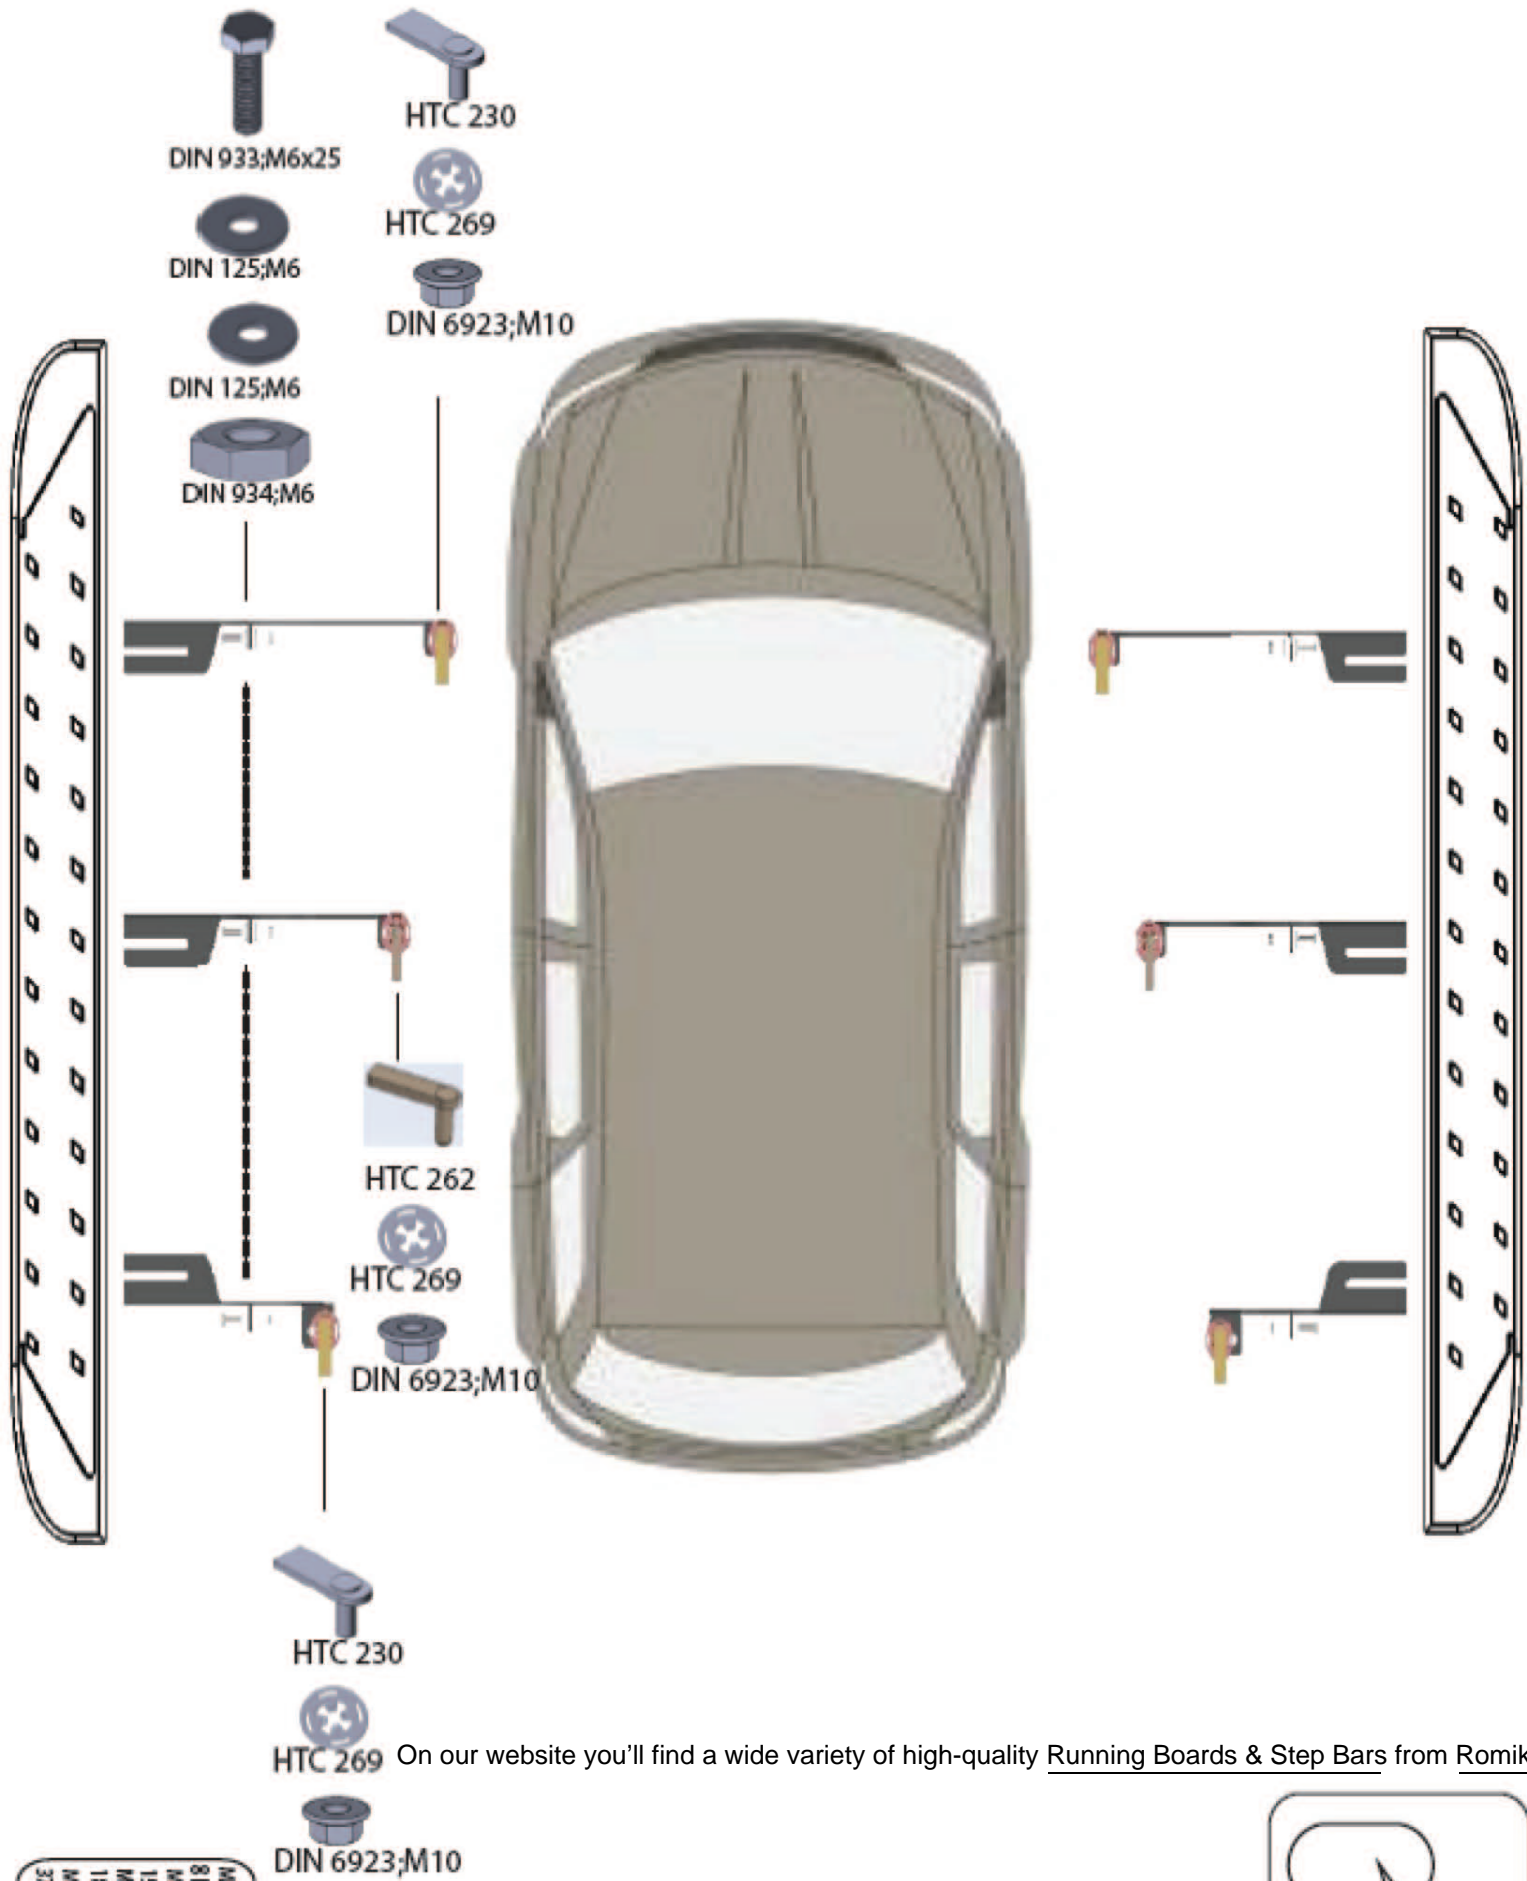

MS: 8 lb-ft
 M6: 15 lb-ft
 M8: 18.5 lb-ft
 M10: 37 lb-ft

HTC 269 On our website you'll find a wide variety of high-quality Running Boards & Step Bars from Romik.

