




Installation Instructions
1012- Audi Q5 2009-Present



50 Min.

Note: This installation requires trimming the plastic panels.

NOTE : Before starting this installation make sure all the hardware is included and this part number matches your vehicle

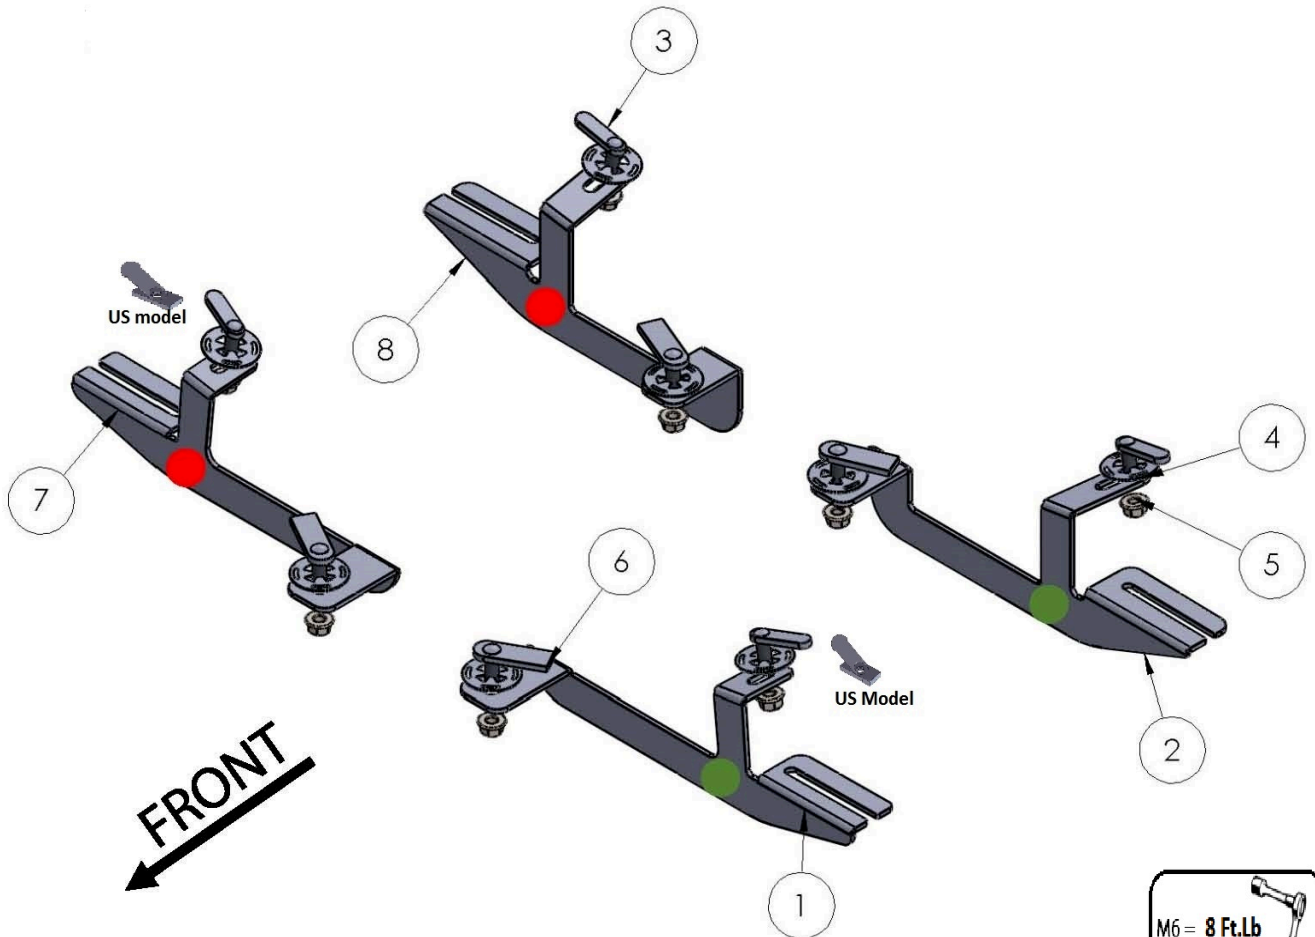


M6 = 8 Ft.Lb
 M8 = 18 Ft.Lb
 M10 = 35 ft.Lb

ITEM	PART NUMBER	QTY
1	1012850F0 DRIVER	1
2	1012850B0 DRIVER	1
3	HTC 243 - M10x25(5x13x50)	4
4	HTC 269 KLIPS (M10)	8
5	DIN 6923 FLANGE NUT M10	8
6	HTC 230 - M10x25(5x20x60)	4
7	1012850F0 PASSENGER	1
8	1012850B0 PASSENGER	1



US Model QT 3

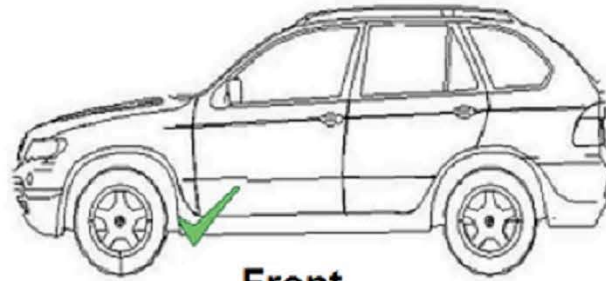

Front

ATTENTION: This vehicle requires drilling and cutting plastic panels



- 1) Remove plastic panels under the vehicle
- 2) Locate front mounting points as shown on image #1
- 3) Install HTC 230 with HTC 269 as shown on image #2
- 4) Locate outer mounting area
- 5) Remove factory rubber plug as shown on image #3
- 6) Using a 1/2 inch drill bit enlarge the factory hole
- 7) Install M8 inserts as shown in image #3
- 8) Install front bracket as shown on image #4 do not tighten anything yet

Proceed to rear bracket area.




Rear



- 1) Locate mounting point Image #1 and #2
- 2) Install HTC 230 with HTC 269 as shown on image #3
- 3) Locate outer mounting point as shown on image #4 (please note plastic must be trimmed to install brackets) and insert HTC 243 with HTC 269 as shown
- 4) Proceed to install rear bracket, do not tighten.
- 5) Proceed to loosen M8 hardware on bottom of steps
- 6) Install steps onto brackets, align and hand tight only
- 7) Proceed to torque M10 to 35 ft lbs and M8 to 18 ft lbs on all brackets
- 8) Proceed to torque step M8 to 18 ft lbs

NOTE: The use of power tools may damage the steps and will void your warranty.

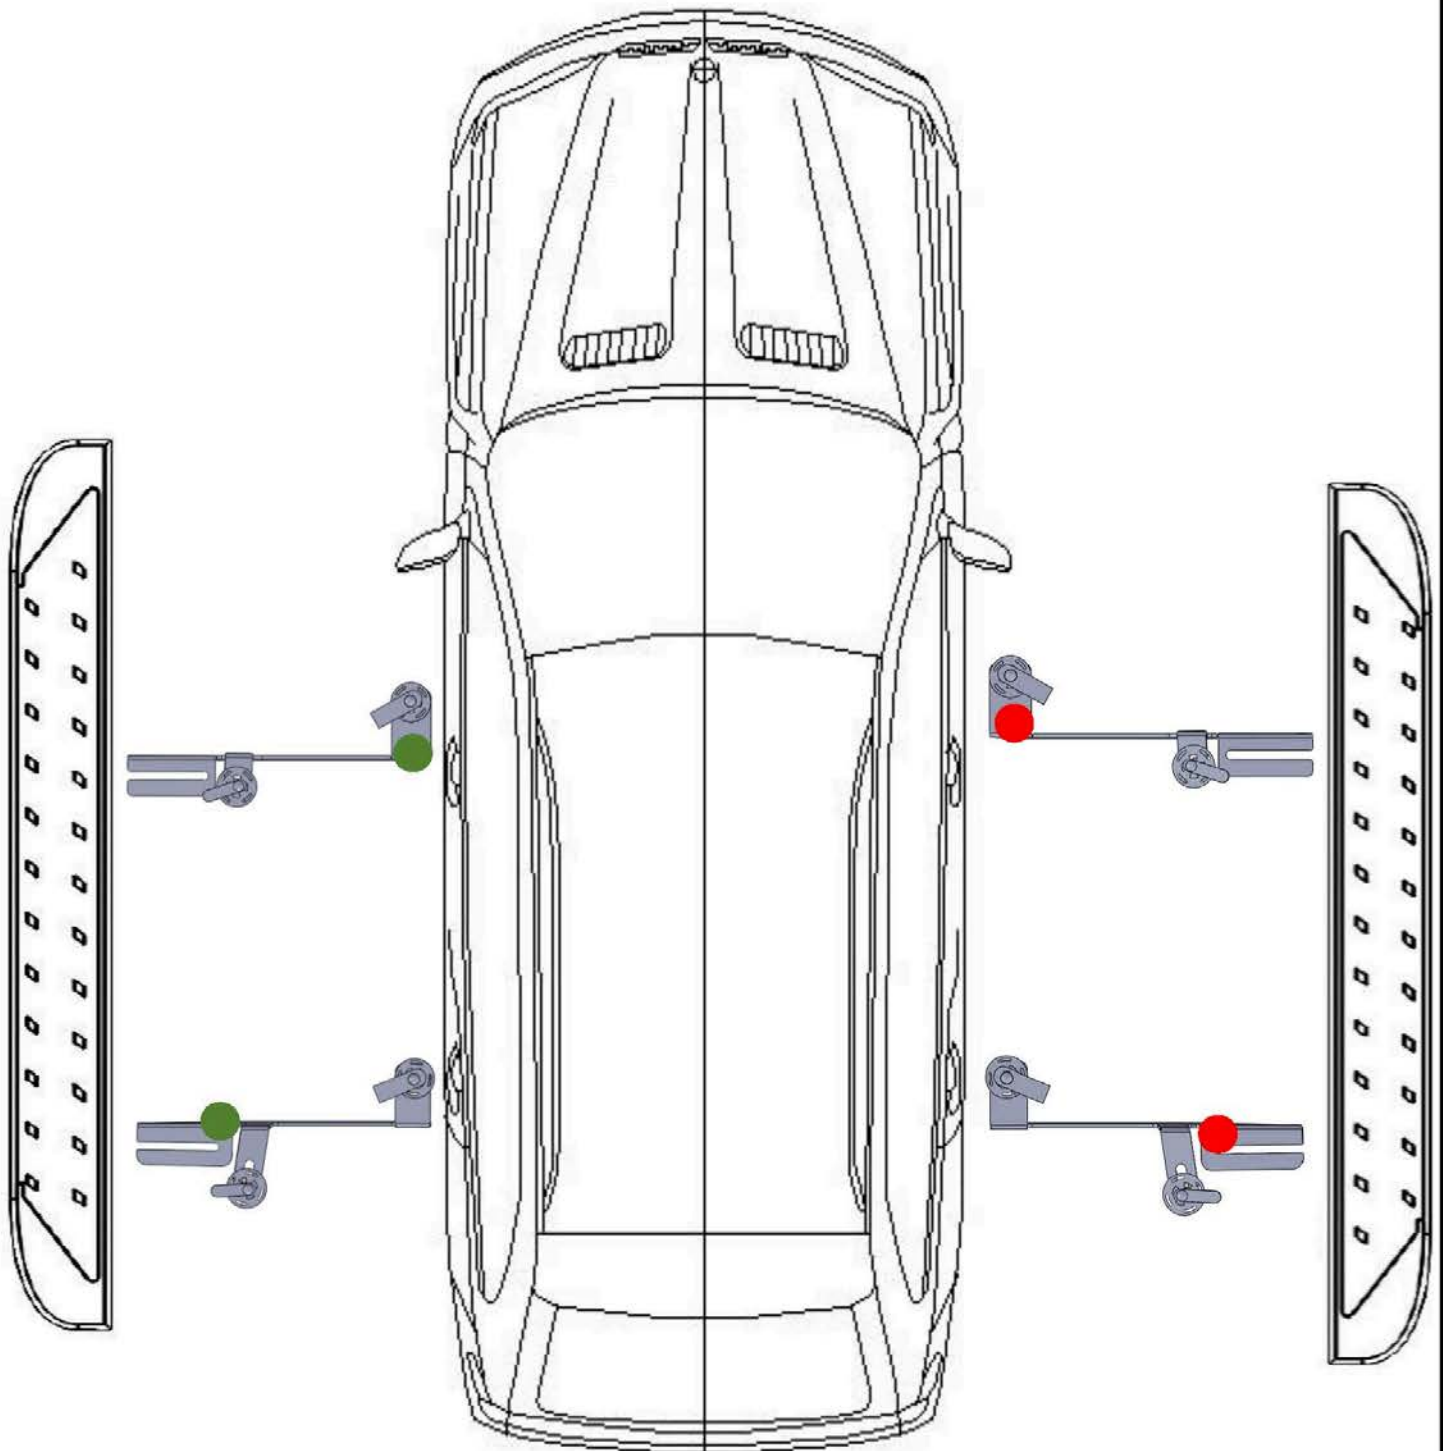

ATTENTION PLEASE! : DO NOT TIGHTEN ALL OF THE SCREWS UNTIL ALL OF THE PARTS ARE INSTALLED.

Keep your Romik accesories clean. To prevent corrsion and to maintain your high quality finish, wax or polish regularly with quality stainless polish. Use a non abrasive type automotive wax. Any use of abrasive soaps, polishes or waxes can be detrimental to the finish.

On our website you'll find a wide variety of high-quality Running Boards & Step Bars from Romik.