




3614 – SUBARU FORESTER 2014 PRESENT

Installation Instructions






120 Minutes

M6 = 8 Ft.Lb
M8 = 18 Ft.Lb
M10 = 35 Ft.Lb

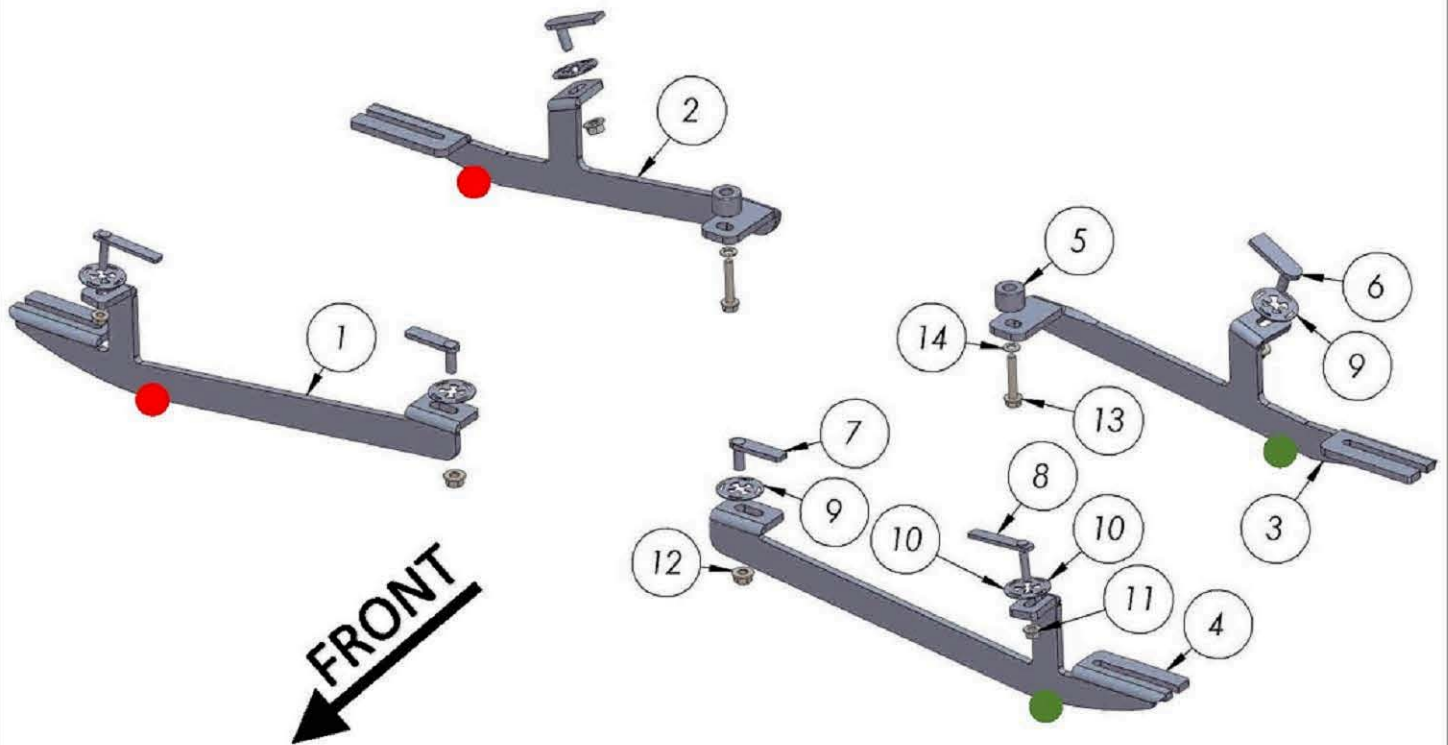

ITEM/NO	PART NAME	QTY
1	3614100850F0 PASSENGER	1
2	3614100850B0 PASSENGER	1
3	3614100850B0 DRIVER	1
4	3614100850F0 DRIVER	1
5	SPECIAL PIPE - 10 x 19	2
6	HTC 230 - M10x25(5x20x60)	2
7	HTC 262 - M10X30 (5X15X60)	2
8	HTC 303 - M8 x 40 (4 X 12,3 X 69	2
9	HTC 269 - KLIPS (M10)	4
10	HTC 271 - CLIPS (M8)	2
11	DIN 6923 FLANGE NUT - M8	2
12	DIN 6923 FLANGE NUT - M10	4
13	DIN 6921 FLANGE BOLT - M8 x 45	2
14	DIN 125 WASHER - M8	2



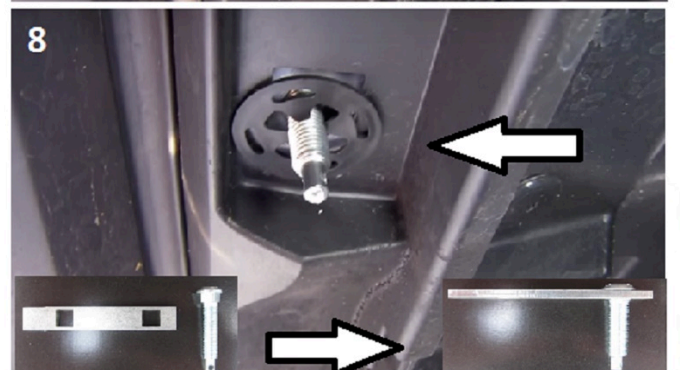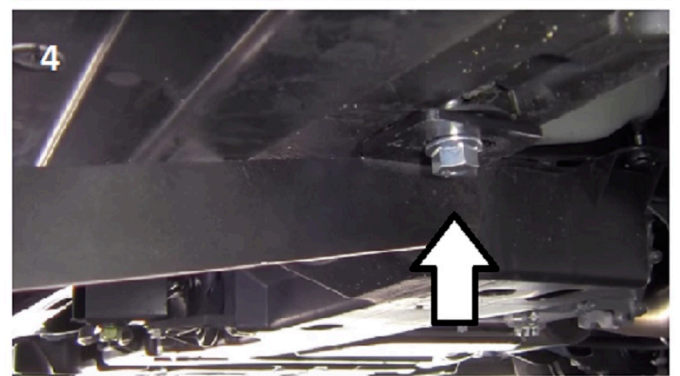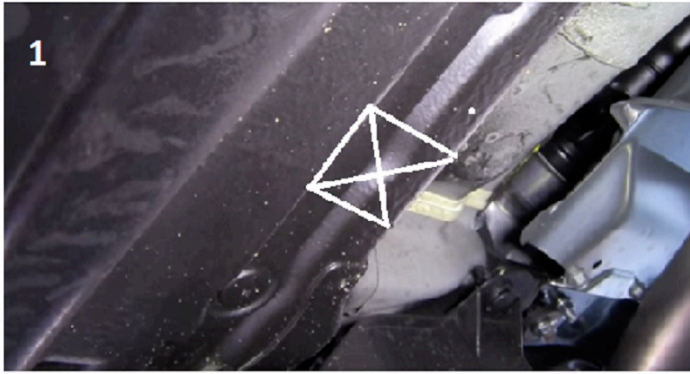

- 1) Locate front bracket mounting point image #1
- 2) Cut plastic panel as shown on image #2
- 3) Install HTC 262 with HTC 269 as shown image #3
- 4) Locate outer support mounting area #5
- 5) Remove plastic plug image #6
- 6) Enlarge factory hole with 13mm drill (1/2 inch) make sure to go thru 2 layers of metal image #7

- 7) Install HTC 303 with HTC 271 as shown on image #8 please pay attention on how to assemble HTC 303. Make sure to install on second layer of metal inside the enlarged hole pull down on threaded bar making sure it is seated correctly inside the hole
- 8) Install front bracket secure hand tight only




- 1) Locate rear bracket mounting area image #1
- 2) Remove factory bolt image #2
- 3) Remove factory rubber plug image #4
- 4) Install HTC 230 with HTC 269 image #5
- 5) Install bracket attach to HTC 230 image #6
leave loose to perform next step
- 6) Attach bracket as shown on image #3
make sure aluminum spacer is positioned
under the bracket inside plastic cavity
leave bracket loose
- 7) Loosen M8 hardware on back of the steps
- 8) Install steps on brackets hand tight only

- 9) Proceed to tighten bracket hardware M10 to
35 ft lbs and M8 to 18 ft lbs
- 10) Proceed to tighten step hardware to 18 ft lbs
do not overtighten as it may damage steps
- 11) Repeat procedure on opposite side.

WARNING: Use of power tools will void the warranty.

WARNING: Use of powertools will void the warranty

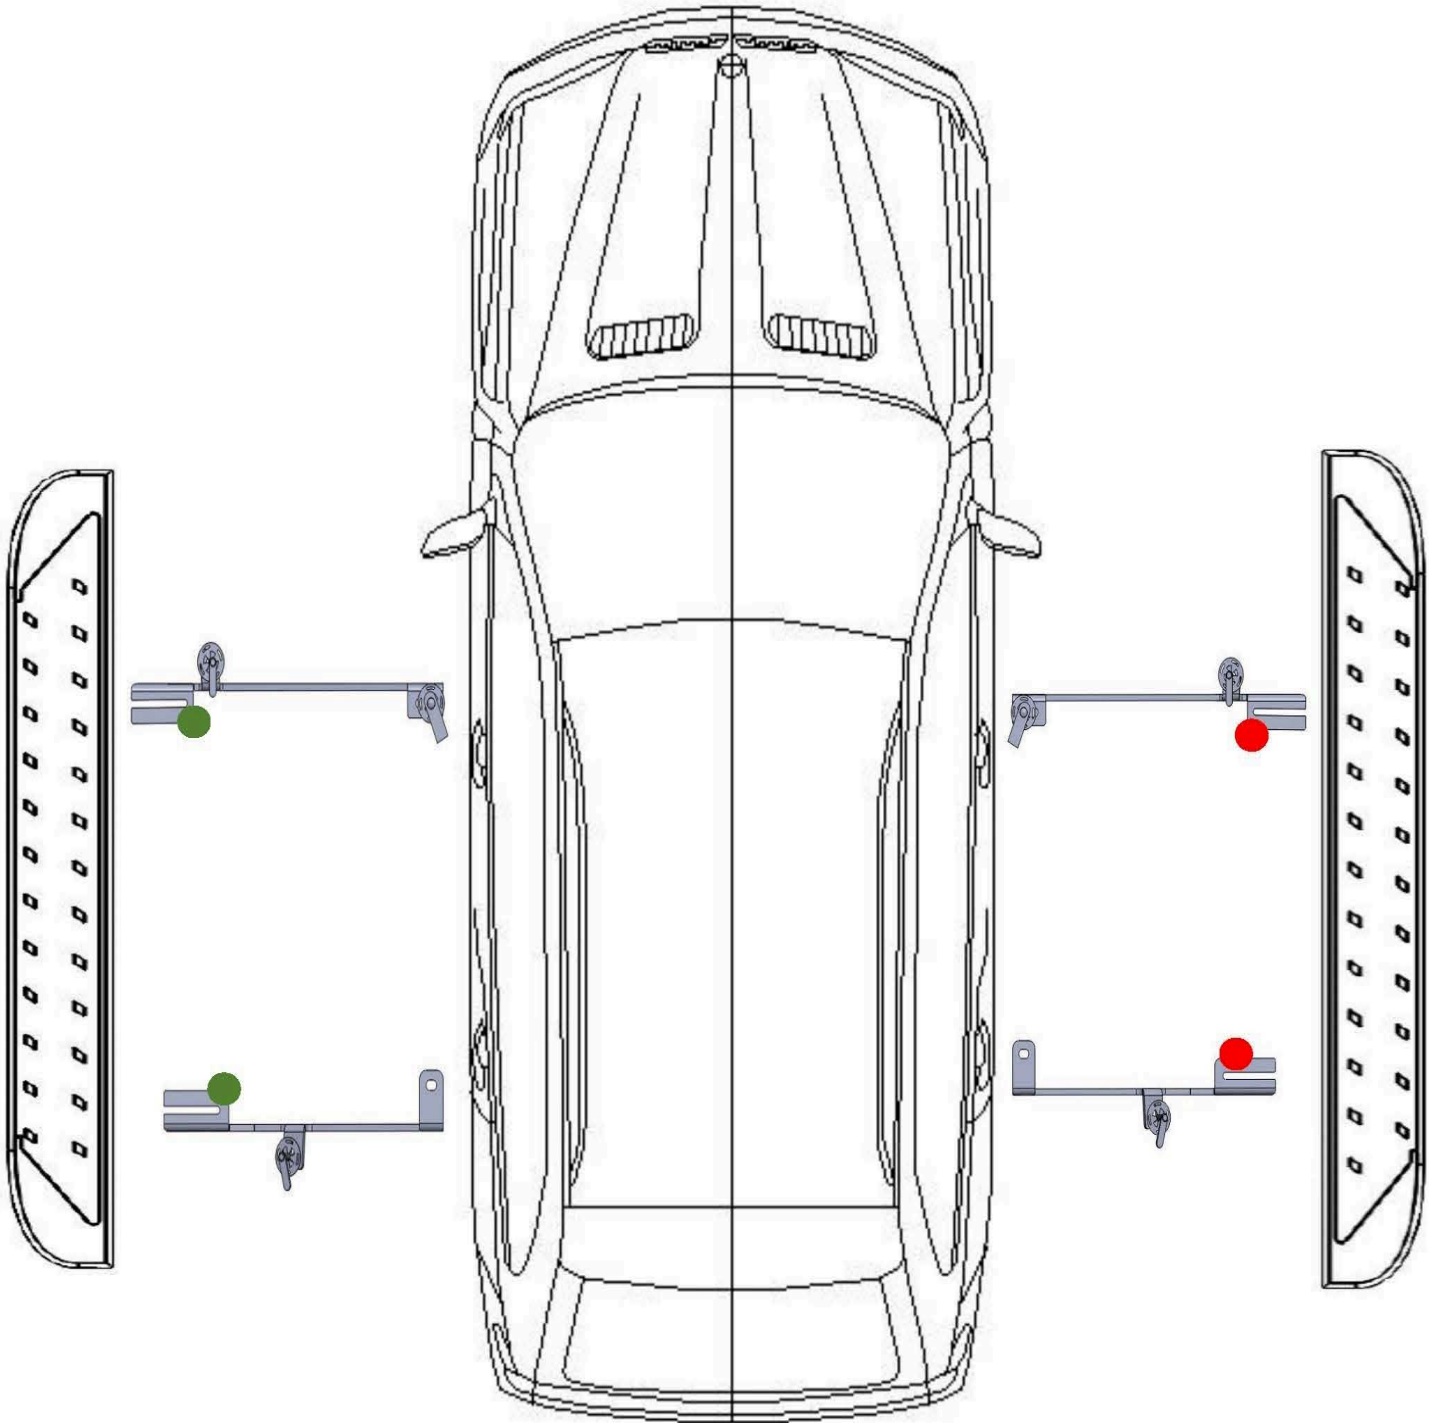

ATTENTION PLEASE! : DO NOT TIGHTEN ALL OF THE SCREWS UNTIL ALL OF THE PARTS ARE INSTALLED.

Keep your Romik accessories clean. To prevent corrosion and to maintain your high quality finish, wax or polish regularly with quality stainless polish. Use a non abrasive type automotive wax. Any use of abrasive soaps, polishes or waxes can be detrimental to the finish.

On our website you'll find a wide variety of high-quality Running Boards & Step Bars from Romik.