

5810 Cadillac SRX 2010-2016



REV-3

850-AB-NS

5810 Cadillac SRX 10-16



M10X25 mm
FLANGE HEAD BOLT

M8 HEAD
FLANGE NUT

HTC 271 KLIPS
(M8)

2 HTC 269 KLIPS (M10)

4 M10 HEAD FLANGE NUT

M8 WASHERS


6 HTC 227
(5x12x38)
2 HTC 243
(5x13x50)



M8 18 Ft.Lb M10 35 Ft.Lb

WARNING: Use of powertools will void warranty.






ATTENTION PLEASE!: DO NOT TIGHTEN ALL OF THE SCREWS UNTIL ALL OF THE PARTS ARE INSTALLED.

Keep your Romik accesories clean. To prevent corrsion and to mantain your high quality finish, wax or polish regulary with quality stainless polish. Use a non abrasive type automotive wax. Any use of abrasive soaps, polishes or waxes can be detrimental to the finish.



Warning: Use of powertools will void warranty



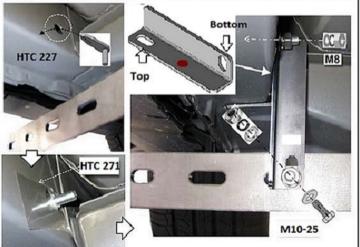



- 1) Locate front mounting points #1 insert HTC 243 with plastic washer HTC 269
- 2) Proceed to install front main bracket.
- 3) Locate front extra support mounting points #2 insert HTC 227 with plastic washer HTC 271
- 4) Proceed to install extra support as shown on image.
- 5) Connect extra support and main bracket with supplied M10-25 bolt

NOTE: Do not tighten anything until boards are installed and aligned












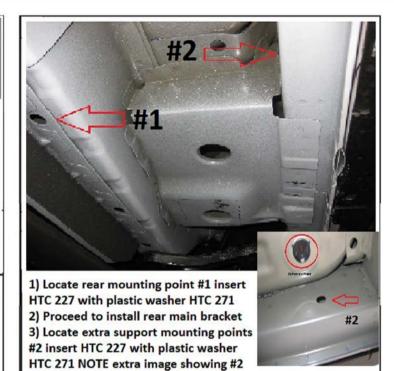


and circled reference point.
4) Proceed to install extra support as shown on image

5) Connect extra support and main bracket with supplied M10-25 bolt.

NOTE: Do not tighten anything until boards are installed and aligned.

5810 Cadillac SRX 10-16



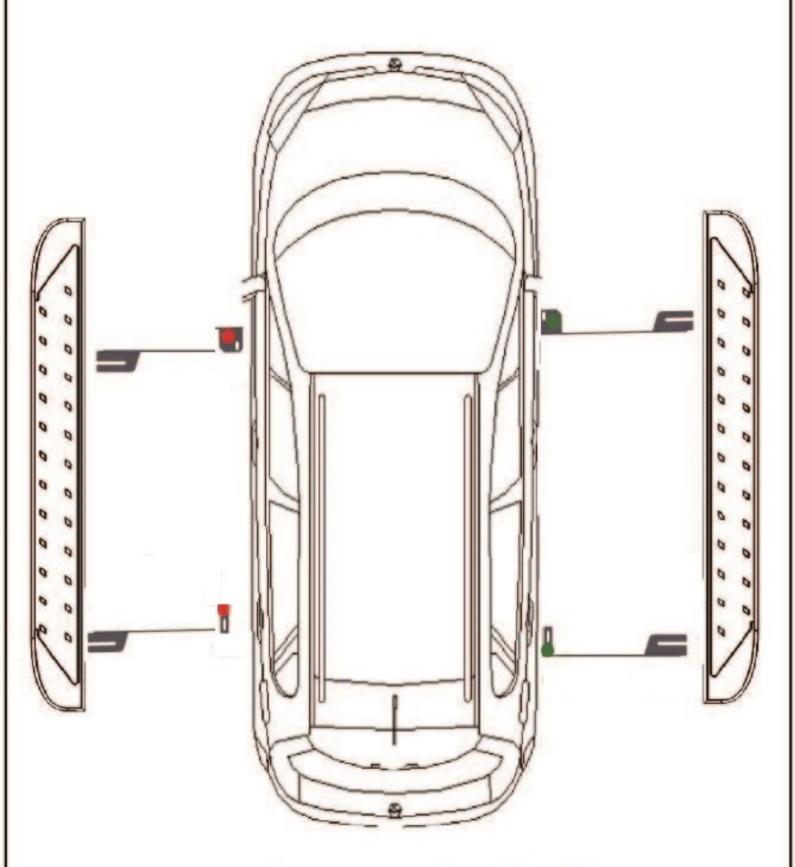

WARNING: Use of powertools will void warranty

On our website you'll find a wide variety of high-quality Running Boards & Step Bars from Romik.