

## 2817 - LAND ROVER EVOQUE 2012-PRESENT

Installation Instructions





NOTE: Before starting this installation makes sure that all hardware matches these instructions.

	M6 = 8Ft.Lb M8 = 18 Ft.Lb M10 = 35 Ft.Lb
6 6 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7	
$\mathbf{A} \mathbf{A} \mathbf{A} \mathbf{A} \mathbf{A} \mathbf{A} \mathbf{A} \mathbf{A} $	


ITEM	PARTNUMBER	QTY
1	2817850F0 DRIVER	1
2	HTC 240 - M10X30 (5X34X60)	4
3	DIN 6923 FLANGE NUT - M10	4
4	HTC 269 - CLIPS (M10)	4
5	DIN 125 WASHER - M8	4
6	2817850F0 PASSENGER	1
7	HTC 294 - M8X25 (Ø4X80)	2
8	HTC 271 CLIPS M8	4
9	2817850B0 DRIVER	1
10	HTC 226 - M8X30 (4X10X37)	2
11	2817850B0 PASSENGER	1
12	DIN 6923 FLANGE NUT - M8	4





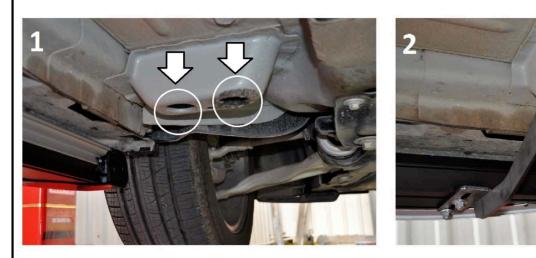


- 1) Locate front mounting area as shown on image #1.
- 2) Install two pieces HTC 240 with HTC 269.
- 3) Install front bracket as shown on image #2.
- 4) Tighten brackets hardware M10 to 35 ft lbs. WARNING: Do not use powertools.
- 5) Repeat procedure on opposite side.
- 6) Do not tighten anything yet and proceed to the rear bracket area.

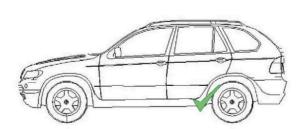





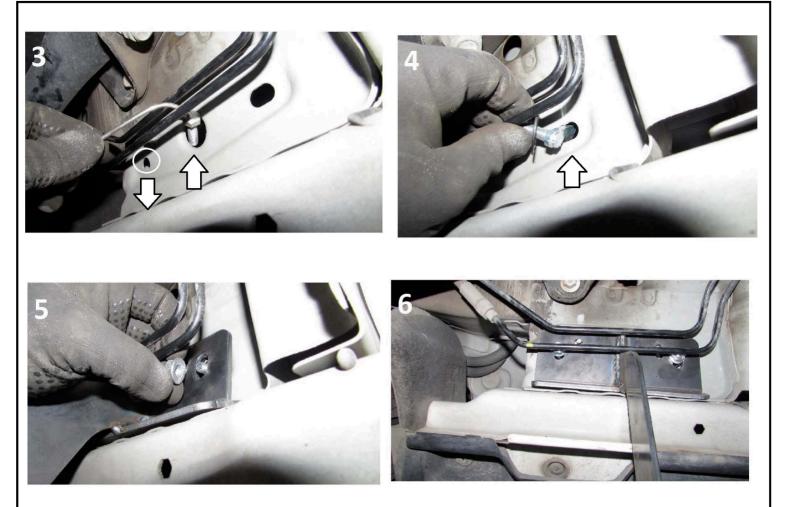

- 1) Locate rear mounting area.
- 2) Proceed to take out vehicle's plastic part and cut it as shown on image #1 and #2.
- 3) Install HTC 294 with HTC 271 for rear hole as shown on image #3 and install HTC 226 with HTC 271 for front hole as shown on image #4.
- 4) Install rear bracket with M8 nuts as shown on image #5.
- 5) Tighten brackets hardware M8 to 18 ft lbs. WARNING: Do not use powertools.
- 6) Repeat procedure on opposite side.
- 7) Do not tighten anything yet and proceed to install steps.

Note: Use of powertools will damage products and void your warranty.

## 2817 - LAND ROVER EVOQUE 2012-PRESENT

Note: Use of powertools will damage products and void your warranty.

