



## Installation Instructions for Rostra's Quick-Link

1. Strip the transmission wire harness to 3/8" (9.5 mm) length. Use the grip portion of the connector as a guide.

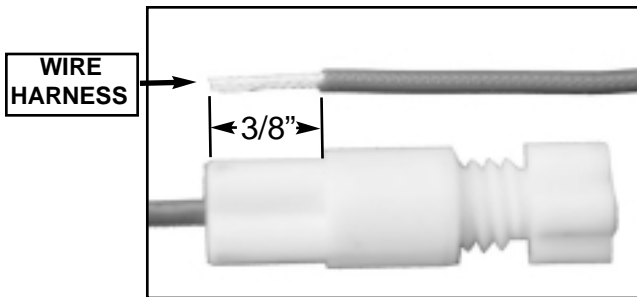


**NOTE:** If the strip length is too short, the connector will not function properly. The stripped portion of the wire must extend beyond the locking mechanism.

2. Slip the screw cap over the portion of the wire harness just stripped.

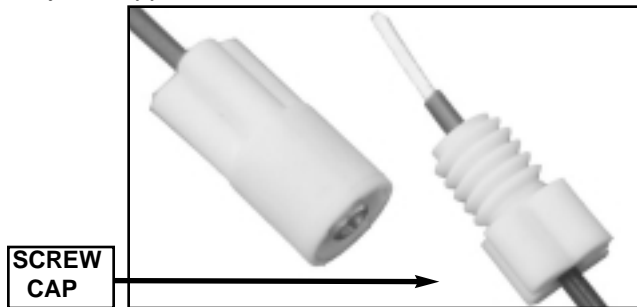


3. Insert the stripped wire into the center of the metal sleeve on the connector as shown.

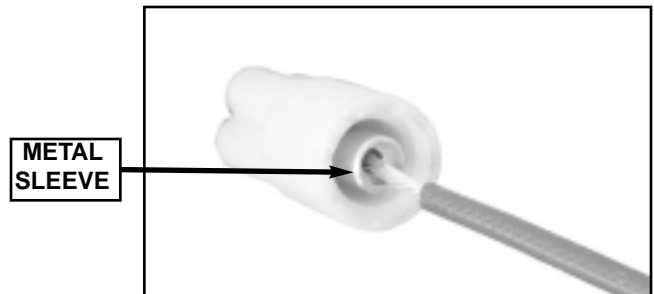

**NOTE:** Proper strip length is critical.

4. Screw the cap into the connector until they are flush. Installation is complete.

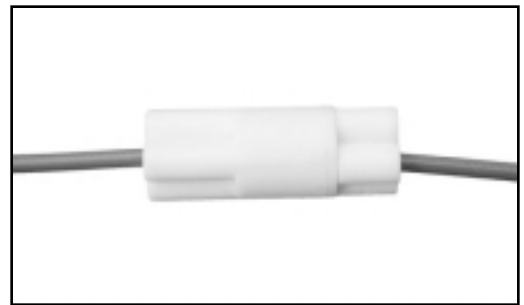

## Installation Instructions for GM 200-4R and 700-R4

1. Cut wires approximately 1 inch (25 mm) from the old solenoid. Remove old solenoid.
2. Assemble wires, as illustrated above for Rostra's Quick-Link.
3. Install solenoid and tighten mounting bolts.

**NOTE:** For single wire applications, remove Rostra's Quick-Link connector attached to black wire. Strip 1/4 inch (6 mm) from end of cut wire and attach a 1/4 inch ring terminal, not supplied, fasten by crimping. Attach ground wire to solenoid mounting bolt.

**NOTE:** For 200-4R applications, place 1/4 inch washers between bracket and solenoid case to offset the solenoid mounting. Use 4 washers per side. Washers not included in kit.

