


Instructions for Installation of Rostra External Wiring Harness Repair Kit Chrysler 42RE, 44RE, 46RE, 47RE

1. Locate and remove the connector of the old harness from the transmission.
2. Installation is easiest and mistakes are avoided when one wire at a time is changed over to the new harness.
3. Cut each wire as far from the original connector as room and the harness allows. Splice according to the chart below using the supplied crimp connectors, staggering the splices approx. 1-1/2" apart. (Splices should not overlap.)
4. Apply heat to the splice insulation to shrink the insulation around the wires.

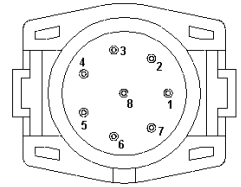

Notched Side

The chart below shows some common applications for this kit. Due to changes from model to model and from year to year, variations may occur.

Pin #	Rostra Repair Harness	Dodge Durango	Dodge Dakota	Ram Pickup	Ram Van	Jeep Grand Cherokee
1	Red	Red	Wht/Brn	Red	Red	Red, LtBlu or Brown
2	Orange	Orange	Orange	Orange	Vlt/Wht	Orange, Red/Yel or Vlt/Wht
3	Bick/Blu	Bick/LtBlu	Bick/LtBlu	Bick/LtBlu	Bick/LtBlu	Tan/Orange or Bick/LtBlu
4	LtGrn/Red	LtGrn/Red	LtGrn/Red	LtGrn/Red	LtGrn/Red	LtGrn/Red, LtGrn/Wht or LtGrn
5	Vlt/Wht	Vlt/Wht	Pink	Vlt/Wht	Vlt/Wht	Pink or Vlt/Wht
6	Brown	Brown	Brown	Brown	Brown	Brn/Wht, Orng/Wht or Brown
7	Orng/Bick	Orng/Bick	Orng/Bick	Orng/Bick	Orng/Bick	Grn/LtBlu or Orng/Bik
8	Gry/Bick	Gry/Bick	Violet	Violet	Gry/Bick	Violet or Gry/Bik