

ROUSH

THE **ART** OF PERFORMANCE ENGINEERING

2011+ Ford F-150 ROUSH Cold Air Kit for a 6.2L Engine (1162-9600)

Installation Instructions

Before installing your ROUSH Cold Air Kit, please read through the entire installation procedure and check to make sure all items are present.





Packaging List for 6.2L F-150 Cold Air Kit

ROUSH COLD AIR KIT (Roush PN: 1162-9600)		
Item Description	Part Number	Qty/Kit
Upper Airbox Lid Asy	1111-9A600	1
Roush Premium Air Filter w/Clamp	997-473	1
Bolt - M8 x 1.25 x 25	W500224	2
J-Clip M8 - MAF Tube to Air Box Lid	W520823	2
MAF Tube	1111-12B579	1
EPDM Seal - MAF tube to Air Box Lid	1111-9645	1
Clean Air Tube Asy	1162-9B659	1

Equipment and Supplies Required

8mm Socket
10mm Socket
T-20 TORX Bit
Flat Screwdriver

LIMIT OF LIABILITY STATEMENT

The information contained in this publication was accurate and in effect at the time the publication was approved for printing and is subject to change without notice or liability. ROUSH Performance Products (RPP) reserves the right to revise the information presented herein or to discontinue the production of parts described at any time.

SAFETY REQUIREMENTS

STOP! READ IMPORTANT SAFETY CAUTIONS AND WARNINGS BEFORE PROCEEDING.



IMPORTANT SAFETY NOTICE

Appropriate disassembly, assembly methods and procedures are essential to ensure the personal safety of the individual performing the kit installation. Improper installation due to the failure to correctly follow these instructions could cause personal injury or death. Read each step of the installation manual carefully before starting the actual installation.

1. Always wear safety glasses for eye protection.
2. Place ignition switch in the OFF position.
3. Always apply the parking brake when working on a vehicle.
4. Block the front and rear tire surface to prevent unexpected vehicle movement.
5. If working without a lift, always consult vehicle manual for correct lifting specifications.
6. Operate the engine only in well-ventilated areas to avoid exposure to carbon monoxide.
7. Do not smoke or use flammable items near or around the fuel system.
8. Use chemicals and cleaners in well-ventilated areas.
9. Batteries produce explosive gases, which can cause personal injury. Therefore, do not allow flames, sparks or flammable substances to come near the battery.
10. Keeps hands and any other objects away from the radiator fan blades.
11. Keep yourself and your clothing away from moving parts when the engine is running.
12. Do not wear loose clothing or jewelry that can get caught in rotating parts or scratch surface finishes.
13. Allow the engine, cooling system, brakes and exhaust to cool before working on a vehicle.

WORK SAFELY!


Perform this installation on a good clean level surface for maximum safety and with the engine turned off.

Note: Allow engine to cool prior to working under hood to avoid contact with hot engine components.

ROUSH

THE **ART** OF PERFORMANCE ENGINEERING

1. Open the hood of your vehicle.
2. Loosen the hose clamp that connects the clean air tube to the airbox lid.

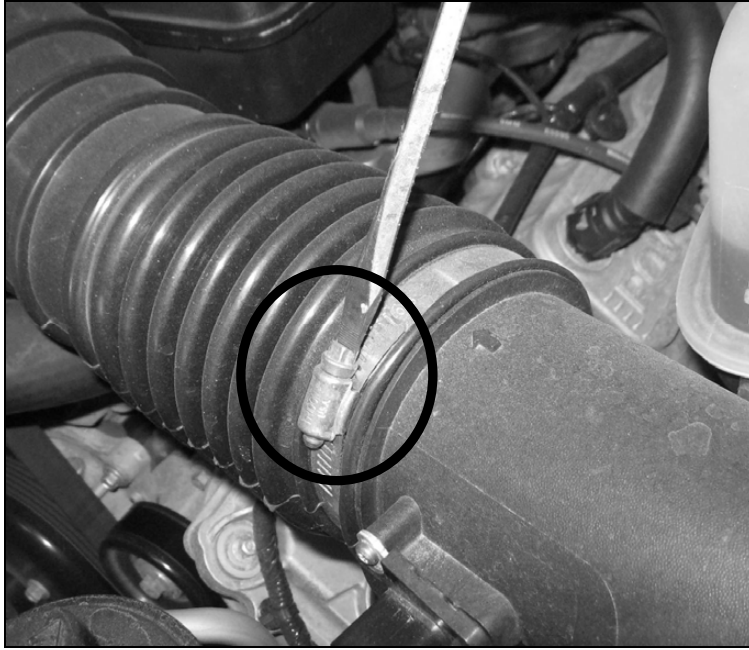


3. Loosen the hose clamp that connects the clean air tube to the intake.




ROUSH

THE **ART** OF PERFORMANCE ENGINEERING

4. Remove the clean air tube from the vehicle and transfer the clamps from the take off component to your new ROUSH clean air tube (1162-9B659).

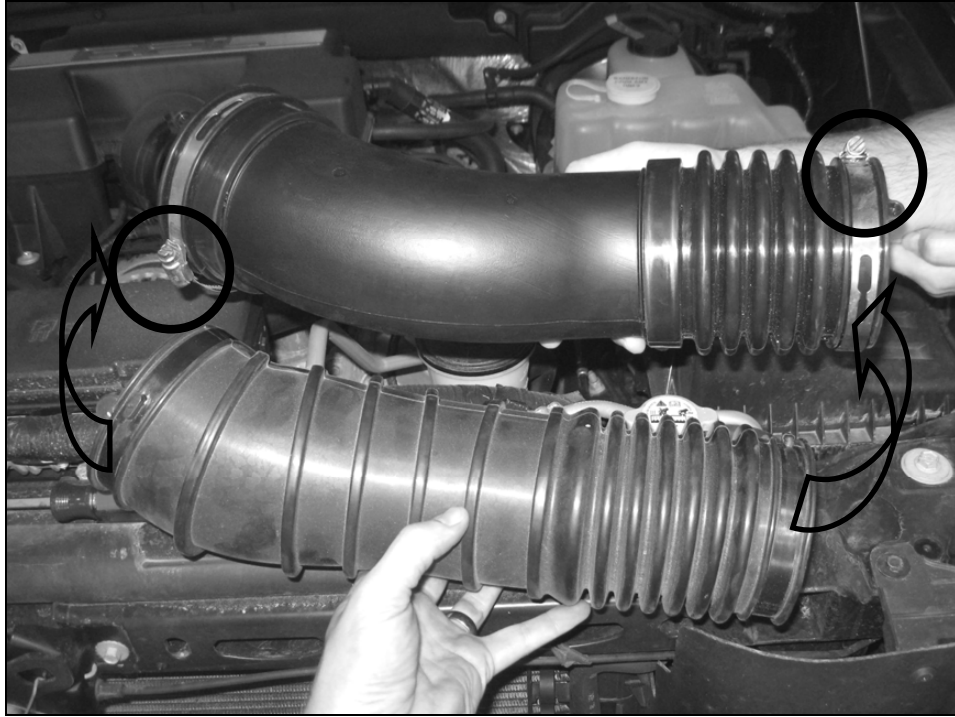


5. Disconnect the MAF sensor wiring harness from the MAF Sensor. Note – this connector has a red locking tab on the bottom side of the connector.

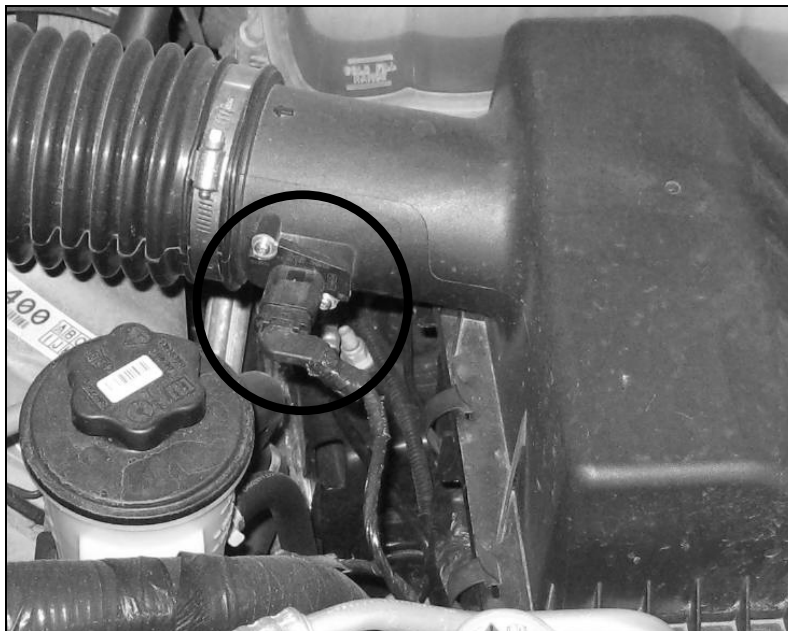

ROUSH

THE **ART** OF PERFORMANCE ENGINEERING

6. Un-clip the three (3) upper air box lid clamps. Remove the air box lid and factory air filter from the lower air box tray.

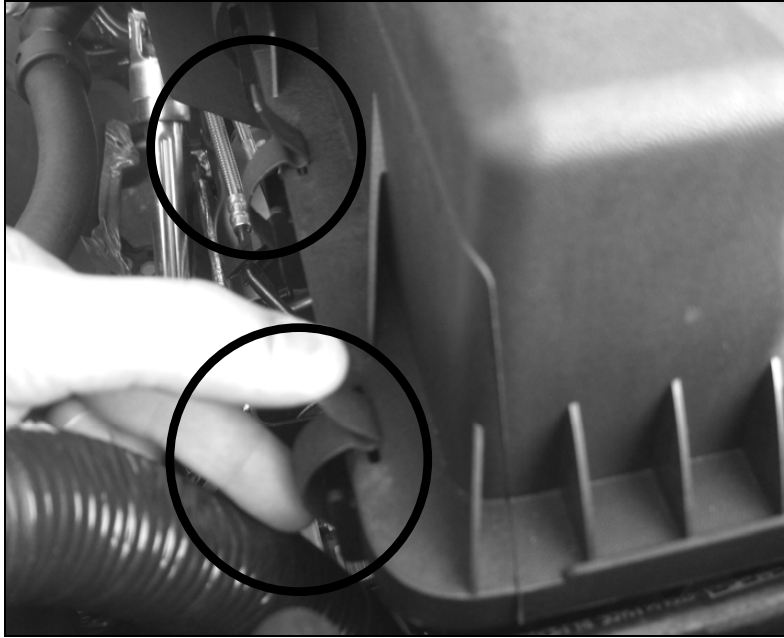

7. Transfer the MAF sensor and fasteners from the factory air box lid to the new ROUSH MAF tube (1111-12B579). Torque bolts to 1.8 – 2.2 Nm.




ROUSH

THE **ART** OF PERFORMANCE ENGINEERING

8. Install the new open air filter element (997-473) onto the MAF Tube. Do not tighten clamp, as filter orientation may need to be adjusted once placed in vehicle.



9. Install the two (2) J-clips provided (W520823) onto the airbox lid as shown.

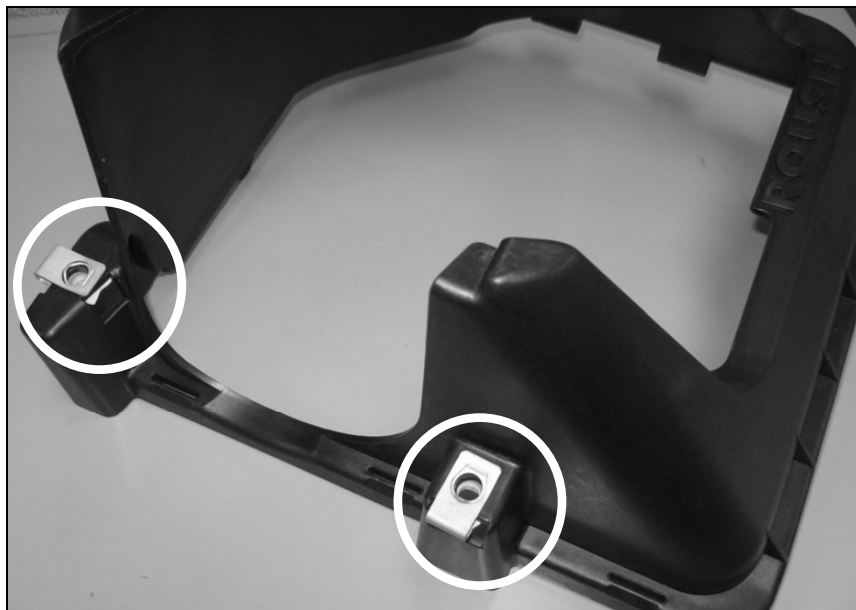

ROUSH

THE **ART** OF PERFORMANCE ENGINEERING

10. Slide the MAF tube and filter assembly through the bottom opening into the new ROUSH air box lid (1111-9A600).



11. Install the EPDM close out seal (1111-9645) around the MAF Tube and clip into the edges of the upper air box tray.




ROUSH

THE **ART** OF PERFORMANCE ENGINEERING

12. Secure the MAF tube to the air box lid using the two (2) M8x25 bolts supplied (W500224). Torque to 20 Nm.



13. Orient the filter so it sits at a slight angle forward as shown.

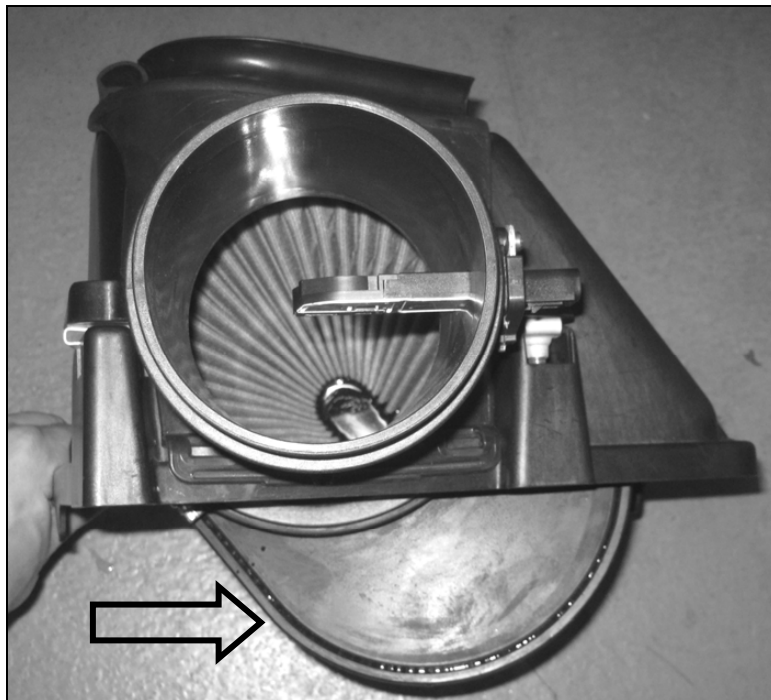


ROUSH

THE **ART** OF PERFORMANCE ENGINEERING

14. Place the new ROUSH air box lid assembly (air box lid / filter / MAF tube) into the vehicle. If necessary, adjust the filter position so it does not contact the bottom of the air box. Tighten the filter clamp.




15. Install the new ROUSH clean air tube between the intake and the new ROUSH air box lid assembly. Secure the clamps for the air box lid and tighten both clamps on either end of the clean air tube.

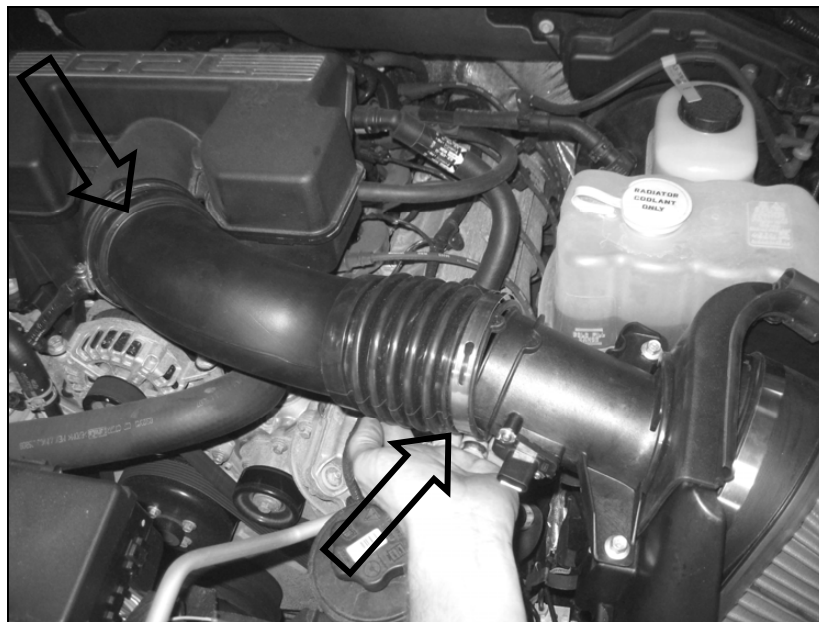

ROUSH

THE **ART** OF PERFORMANCE ENGINEERING

16. Re-connect the MAF wiring harness connector to the MAF sensor and push the lock into place.

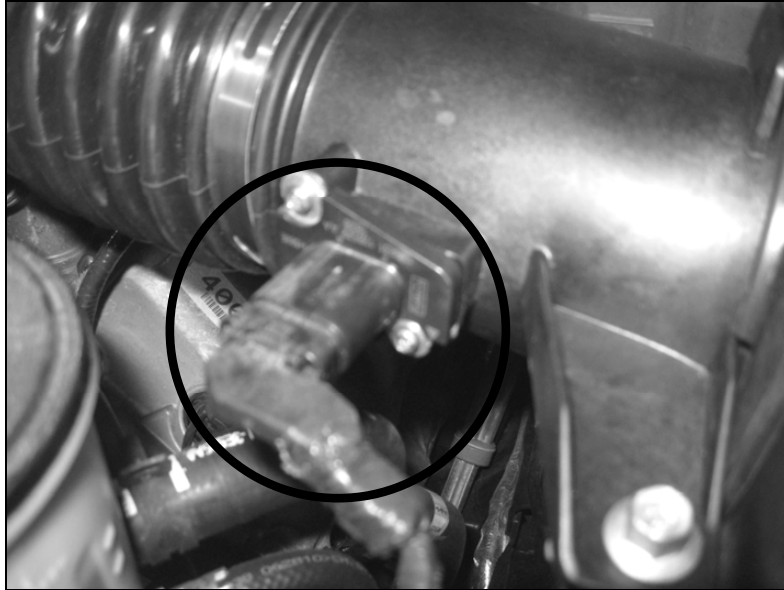

Congratulations!!! You have completed the installation of the ROUSH Cold Air Kit. It is recommended that you save all parts removed from your vehicle during the installation of this kit.