

RUGGED OFF ROAD

Step by step instructions and checklist:

Use the proper tools and safety equipment to perform all work. Torque all fasteners to proper specifications and double check work. Align your vehicle after installation.

2-104

Ram 1500 2wd/4wd

2" Lift



Remove the front wheels. Remove the ABS wire on the upper control arm, frame, and rubber brake line. Remove the metal brake line bracket at the frame.




Remove the axle nut from the hub.




Remove the tie rod end from the knuckle.



Remove the upper ball joint from the knuckle. Let knuckle hang out of the way. Do not stretch the ABS/ brake lines.

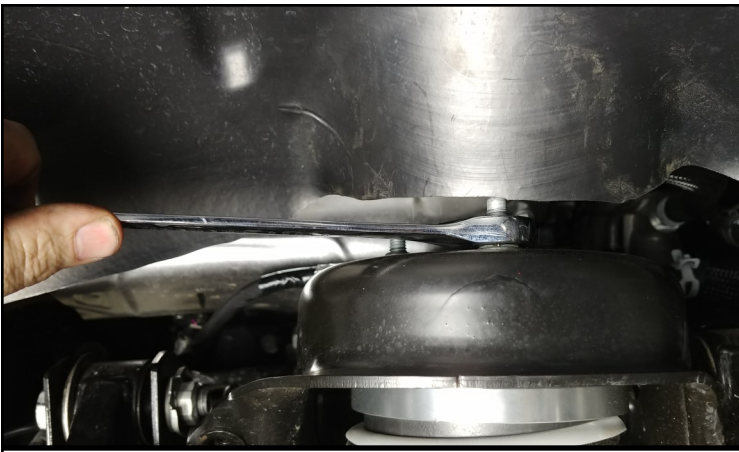

Remove the strut hardware at the lower control arm. Remove the upper strut hardware. Remove the strut from the vehicle.

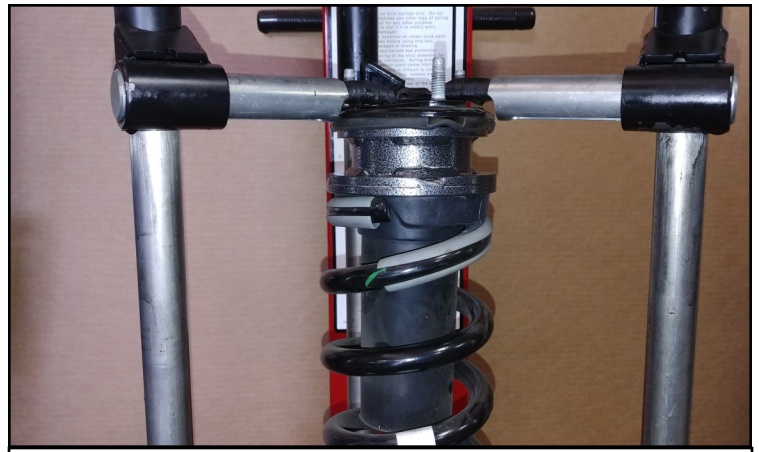

Place strut in a spring compressor. Remove factory top hat. Install in between the top hat with rubber isolator and the factory plastic spring mount.

Reverse all dis-assembly steps for re-assembly. Make sure to tighten all components with rubber bushings on the ground with full vehicle weight on the tires. Have the alignment set.