

## TJ, YJ, CJ Cargo Liner

## Contents:

Cargo Liner Logo (1 per Cargo Liner) Logo Clips (2 per Cargo Liner)

- 1. Confirm the position and orientation of your Cargo Liner in the cargo area of the vehicle.
- 2. Position the Logo over the oval platform on the Cargo Liner and press it into place, ensuring that the two tabs push through The holes in the Cargo Liner. Flip the Cargo Liner over. Position the Logo Clips over the tabs and push them into place. To ensure that the logo is held tight, use a small socket to push the clips on more tightly.



Figure 1



Figure 2

3. Using the Figures 3 & 4 below, trim the appropriate areas for your specific vehicle. For use in a TJ, trim sections A & B as shown in Figure 3. For use in a TJ unlimited, no trimming is required. For use in a YJ or CJ, trim sections A & C as shown in Figure 4. Steps are molded into the bottom of the Cargo Liner to aid in trimming. Very carefully run a utility knife along the inside edge of the molded step to trim. CAUTION: Always be extra careful when using a utility knife.

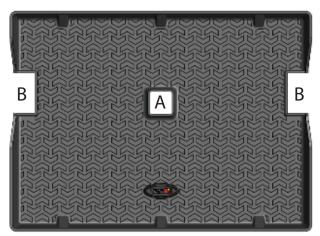


Figure 3

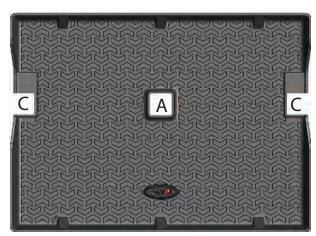


Figure 4

RUGGED RIDGE TRUNK MATS CARGO LINERS