



Installation Instructions


8660 (11226.01) Black and 11103.02 Stainless Steel

866009 (11301.01) Titanium

Euro Tail Light Guard 76-06 CJ/Wrangler

Step 1: Remove the four Phillips head screws from the tail light lens.

Step 2: Remove the tail light lens cover.
Note: Use caution as the lens may stick to the light housing.

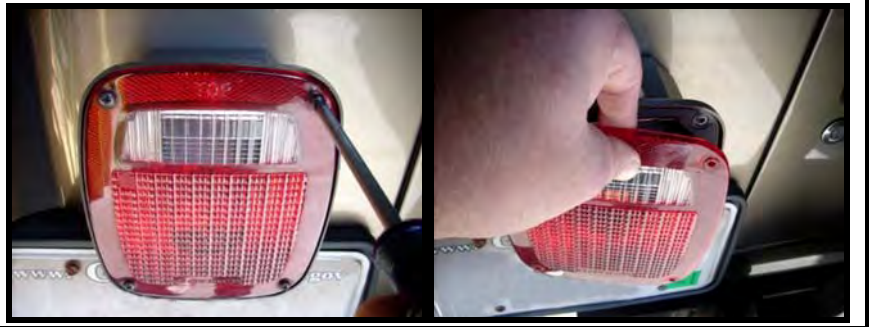

Step 3: Remove the 3 tail light assembly retaining bolts.

Step 4: Remove the tail light housing from the body.



Step 5: Carefully pull the tail light wiring through the hole. Guide the connector through the hole.

Step 6: Disconnect the tail light harness from the main harness.





Installation Instructions
8660 (11226.01) Black and 11103.02 Stainless Steel
866009 (11301.01) Titanium
Euro Tail Light Guard 76-06 CJ/Wrangler

Step 7: Guide the tail light wiring through the new Euro Tail Light Guard.

Step 8: Re-connect the wiring connectors and guide the wiring back into the body.



Step 9: Reinstall the tail light assembly and Euro Tail Light Guard to the original mounting holes using the factory hardware previously removed.

Step 10: Carefully guide the taillight lens back on to the tail light housing.



Step 11: Reinstall the four screws removed in step 1.

Caution: Be careful not to over tighten these screws. Over tightening will crack the lens.

Step 12: Repeat steps 1-11 for the opposite side.

Step 13: Check tail light operation. Installation of your New Euro Tail Light Guards is now complete.

