


11651.07 : 2 Door Left/Right Rear Body 11651.09 : 4 Door Left/Right Rear Body

JEEP® JK <u>BODY ARMOR</u>

Contents:

• (1)LeftRearBodyArmer

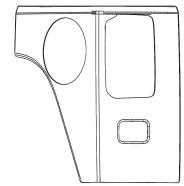


Required Tools:


- Phillips screwdriver
- Socket Driver
- 7 mm. Socket
- Flathead screwdriver (Only for 2 Door)

1. Remove the licence plate using phillips screwdriver. (For 2 Door using a Flathead screwdriver)


2. Remove the licence plateholder using a socket driver and 7 mm. socket.

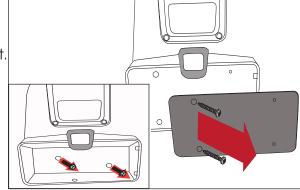

3. Remove the driver side and passenger side tail light using a phillips screwdriver.

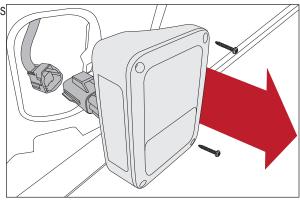

• (1)RightRearBodyArmer

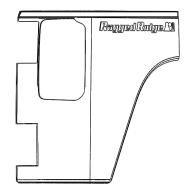




11651.07 : 2 Door Left/Right Rear Body 11651.09 : 4 Door Left/Right Rear Body

JEEP[®] JK BODY ARMOR

4. Clean surface with isopropyl alcohol (rubbing alcohol).

5. Apply 3M©AdhesivePromoter06396tomountingsurface. Avoid areas thattape will not contact. Allow 90 seconds for Adhesive Promoter to dry before proceeding.

Note: For best results, install within 10 minutes of installing Adhesive Promoter.

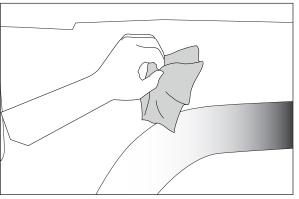

6. Test fit Body Armor to the vehicle before removing plastic liner from mounting tape. This will aid in aligning the item before adhesion.

7. Remove only enough plastic liner to be easily gripped when item is installed.

Note: The plastic liner of the shorter tape sections may need to be fully removed before installing.

8. Installiteminpropermountingposition while keeping partially removed liner ends accessible.

9. FirmlyholdtheBodyArmorsinpropermountingpositionwhilepullingthe exposedplasticlinertocompletelyremove. Maintainpressureoninstalled itemfor30secondstoensurepropercontact. Fulladhesionoccurswithin24 hours of application.

NOTICE reas where promoter may be visible can be cleaned with acetonesolventsormethylethylkeytone(MEK).Seepromotormanufacturer for further detail.

CAUTION _{/ents} can cause cosmetic damage to plastic surfaces. See promoter manufacturer for further detail.

10. Reinstall the licence holder, licence plate and tailgate lights.

