



13201.11 Driver Side Front Seat Adapter 97-02 Wrangler

IMPORTANT NOTICE:

Carefully read the instructions before attempting to install this product. Rugged Ridge is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product.


INCLUDED COMPONENTS

- 1 – Frame
- 4 – Bolts (3/8-16x1")
- 4 – Nyloc Nuts
- 8 – Washers

INSTALLATION INSTRUCTIONS

- 1) Remove the four bolts attaching your old driver's side seat with old seat risers (seat riser pictured in Figure 2) to the vehicle's floor. **NOTE:** Save the bolts for later usage.
- 2) Remove the old seat with seat riser from vehicle and place it on a working area.
- 3) Locate the four bolts that mount the seat riser to your old seat and remove these bolts. **NOTE:** Save these bolts for later usage.
- 4) Remove the old seat from the seat riser
- 5) Loosely attach the Frame to the seat riser using the bolts removed in step 4 (Figure 1 & 2). **NOTE:** Make sure you keep the original seat riser orientation.

Figure 1

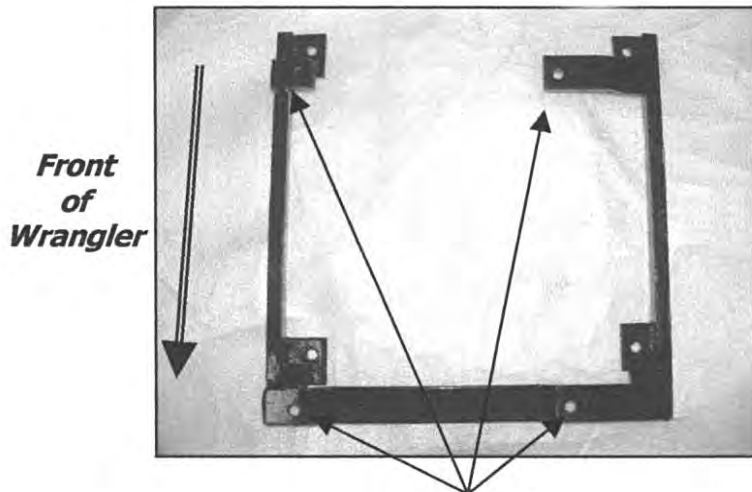


Seat Riser
Attachment Holes

Figure 2




- 6) Once the Frame is attached to the seat riser, proceed to attach seat onto the Frame using the included hardware (Figure 3 & 4).

Figure 3

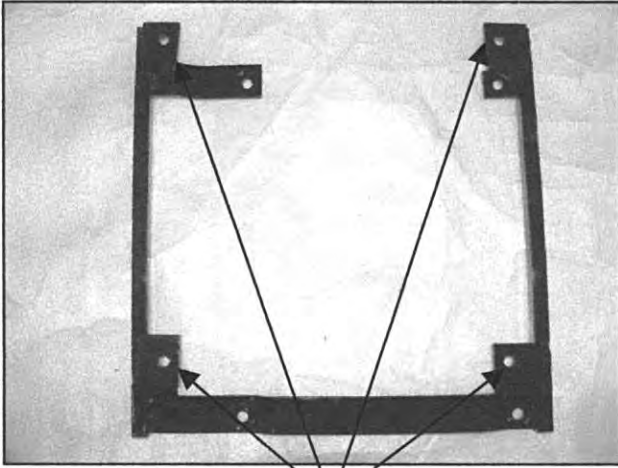

**Seat Attachment
Holes**

Figure 4

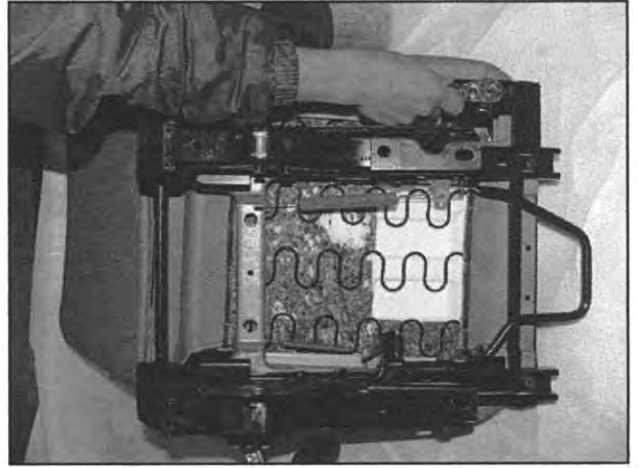

- 7) Securely tighten all hardware using wrenches.
- 8) Mount your new seat into your vehicle by attaching the seat riser with new Smittybilt Seat to the floor using the bolts removed in Step 1.