

**Jeep® Center Console Switch Pod (2007 -2010 JK)**

**HARDWARE NOTE:** Switch Pod has been designed to reuse factory metal retainer clips located on the back of factory trim. **DO NOT DISCARD.**

(Switches sold separately)

Item List:

(1) Center Console Switch Pod

**Important! Please read instructions completely before installing Switch Pod.**

Step 1. Move shifter back from center console (Pic.1).



pic. 1

Step 2. Using a flat head screwdriver pop factory trim panel from center console. Retainer clips are located on the upper left and right corners (Pic.2).



pic. 2

Step 3. Using a small flat head screw driver remove metal retainer clips (Pic.3) from factory trim. Reinstall onto new Center Console Switch Pod (Pic.4).



pic. 3


Step 4. To install switches use a box knife to cut along switch locator channels. With Switches installed position new Switch Pod into guide holes located in center console.



pic. 4

Step 5. Reinstall new switch pod panel into center console (Pic 6).

Note: (6 Speed) transmissions may require the rubber boot to be pushed clear of switch location panel. A zip-tie can be used to hold rubber boot in new position.

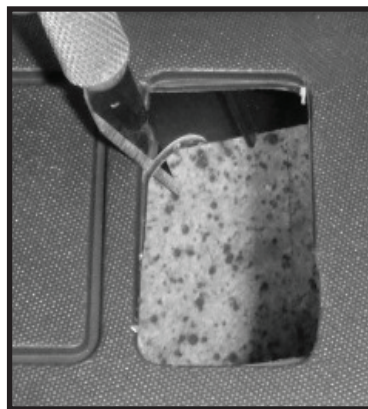

pic. 5



pic. 6