

Fabric Replacement Top Installation Instructions For: 1988 - 1995 YJ Wrangler

Part Numbers:

13721.XX (With Door Skin) - 13722.XX (With Door Skin & Tinted Windows)

WARNING!

This product is designed to enhance the appearance of the vehicle and to shield the occupants from ordinary weather conditions. Do not rely in any way on the components of this product to contain occupants within the vehicle, or to protect against injury or death in the event of an accident. This top will not protect the occupants from falling objects. Never operate vehicle in excess of manufacture's specifications.

Wear Seat Belts At All Times

Read and follow, precisely, all installation instructions provided when installing top. Failure to do so may result in a poor fitting top and could place occupants of the vehicle in a potentially dangerous situation. After installing or reinstalling the top, check to make sure it has been properly installed before driving.

PARTS LIST

- Qty 1 Fabric Top
- Qty 1 Quarter Window, Right
- Qty 1 Quarter Window, Left
- Qty 1 Rear Window
- Qty 1 Door Cover, Right
- Qty 1 Door Cover, Left



Installation Tips.

Before you begin to install the new top read all instructions thoroughly. Below are a few tips to make this installation easier. After completing the installation, keep these instructions for further reference.

For a Smooth Fit:

For ease in installation, the top should be installed at a temperature above 72 F. Below this temperature, the fabric may contract an inch or more, making it hard to fit to the vehicle.

It is normal for the fabric to contract and wrinkle when stored in the shipping carton. Within a few days of the installation, the fabric will relax and the wrinkles will disappear.



Removing the Old Top

Tools needed:

- (1) Shoe Horn
- (2) Safety Glasses
- (3) Razor Knife

CAUTION

- Safety glasses should be worn at all times while installing this product.
- Step (1): Remove the quarter windows and rear window. Remove the metal tailgate bar from the bottom of the rear window and set to the side. It will be reused.




Step (2) : Unsnap the center and rear cloth tabs from the frame

Step (3) : Pull down on spreader bars and push rear support bow forward.

- Step (4) : Release the rear corners of the top. Pull gently down and then out to release the plastic strip from the retainer on the vehicle.
- Step (5) : Unsnap the old top from above doors, remove front plastic strip from windshield channel and remove old top.





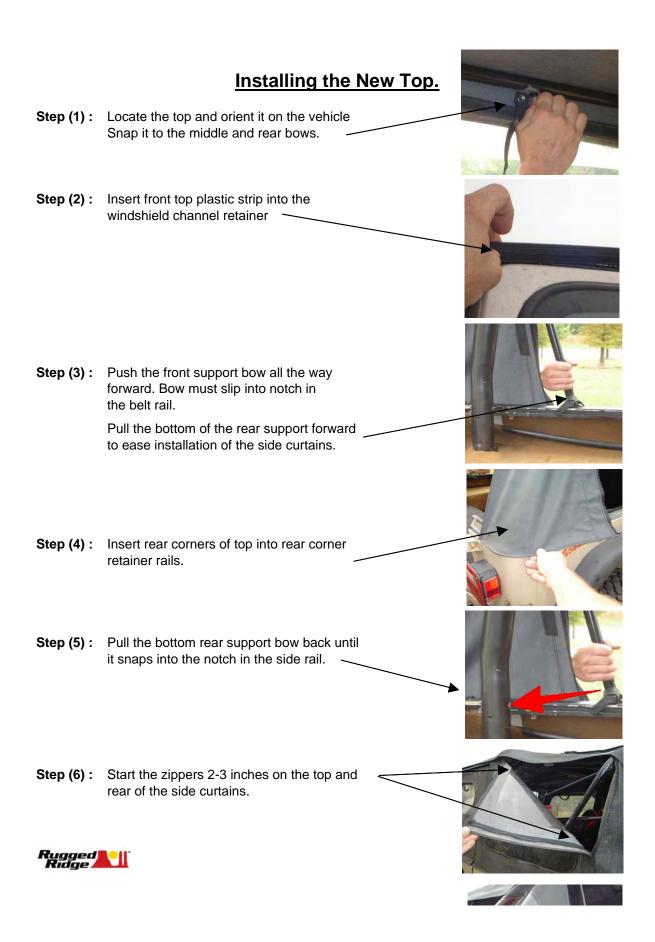

Step (7) : Pop the plastic strip on the front of the side curtain into the retainer channel on the front support bow.

Step (8) : Slide the plastic strip on the bottom of the side curtain into the side retainer. Start at one end of the strip and work along to the other end. Close the top and rear zippers on the side curtains

Step (9) : Push the inner spreader bar up until they snap into place

Step (10): Open the tailgate. Slide the rear curtain retainer onto the bottom of the rear curtain. Close the rear curtain zippers. Push the rear curtain retainer into the top of the tailgate retainer. Slip the plastic on the bottom of the corners under the bottom fo the tailgate retainer.





- the door frames.
 - **Step (13):** Separate the hook and loop fasteners on the door covers and slide the new cover onto the frame, starting at the top. Work from corner, to corner wrapping the fabric around the frame and fastening the hook to the loop as you work around the door. Note: a shoe horn may help with the stretching of the door skins over the upper door frames.
 - Step (14): Reinstall the upper doors. Insert the pins into the grommets in the lower doors.
 - **Step (15):** Fasten the snap at the front of the upper door. Slip the plastic strip on the bottom of the soft door into the retainer on the steel door.

Care and Maintenance of Your New Top.


Your top is made of the finest materials available. To keep it looking new and for the maximum possible ware, it will need periodic cleaning and maintenance.

Washing:

The fabric should be washed often using soap, warm water and a soft bristle brush. Rinse with clear water to remove all traces of soap.







Step (11): Fasten snaps on top, above doors, to stubs

of snaps on top.

on vehicle. Studs will slide to match location





