

Installation instructions - JK Tow Hitch Wiring Kit

Contents:

- (1) JK tow hitch wiring loom with connectors and plug.



Note: Read instructions fully before proceeding with installation. Loom has been designed to plug directly into factory connectors. Can be used with either factory 2" tow hitch or Rugged Ridge 2" tow hitch P/N: 11580.01 (sold separately).

- Step1:** Place vehicle in gear and set the emergency brake. Remove rear driver's side taillight (pic.1).



pic.1

- Step2:** Disconnect taillight connector as shown. (pic.2)



pic.2

- Step3:** Connect new loom to male and female connectors (pic.3)



pic.3



pic.4

- Step4:** Fish trailer connector down through taillight opening and past foam isolator panel. (pic.4 & 5)




pic.5



pic.6

- Step5:** After pulling loom through foam isolator drop connector over frame and insert into tow hitch plug notch (pic.6).

- Step6:** Locate small 8mm holes drilled along frame and press in retainer clips (pic.7)
Test all light functions before towing.

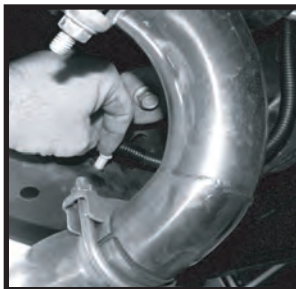

pic.7