


OEM Reverse Camera Retention

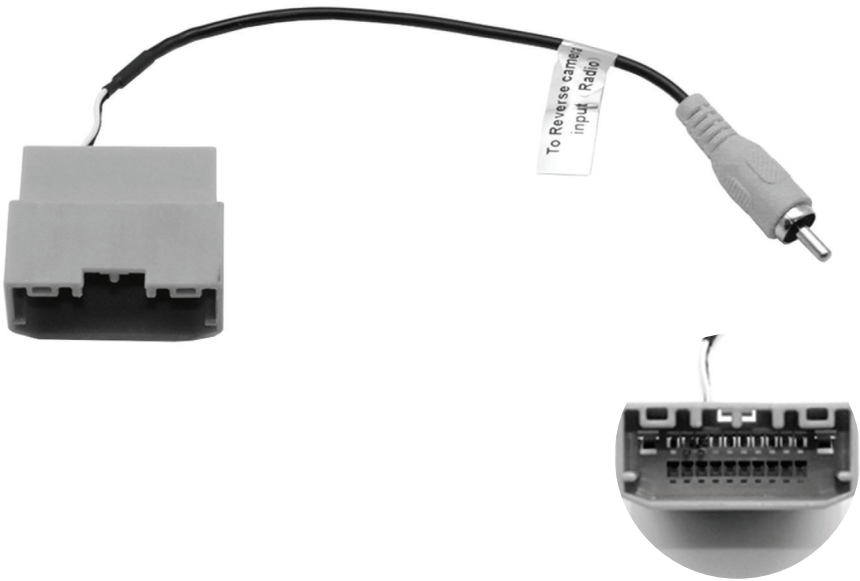

APPLICATION GUIDE

CHRYSLER

2011-15 200
2008-10 300C
2002-04 300M
2008-09 ASPEN
2002-04 CONCORDE
2004-08 PACIFICA
2002-05 PT CRUISER
2002-10 SEBRING
2002-03 TOWN & COUNTRY

DODGE

2002-04 INTREPID
2002-06 STRATUS

2002-15 CARAVAN
2002-11 DAKOTA
2002-09 DURANGO
2002-15 RAM
2003-09 VIPER
2007-11 NITRO
2007-15 AVENGER
2008-10 CHARGER
2008-14 CHALLENGER
2009-10 JOURNEY
2009-10 MAGNUM
2009-15 CALIBER

LIABILITY DISCLAIMER

This CRT-CR01 instruction manual is based on carefully documented data and research. Scosche Industries Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the vehicle manufacturing changes or options, or damages that may occur in the vehicle during the installation of components while using this manual.

WIRE DIAGRAM

