


INSTALLATION INSTRUCTIONS

- 1. TO INSURE PROPER FIT, PLACE MIRROR BASE ON THE DESIRED MOUNTING SURFACE.
- PLACE THE TEMPLATE IN THE EXACT POSITION THAT THE MIRROR IS TO BE MOUNTED. CENTER PUNCH THE TWO (2) .133-.137 DIA. HOLES IN SPOTS MARKED BY CENTER PUNCH.

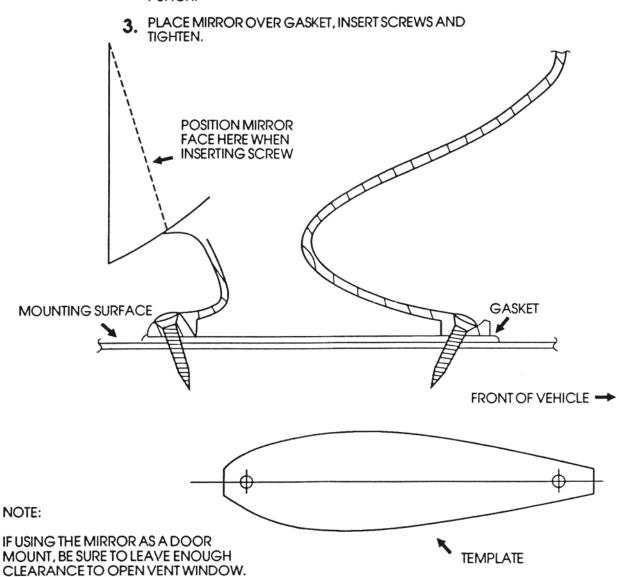

INSTALLATION -- KIT -- MIRROR REAR VIEW OUTSIDE -- RACING

