




PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING PROPER INSTALLATION

- 1- Run masking tape as shown for your vehicle in the application guide.
- 2- Clean and dry the surface underneath the masking tape with water or alcohol where the molding is to be installed.
- 3- Apply in temperature of 70°F/21°C or above. If the surface is cold, use a heat gun to warm up the surface before proceeding with installation.
- 4- Apply a thin coat of Adhesion Promoter pad below masking tape, no wider than the size of the molding.
- 5- Use 1 pad of Adhesion Promoter on each side of your vehicle.
- 6- Wait for approximately 1 minute for the Adhesion Promoter to dry before applying the molding.
- 7- Peel back the red plastic cover. Apply the molding underneath the masking tape line which will be your guide. **(DO NOT TOUCH THE ADHESION WITH YOUR FINGER, SKIN OIL WILL AFFECT THE ADHESION)**
- 8- After molding has been installed, use a soft cloth and apply pressure along the entire length of the molding to insure proper installation.
- 9- Remove masking tape after installation is completed. Do not wash the vehicle for 24 hours.
- 10- FRONT DIMENSION 39.5" /REAR SMALL DIMENSION 24.5" /REAR LARGE DIMENSION 29.5"

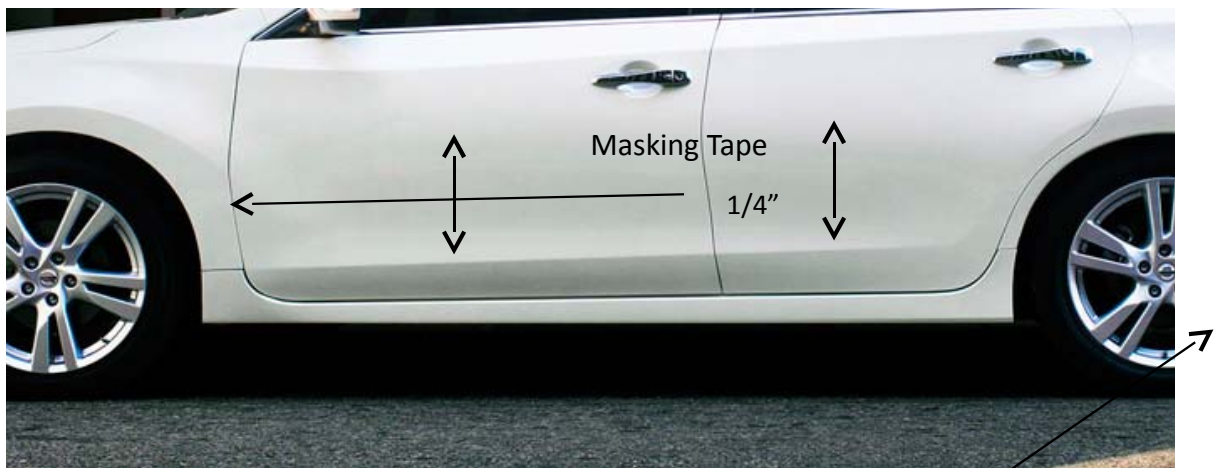

Install the molding 1/8" away and 1/4" away from the edge of their respective doors.

1/8"