


CAT. NO. 58000

PARTS BREAKDOWN

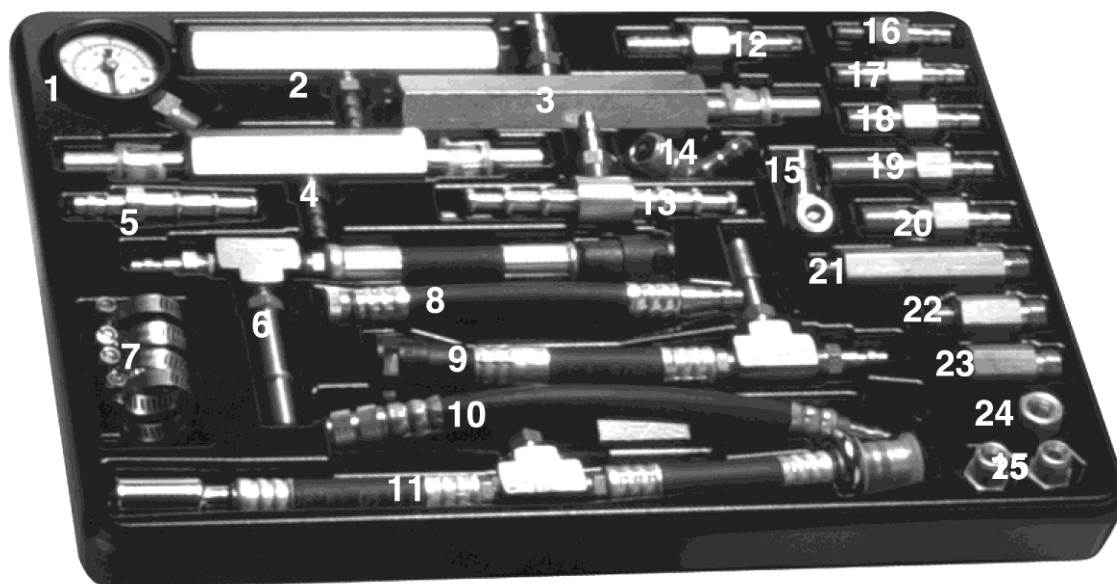

LIFT OUT TRAY

1	33966	0-50 PSI (0-3.5 BAR) Gage	14	58009	90° GM & Chrysler Swivel Adapter
2	57650	GM Throttle Body Injection (TBI) Fuel Pressure Adapter	15	58010	90° Ford Swivel Adapter
3	57660	GM 2.2 Liter Fuel Injection Pressure Test Adapter	16	57200	Honda Fuel Injection Pressure Test Adapter
4	57670	GM 2.5 & 5.7 Liter Quick Connect Fuel Injection Adapter	17	56221	8mm-1.00 Banjo Bolt Adapter
5	53903	Single End Barbed Adapter	18	56224	10mm-1.00 Banjo Bolt Adapter
6	57280	GM & Chrysler 3/8" In-Line Hair Pin Adapter	19	56227	12mm-1.25 Banjo Bolt Adapter
7	33913	Hose Clamps (4 Pieces)	20	56230	12mm-1.50 Banjo Bolt Adapter
8	53850	Small Schrader Valve Test Adapter for Ford	21	33821	12mm-1.50 Male x 8mm -1.00 Male x 3" Adapter
9	57260	Ford 5/16" In-Line Hair Pin Adapter	22	33819	12mm-1.50 Male x 10mm-1.00 Male x 1 9/16" Adapter
10	53908	Large Schrader Valve Test Adapter for GM & Chrysler	23	33822	12mm-1.50 Male x 10mm-1.00 Female X 1 1/4" Adapter
11	57230	Ford In-Line Spring Lock Fitting Adapter	24	33816	12mm-1.50 Male x 8mm-1.00 Female x 15/16" Adapter
12	58012	Volvo 14mm LH-Jetronic Adapter	25	33815	12mm-1.50 Male x 8mm-1.00 Male x 15/16" Adapter with "O" Ring (2 Pieces)
13	53788	Double End Barbed Adapter			

LOWER CASE COMPARTMENT

(Not Pictured)

26	56248	Basic Gage Assembly with 100 PSI Gage	30	56218	5/16" x 3" Hose
27	58040	Gage Only with Rubber Boot (100 PSI – 3 1/2" Diameter)	31	58017	Repair Kit (includes seal washers, valve cores, brass depressor and gasket)
28	58002	CIS Testing Assembly with Ball Valve	32	58030	Instruction Manual
29	56217	1/4" x 3" Hose	33	53904	48" Hose with Quick Coupler