


### **Part # 7099 STEERING STABILIZER**

HD OEM Replacement Kit:

1. Remove OEM steering stabilizer from the OEM mounting brackets. Do not remove the brackets. (See Photo # 1) Insert a poly bushing & steel sleeve # 54314 into each eye of the new Skyjacker steering stabilizer. Position the poly boot onto the new steering stabilizer & secure with the supplied boot tie.
2. Install the new steering stabilizer into the OEM mounting brackets using the OEM hardware. Tighten all nuts. (See Photo # 2)

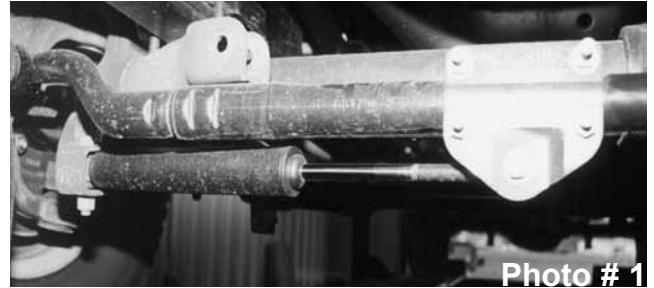

### **Part # 7199 STEERING STABILIZER**

HD Single Kit with Brackets:

1. To install the new Skyjacker steering stabilizer insert a poly bushing into each eye & steel sleeve # 54314 only in the eye attached to the body. Position the poly boot onto the new steering stabilizer & secure with the supplied boot tie.
2. Notice the four indentions on top of the tie rod. (See Photo # 3) Install the new Skyjacker tie rod bracket by placing the new u-bolts over the tie rod using the indentions # 2 & # 4. (See Photo # 4) Install the new stud mount onto the new tie rod bracket. (See Photo # 4)
3. Install the new steering stabilizer into the OEM mount on the passenger side axle using the supplied hardware & tighten. Position the new steering stabilizer onto the mounting stud in the new tie rod bracket & tighten. (See Photo # 5)

