




GMC, Ford, Dodge
Dual Steering Stabilizer
Part # 7220

Contents:

- 2 - 7000WS Steering Stabilizers
 - 2 - Boots & Boot Ties
 - 4 - 140629 Straight Studs
 - 1 - Large Axle Bracket
 - 2 - Axle Bracket U-Bolts w/Nuts & Washers
 - 2 - Straight Tie Rod End Brackets
 - 4 - Tie Rod End U-Bolts w/Nuts & Washers
-

Installation:

1. Park the vehicle on flat level ground & set the emergency brake.
2. Turn the tires / wheels to a straight forward position.
3. Install the new Skyjacker shock boots over the new Skyjacker steering stabilizers & secure with the supplied boot ties.
4. Install the new Skyjacker axle bracket on top of the axle using the supplied 3/8" x 3 1/8" x 3 1/2" u-bolts, washers, & nuts.
5. Attach the two straight studs to the new axle bracket & mount one end of the new steering stabilizers to each stud & tighten. **Note:** The cylinders may be mounted with shaft end to the tie rod end bracket if preferred.
6. Pull the steering stabilizers out 4³/₄" out (exactly halfway). **Note:** The center to center eye length will be 19" when the steering stabilizers are halfway out.
7. Install the new studs into each eye of the new steering stabilizers & tie rod brackets.
8. Mount the new Skyjacker tie rod end brackets using the supplied 5/16" x 1 1/4" x 1 3/4" u-bolts, washers, & nuts.
9. Cycle the tires / wheels fully to the left & right to make sure the new steering stabilizers are adjusted properly & that all brackets are secure.

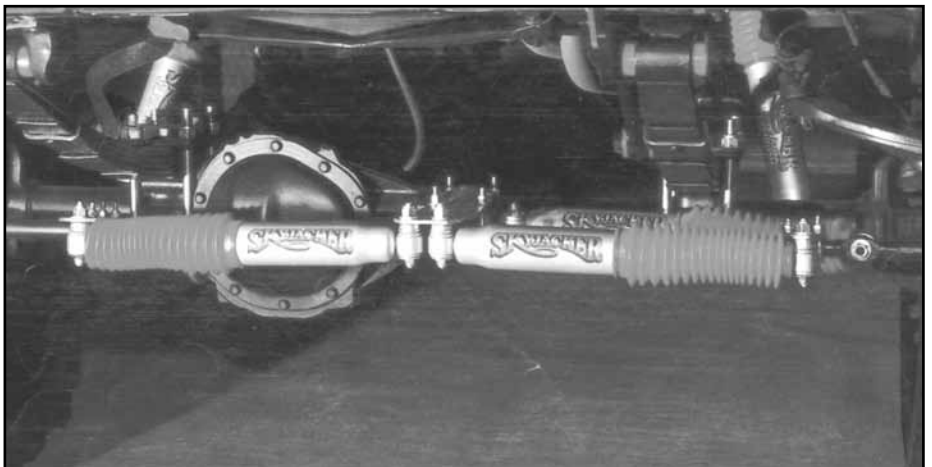

SEAT BELTS SAVE LIVES, PLEASE WEAR YOUR SEAT BELT.