



# Installation Instructions

## Winch Plate (Part# 2801)

### 87-06 Jeep Wranglers

**NOTE:** Carefully read entire instructions thoroughly before attempting to assemble and/or install this product. These steps are in conjunction with vehicles with the O.E.M. front bumper. Similar steps can be used with other after-market bumpers.

Parts Included	Qty
1/2"-13 x 1 1/2" bolt	4
1/2" lock washer	4
1/2" flat washer	4
7/16" - 14 x 1 1/2" bolt	2
7/16" flat washer	2
7/16" lock washer	2

Parts Included	Qty
10 x 25 mm bolt (For Fairlead)	2
10 mm lock washer	4
10 mm flat washer	2
10 x 50 mm bolt	2
10 mm lock nut	2
3/4 O.D. x 1/4" tall spacer	2

**NOTE:** Install winch to [winch](#) plate following the winch manufactures instructions.


**STEP 1:** Remove the front plastic frame/stabilizer bar cover. (Fig A) **NOTE:** The stabilizer cover will not be re-used.

**STEP 2:** Remove front bumper hardware and tow hooks (if equipped). (Fig B)

**STEP 3:** Remove the front (only) stabilizer mounting bolt. (Fig B) When mounting plate you will use the included 10 x 50mm bolts.



(Fig A)

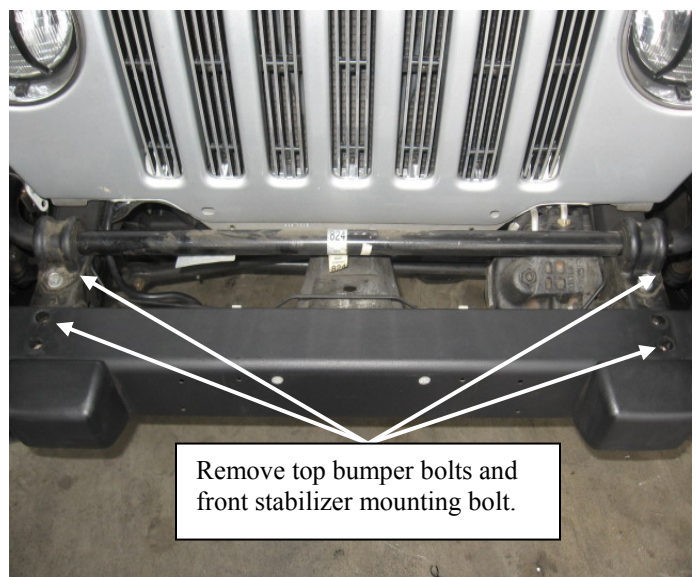

(Fig B)




## Installation Instructions

### Winch Plate (Part# 2801)

### 87-06 Jeep Wranglers

**STEP 4:** Install winch plate using the supplied hardware.

- A. (TJ) 4-  $\frac{1}{2}$  x  $1\frac{1}{2}$  bolts (Torque to 75 ft. lbs), 2- 10 x 50mm bolts,  $\frac{1}{4}$ " spacers (Fig C)
- B. (YJ) 4-  $\frac{1}{2}$  x  $1\frac{1}{2}$  bolts (Torque to 75 ft. lbs) The large flat washers can be used as spacers. (If needed)

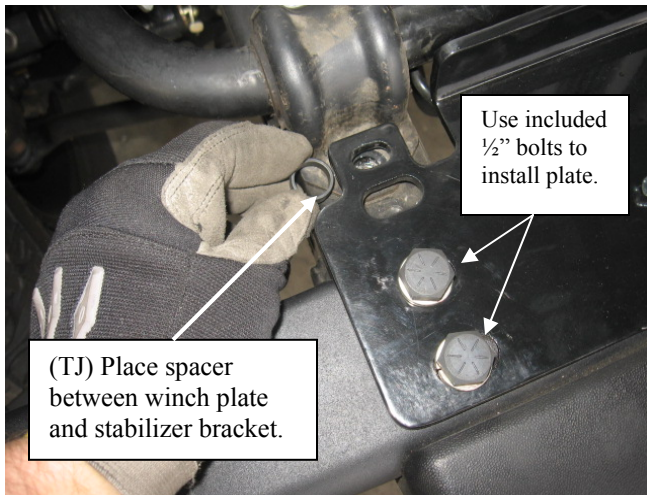

(Fig C)



(Fig D)

**STEP 5:** Installation is now complete. Check to make sure all bolts are secure. (You may use included hardware to attach fairlead)

**NOTE:** Depending on the application you will have hardware left over, this is normal.