



Installation Instructions

SRC Classic *Front Bumper* (#76740, 76740D)
1979-2006 Jeep CJ & Wranglers


NOTE: Carefully read entire instructions thoroughly before attempting to install this part.

Parts Included	Qty
Front Bumper	1
Washer Spacers	2

Tools Needed
Ratchet
#55 Torx Bit

Step 1: Remove the factory front bumper and save the existing factory hardware.

Step 2: Install Rock Crusher Front Bumper onto vehicle using the factory hardware removed in step one. **Note:** For CJ applications there is a gap between the frame and the mounting bracket. Use the (2) spacers included, underneath each side between the frame and the bracket.

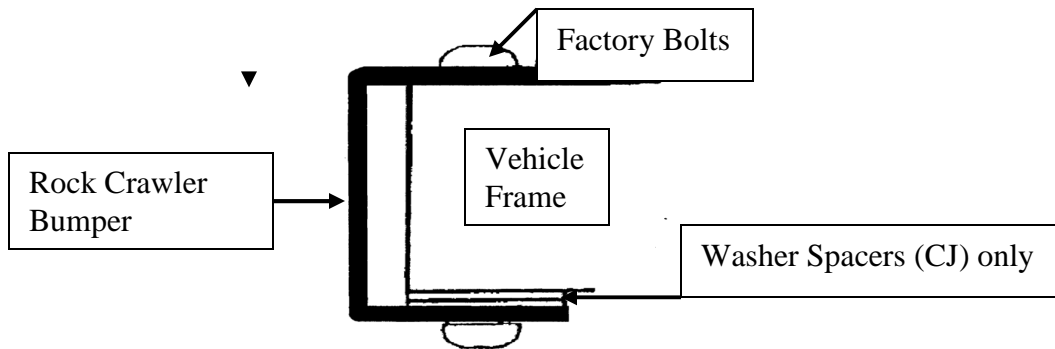

Step 3: Tighten all hardware at this time. Installation is now complete.

NOTE: To protect your investment, wax this product after installing. Regular waxing is recommended. Do not use any type of polish/wax that contains abrasives that could damage the finish