



Installation Instructions

XRC Flare

87-06 Jeep Wrangler

NOTE: Carefully read entire instructions thoroughly before attempting to assemble and/or install this product.


Parts Included	Qty
Driver Side Flare	1
Passenger Side Flare	1
Allen Head Bolt	12
Flat Washer	24
Lock Washer	12



STEP 1: Remove the factory flares from vehicle.

STEP 2: Position flare on body tub. Line up the holes in the flare with the existing holes in the body tub. Using a scribe or marker make a small mark on the holes that will be used. Set flare to the side.

STEP 3: Drill out the marked holes using a drill with a 1/4" bit. (12-TJ, 10-YJ's) Fig A

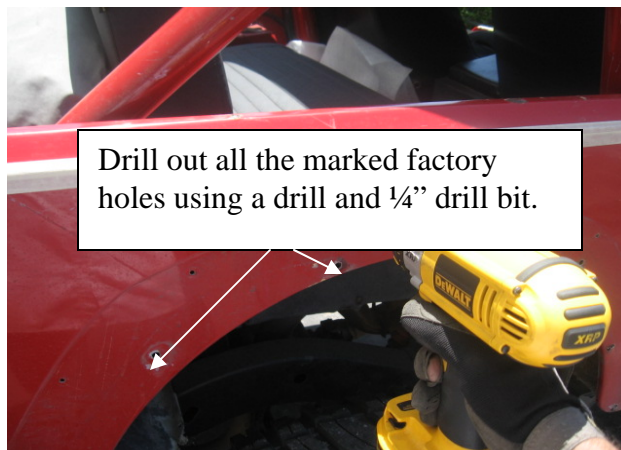

(Fig A)



(Fig B)


STEP 4: Insert bolts through flare and jeep body and hand tighten with lock nuts. Fig B (You may need to pull inner fender liner down to gain access to the back of the bolts to install the nuts) Fig C



Installation Instructions
XRC Flare
87-06 Jeep Wrangler

NOTE: If the hole in the flare lines up with a hole in the body that has a nut insert you can either use the factory hardware for this hole or remove the nut insert and use included hardware.

STEP 5: Align flare so it's parallel with the body of the vehicle and then proceed to tighten all hardware completely. (Fig C) Depending on your application, you may have extra hardware left over.

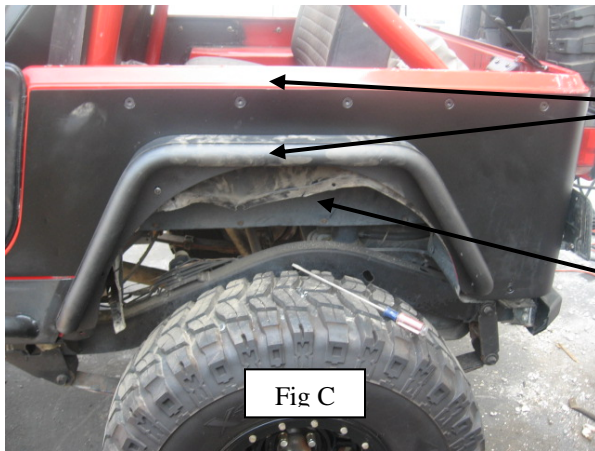

Align top of flare with parallel with the body top before tightening.

You will need to pull inner fender liner down in order to gain access to the back of the installed bolts

Step 6: Installation is complete, repeat same steps for opposite side.

CARE AND MAINTENANCE

To protect your investment it is recommended to regularly wash and wax this part. Do not use any type of cleaners that contain abrasives that may damage the finish of your part.