



Installation Instructions

[Replacement Top](#) (Part # 9085235)
2010 and Up Unlimited (4 Door)
Replacement Top (Part # 9075235)
2010 and Up JK (2 Door)

NOTE: Read entire instructions thoroughly before installing this product. It is recommended to install this Top when temperatures are above 70 degrees. The top can contract and stretch an inch or more. If the Top has any wrinkles this is caused from packaging but once the top relaxes they will go away. You must have the factory bow assembly and door surrounds in order to install this product. Pictures are for example use, actual vehicle may differ.

Step 1: If there is currently a soft top on the vehicle, remove it and save the screws removed from where the top attaches to the rear bows. Once the windows are removed and the screws from the rear bows, you will need to fold your top down.

Remove the two screws from the front two corner plastic pieces. (Fig 1) Save hardware for later use. Now you will need to raise the bow assembly and lock the header into the windshield frame. Carefully pull the softtop forward over the windshield frame and onto the hood. (Fig 2)

To remove the top from the header piece remove all of the screws holding the top portion of the header onto the base. (Fig 3) Keep screws for later use. You may now remove the top portion of the header and the top completely.



(Fig 1)



(Fig 2)



(Fig 3)


Step 2: Drape your new top over the hood upside down with the front of the top up on the windshield header. (Fig 2)

Step 3: Place the sewn in plastic tube on the top on the front edge of the header inside the extrusion; making sure it's centered in the header. (Fig 4, 5)




Installation Instructions

Replacement Top (Part # 9085235)
2010 and Up Unlimited (4 Door)
Replacement Top (Part # 9075235)
2010 and Up JK (2 Door)

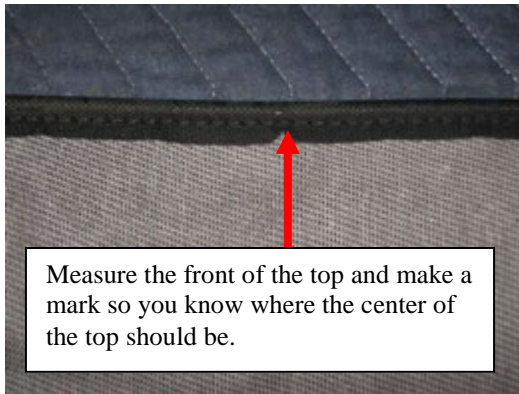

(Fig 4)

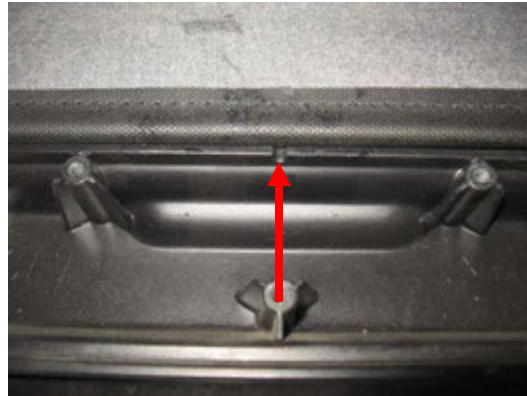

(Fig 5)

Step 4: Use masking tape to help hold the top along the header. (Fig 6, 7)



(Fig 6)



(Fig 7)

Step 5: Re-install the top portion of the header back on with the previously removed screws. This will clamp the front of the top inside the header. (Fig 8, 9)

Step 6: Un-clamp the front header from the windshield frame and fold the front section of bow back over top while draping the top back around the header. Pull the front corners back tight around header so fabric is smooth around header. (Fig 10, 11)

Step 7: Install the cable anchor and the plastic top flap back on the end of the header with the previously removed hardware. (Fig 12,13)



Installation Instructions

Replacement Top (Part # 9085235)
2010 and Up Unlimited (4 Door)
Replacement Top (Part # 9075235)
2010 and Up JK (2 Door)



(Fig 8)



(Fig 9)



(Fig 10)



(Fig 11)



(Fig 12)



(Fig 13)



Installation Instructions

Replacement Top (Part # 9085235)
2010 and Up Unlimited (4 Door)
Replacement Top (Part # 9075235)
2010 and Up JK (2 Door)

Step 8: Install the foam strip on bottom front corners. (Fig 14)

Step 9: Install the foam pad on each edge of the bottom of the header (Fig 15) Note: there is a driver and a passenger side.



(Fig 14)



(Fig 15)

Step 10: Raise the header back down on the windshield frame. (Do not clamp) Drape the top back completely over the bow assembly. (Fig 16) Note: make sure the pivot assembly on the top on the door surrounds is locked/latched into place. (Fig 17)



(Fig 16)



(Fig 17)

Step 11: Attach the cable spring end to the bracket on the bow, crimp to secure. (Fig 18, 19)



Installation Instructions

Replacement Top (Part # 9085235)
2010 and Up Unlimited (4 Door)
Replacement Top (Part # 9075235)
2010 and Up JK (2 Door)



(Fig 18)



(Fig 19)

Step 12: Clamp the front windshield header down onto windshield frame hooks completely. (Fig 20)

Step 13: Now secure the flap to the middle bow, again using the hardware previously removed. (Fig 21)
(4-Door only)

Step 14: Make sure the rear of the top is centered over the rear bow. Then secure the flaps on the top to the bow using the previously removed hardware. (Fig 22)



(Fig 20)



(Fig 21)



Installation Instructions

Replacement Top (Part # 9085235)
2010 and Up Unlimited (4 Door)
Replacement Top (Part # 9075235)
2010 and Up JK (2 Door)

Step 15: Wrap the front flap around the front part of the bow and fasten secure by fastening the Velcro. (Fig 23)



(Fig 22)



(Fig 23)

Step 16: Pull down the rear corner of the bow assembly from the outside and attach the rear corner of the top by sliding the sewn in extrusion into the body tub rail. (Fig 24)



(Fig 24)



(Fig 25)

Step 17: Start the zipper on the rear quarter windows. Zip closed a few inches. (Fig 25)



Installation Instructions

Replacement Top (Part # 9085235)
2010 and Up Unlimited (4 Door)
Replacement Top (Part # 9075235)
2010 and Up JK (2 Door)

Step 18: Fold the plastic extrusion sewn along the front of the windows into the channel on the door surround. (Fig 26, 27)



(Fig 26)



(Fig 27)



(Fig 28)

Step 19: Zip the windows on completely (Fig 28) and secure the bottom of it by sliding the plastic extrusion on the window into the body tub rail. (Fig 29) and fasten Velcro on top of windows (Fig 30)



(Fig 29)



(Fig 30)



Installation Instructions

Replacement Top (Part # 9085235)
2010 and Up Unlimited (4 Door)
Replacement Top (Part # 9075235)
2010 and Up JK (2 Door)

Step 20: Snap the two rear elastic window straps on the rear bow corners. (Fig 31)



(Fig 31)



(Fig 32)

Step 21: Zip the rear window in and slide the factory tailgate bar onto the bottom of the window. (Fig 32)

Step 22: Attach each end of the tailgate bar into the brackets on each end of the tailgate. (Fig 33) Velcro the flap on the inside of each bottom corner of the rear window. (Fig 34)



(Fig 33)



(Fig 34)

Step 23: Installation is now complete. (Fig 35, 36)



Installation Instructions

Replacement Top (Part # 9085235)
2010 and Up Unlimited (4 Door)
Replacement Top (Part # 9075235)
2010 and Up JK (2 Door)



(Fig 35)



(Fig 36)

Troubleshooting

Due to variances in vehicles and climate conditions the following tips may help during installation.

- Install when temperature is above 70 degrees, The fabric can contract and stretch an inch or more. Any wrinkles will go away once it "relaxes"
- Do not fully clamp the front header down until top is completely on.
- Install with help from a friend.
- Make sure door surrounds are installed correctly.
- Install Side rear windows before installing the rear corners on the body.
- Make mental note on how your OEM top fit.
- Refer to owners' manual for bow assembly operation.

Compliment your new Top with other quality Smittybilt products



Seat Covers



Sure-Steps



Bumpers