

SPEC-D *Tuning*

2010-2012 CHEVY CAMARO LOWER FRONT MESH HOOD GRILLE ALUMINUM INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Drive Ratchet	T20 Socket
6" Extension	Flat Tipped Screwdriver
10mm Socket	Trim Pad Remover
7mm Socket	

Product Part Numbers:

HG-CMR10LW-RS



2010-2012 CHEVY CAMARO LOWER FRONT MESH HOOD GRILLE ALUMINUM INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (2) 10mm bolts location



2. Remove the (2) 10mm bolts



3. (3) T20 screws location



4. Remove the (3) T20 screws



5. Remove the (3) T20 screws



6. Remove the 7mm bolt



7. Remove the 10mm bolt



8. (3) 10mm bolts location



9. Remove the (3) 10mm bolts



10. (2) 10mm bolts location



11. Remove the (2) 10mm bolts



12. (6) Plastic clips location



13. Remove the (6) plastic clips



14. Remove the bumper light and disconnect the bumper light socket



15. Remove the front bumper



16. Electric harness connector location



17. The 7mm bolt location



18. Behind the bumper



19. Plastic tabs location



20. Release the (4) plastic retaining tabs



21. Release the (4) plastic retaining tabs



22. Remove the energy absorber




23. Back of the grill



24. Lower grill mounting tabs



25. Release the mounting tabs

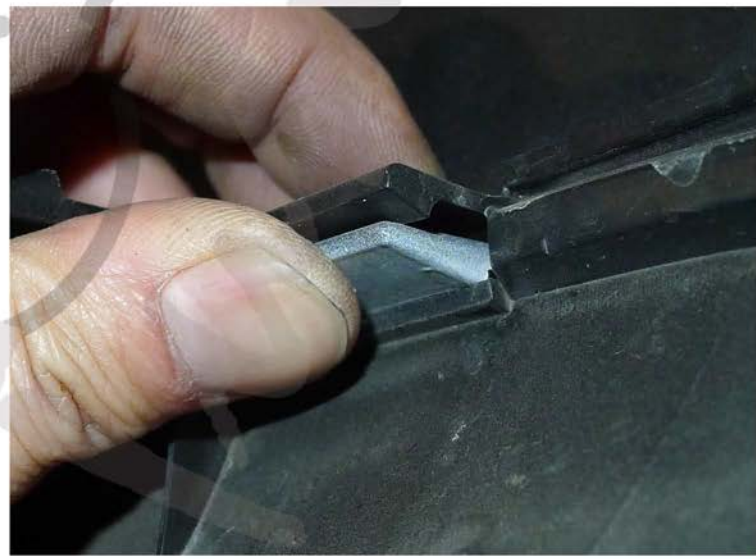

26. Release the mounting tabs



27. Remove the factory lower grill



28. Install the new lower grill in the stock location



29. Replace the energy absorber



30. Connect the electric harness



31. Replace the front bumper



32. Replace the bumper light



33. Replace the (6) plastic clips



34. Tighten the (2) 10mm bolts



35. Tighten the (3) 10mm bolts



36. Tighten the 10mm bolt



37. Tighten the 7mm bolt



38. Tighten the (3) T20 screws



39. Tighten the (2) 10mm bolts



The installation now is complete