

# SPEC-D *Turning*

## 2007-2012 CHEVY SILVERADO **FRONT GRILL** INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

¼" Drive Ratchet

10mm Socket

Trim Pad Remover

Needle Nose Pliers

### Product Part Numbers:

HG-SIV07CVT

HG-SIV07JMVT



# 2007-2012 CHEVY SILVERADO FRONT GRILL INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (8) plastic clips location



2. Remove the (8) plastic clips



3. Remove the plastic radiator cover



4. (4) 10mm bolts location






5. Remove the (4) 10mm bolts




6. Unclip the metal clips from the rear of the front grill

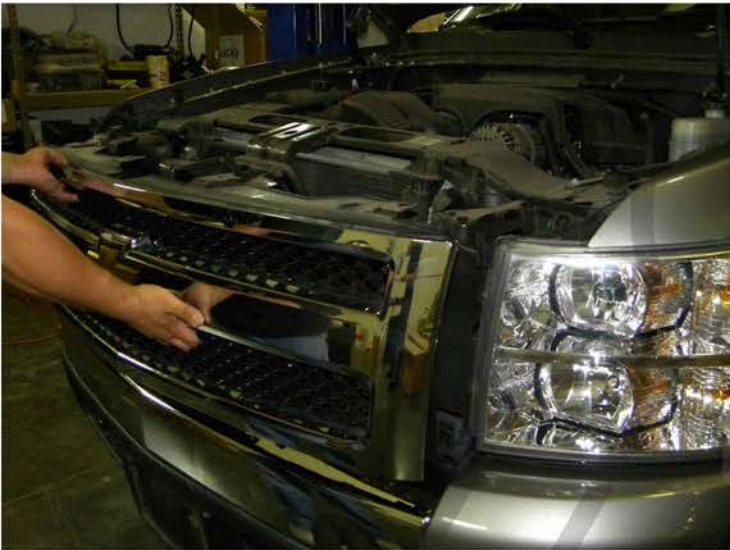


7. Remove the front grill



8. Place new grill in the stock location

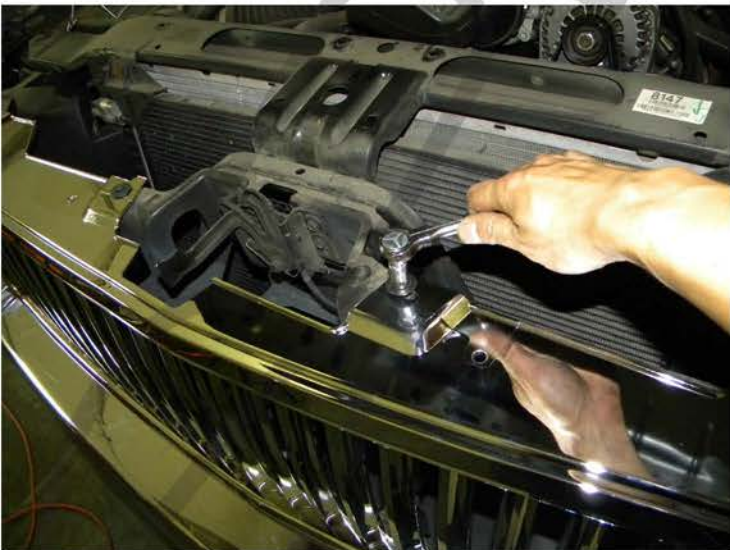

9. Tighten the (4)10mm bolts

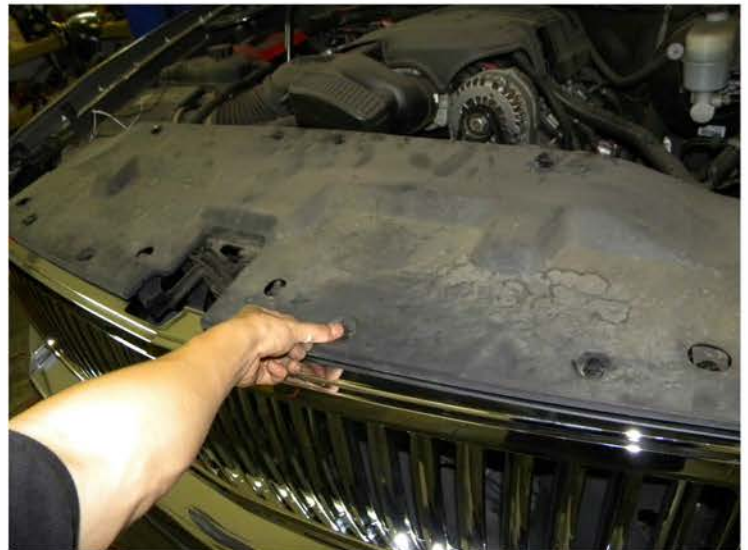

10. Replace the plastic radiator cover and the (8) plastic clips





11. The installation is now complete



SAFETY