

# SPEC-D

*Turning*

## 2003-2005 HONDA ACCORD **FOG LIGHTS** INSTALLATION INSTRUCTIONS



\*If you experience any difficulties that the instructions did not cover, Please seek assistance at local automotive shop.

\*Please wear protection before you work on your vehicle.

\*An assistant is useful when removing the front bumper from your vehicle.

\*Please be cautious when working with the bumper or any parts belonging to the vehicles' body prevent scratching.

\*Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

¼" Drive Ratchet

Phillips Screwdriver

6" Extension

Trim pad remover

10mm Socket

Pliers

Small Flathead Screwdriver

Test Light

### Product Part Numbers:

LF-ACD032OEM-RS



# 2003-2005 HONDA ACCORD FOG LIGHTS INSTALLATION INSTRUCTIONS

\*If you experience any difficulties that the instructions did not cover, Please seek assistance at local automotive shop.

\*Please wear protection before you work on your vehicle.

\*An assistant is useful when removing the front bumper from your vehicle.

\*Please be cautious when working with the bumper or any parts belonging to the vehicles' body prevent scratching.

\*Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. (6) clips and (4) 10mm bolt locations



2. Remove the (6) clips



3. Remove the (4) 10mm bolts



4. Remove the phillips head screw





5. Remove the (10) plastic clips



6. Remove the plastic cover



7. Remove the front bumper



8. Cut out fog light hole



9. Remove the fog light hole cutout



10. Install the fog light outer bracket. (the (2) 10mm bolts)





11. Install the fog light outer bracket the (2) 10mm bolts



12. Secure the fog light onto the braketry. ((4) phillips head screws)



13. Remove the plastic clip from the hood latch cover



14. Remove the hood latch cover



15. Remove the (2) plastic clips from the air duct cover



16. Remove the air duct cover





17. Run the fog light harness through the front bulkhead along the factory harness



18. Remove the 10mm bolt front hood latch




19. Secure the fog light harness ground cable, and tighten the 10mm bolt



20. Zip tie the fog light harness to the factory harness



21. Remove the (2) 10mm bolts

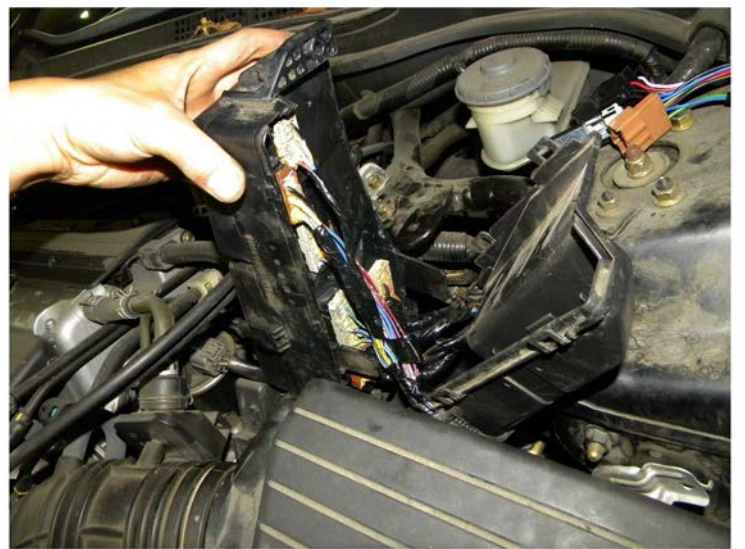

22. Remove the fusebox undercover






23. Remove the (14) pin connector



24. Remove the (20) pin connector




25. Remove the clip from the (14) pin connector

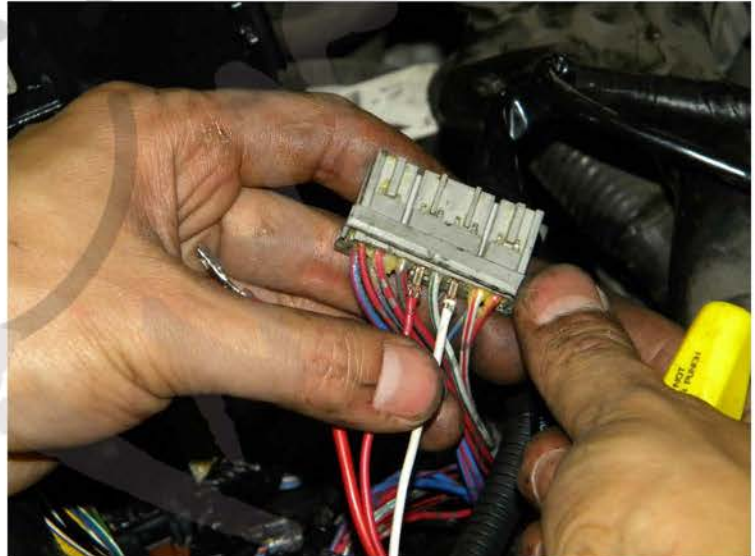

26 Place the thinner red and white wire into the (14) pin connector, lock clip



27. Remove the clip from the 20 pin connector

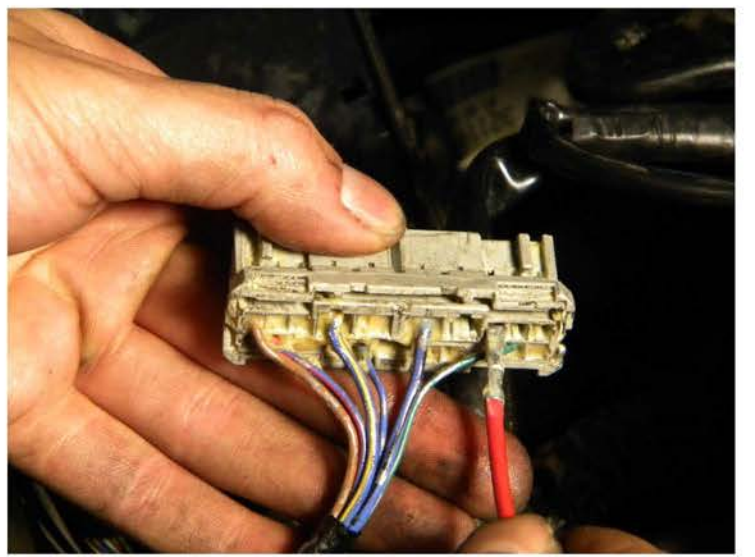


28. Place the thicker red wire in the 20 pin connector, lock clip





29. Reattach the connectors to the fusebox

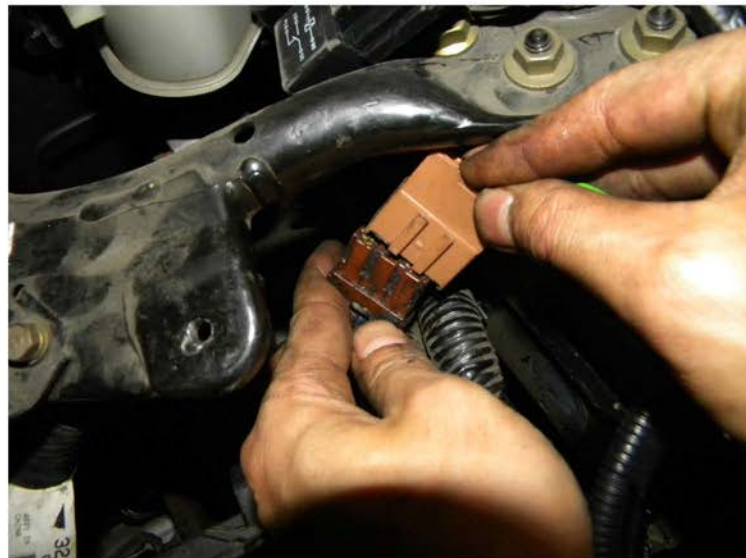

30. Connect the brown 3 pin connectors to the factory harness



31. Replace the fusebox under cover



32. Replace the fuse box and tighten the (2) 10mm bolts



33. Loosen the 10mm bolt from the airbox



34. Slide the fog light harness under the airbox





35. Tighten the 10mm bolt on the airbox



36. Zip tie fog light harness to factory harness



37. Zip tie relays



38. Replace the hood latch cover



39. Replace the air duct cover, (2 clips)



40. Connect the fog lights to the harness





41. Replace the front bumper



42. Replace the plastic radiator cover



42. Replace the (10) plastic clips



44. Replace the phillips head screw



45. Replace the (6) plastic clips



46. Open the fuse box





47. Place the 20 amp fuse in the slot 10



48. Replace the fuse box cover




49. Tighten the (4) 10mm bolts



50. Remove the phillips head screw



51. Remove the plastic panel

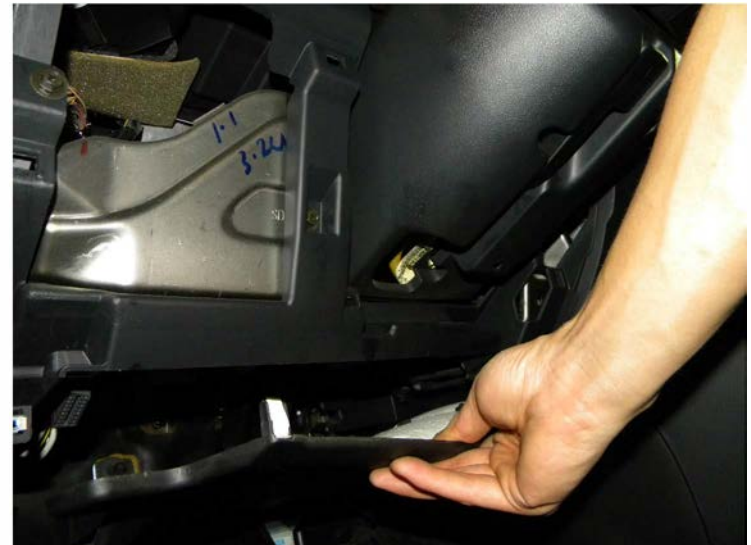

52. Remove the dash under the panel





53. Plastic panel



54. Unclip the switch hole cover



55. Unclip switch hole cover



56. Place the fog light switch into the plastic panel



57. Place the fog light switch into the panel



58. 10mm bolt under the dach







59. Remove the 10mm bolt



60. Attach the switch harness ground cable and tighten the 10mm bolt

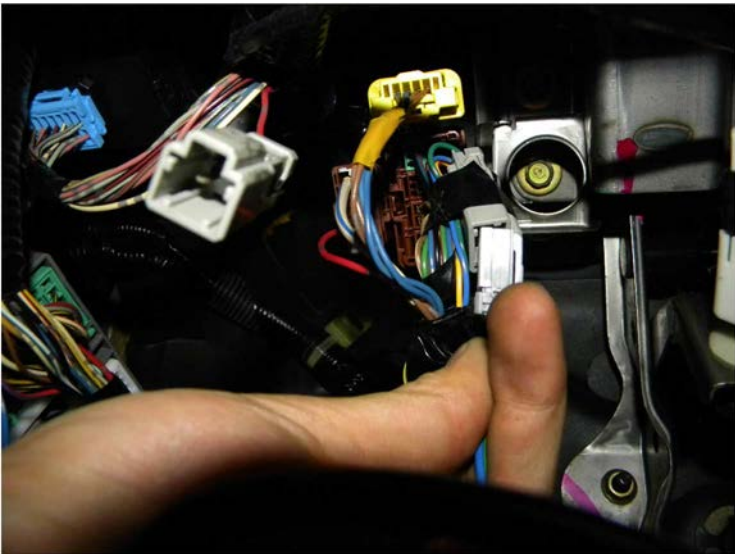

61. Connect the (2) pin connector under the dash

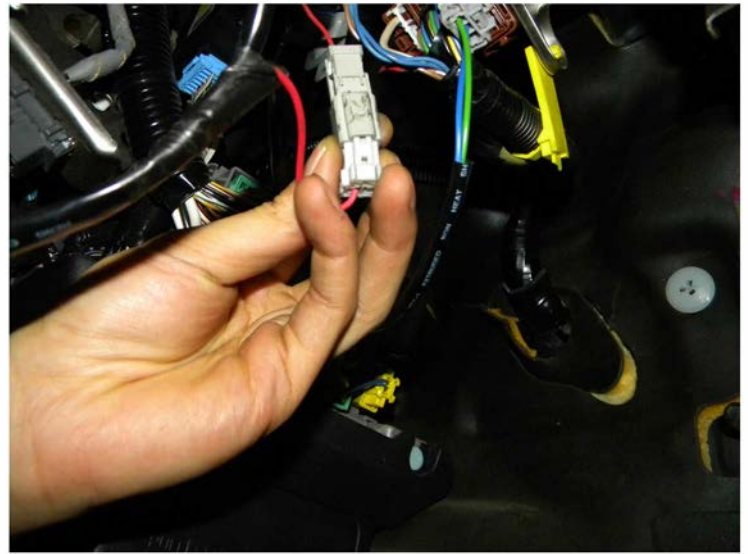

62. Connect the (3) pin connector



63. Pull the switch connector through the hole



64. Replace the dash panel under the cover





65. Connect the switch to the harness



66. Replace the plastic panel



67. Tighten the phillips head screw



68. Please repeat the steps in order from 1 to 67 for the opposite side



69. The installation is now complete