

Installation & CARE

SPEC-D
Tuning

INNOVATE

PERFECTIONAL

SERVICE

2001-2007 DODGE CARAVAN HEADLIGHTS INSTALLATION

BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED


1/4" Ratchet	7 mm socket		
			

PRODUCT NUMBER

2LH-CAR01-RS
2LH-CAR01JM-RS



LET'S START THE INSTALLATIONS

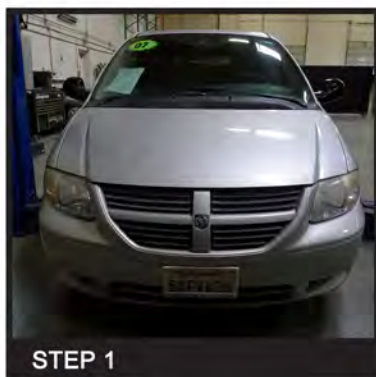


STEP 1

Before installation



STEP 2

Remove the (3) 7mm bolts

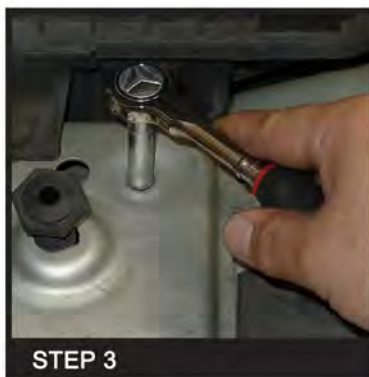


STEP 3

Remove the 7mm bolts



STEP 4

Remove the 7mm bolts

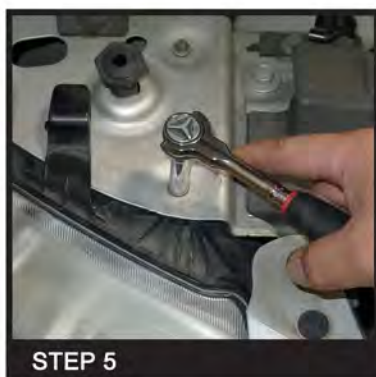


STEP 5

Remove the 7mm bolts




STEP 6

Disconnect the headlight harness and socket then remove the factory head-light

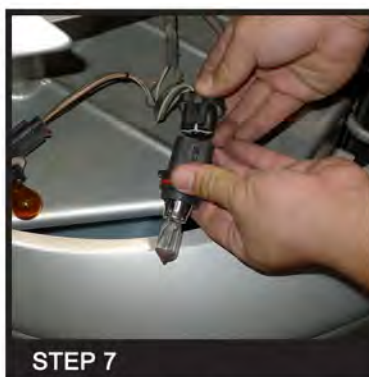


STEP 7

Remove the headlights bulbs from the harness

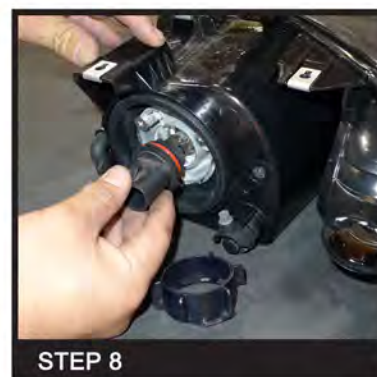

STEP 8

Place the headlight bulbs to the new headlight



STEP 10

STEP 11

STEP 12

STEP 13

WWW.SPECDTUNING.COM