

INSTALLATION & CARE

2013-2016 DODGE DART OE STYLE HEADLIGHT INSTALLATION INSTRUCTION

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	10 mm Socket	8 mm Socket	Plastic Pry Bar
			
12" Socket Extension			
			


PRODUCT NUMBER

2LH-DRT13-RS
2LH-DRT13G-RS
2LH-DRT13JM-RS

2LH-DRT13JM-L-RS
2LH-DRT13JM-R-RS



LET'S START THE INSTALLATION

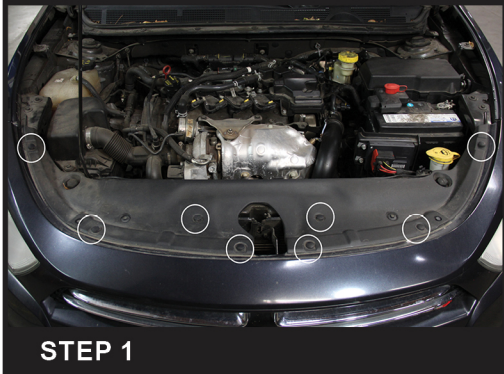


STEP 1

Remove the eight plastic fasteners on the radiator upper support cover



STEP 2

Remove the radiator upper support cover

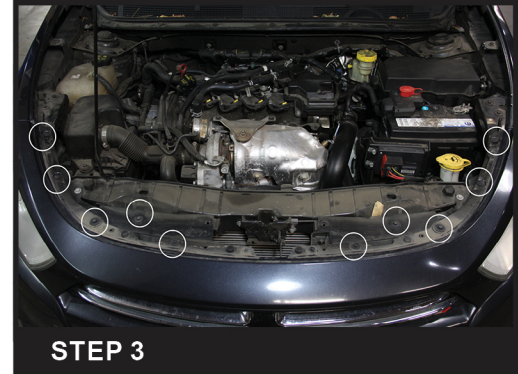


STEP 3

Remove the four plastic fasteners and the six 10mm bolts at the top of the front bumper




STEP 4

Unseat the front bumper top edge

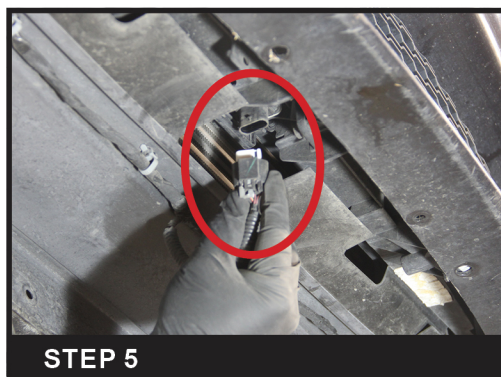

STEP 5

Disconnect the connector located underneath the front bumper

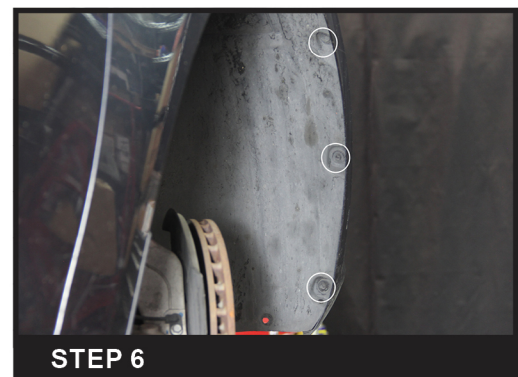

STEP 6

Remove the three 8mm bolts on the fender liner



STEP 7

Remove the 10mm front bumper mounting bolt



STEP 8

Grab the edge to unseat the front bumper, repeat for the opposite side



STEP 9

Remove the front bumper



STEP 10

Remove the three 10mm bolts on the headlight upper bracket, and remove the headlight upper bracket



STEP 11

Remove the 8mm headlight mounting bolt



STEP 12

Remove the 10mm bolt at the side of the headlight



STEP 13

Remove the plastic fastener at the top of the headlight



STEP 14

Disconnect the headlight harness and remove the factory headlight housing



STEP 15

Transfer the 9005 bulb from the factory headlight to the new headlight



STEP 16

Connect the headlight harness and seat the new headlight assembly in place



STEP 17

Reinstall the plastic fastener at the top of the headlight




STEP 18

Reinstall the 8mm headlight mounting bolt




STEP 19

Reinstall the headlight upper bracket

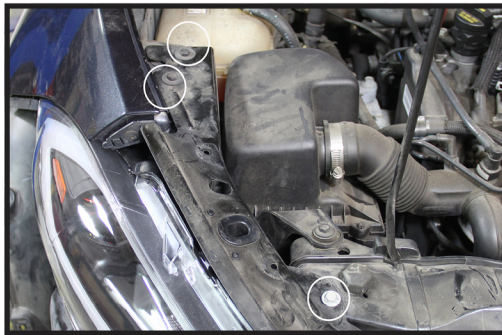


STEP 20

Reinstall the three 10mm bolts on the headlight upper bracket

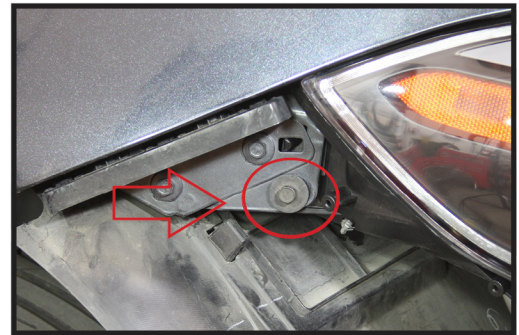

STEP 21

Reinstall the 10mm bolt at the side of the headlight

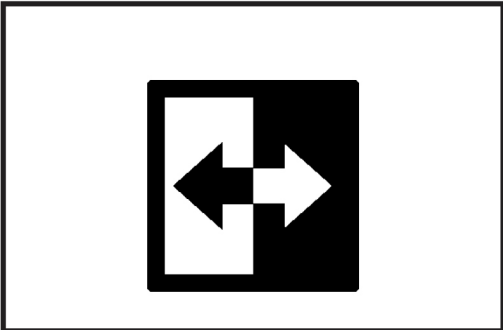

STEP 22

Please repeat the steps from 4 to 21 for the opposite side



STEP 23

Reinstall the front bumper



STEP 24

Buckle the side of the front bumper




STEP 25

Buckle the top edge of the front bumper




STEP 26

Reinstall the 10mm front bumper mounting bolt

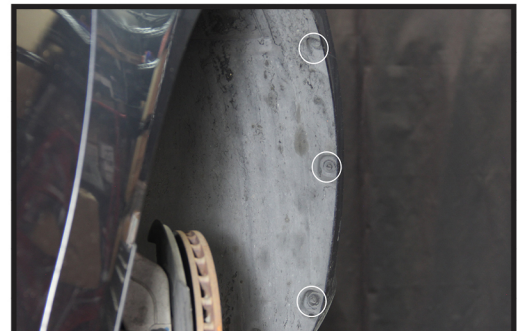

STEP 27

Reinstall the three 8mm bolts on the fender liner

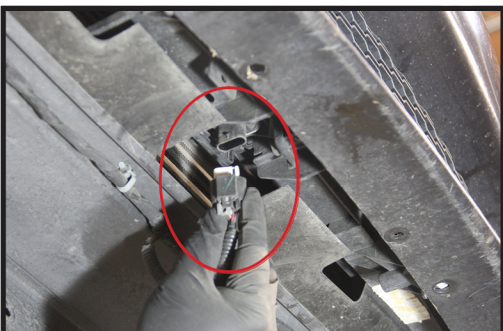

STEP 28

Reconnect the connector located underneath the front bumper




STEP 29

Reinstall the four plastic fasteners and the six 10mm bolts at the top of the front bumper



STEP 30

Reinstall the radiator upper support cover

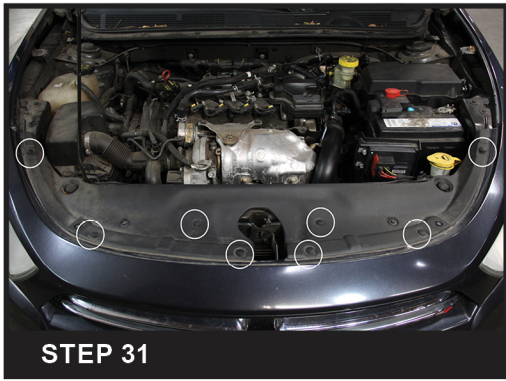


STEP 31

STEP 32

Reinstall the eight plastic fasteners on the radiator upper support cover

Close the hood to complete the installation

2013-2016 DODGE DART OE STYLE HEADLIGHT INSTALLATION INSTRUCTION

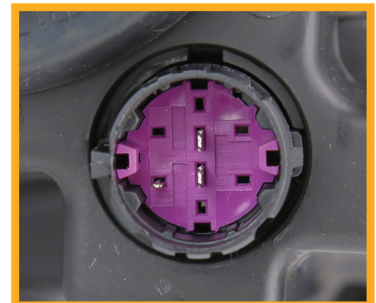

 **BEAM ADJUSTER**