

# SPEC-D *Tuning*

## 2008-UP HONDA ACCORD 2DR PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

\*If you experience any difficulties that the instructions did not cover, Please seek assistance at local automotive shop.

\*Please wear protection before you work on your vehicle.

\*An assistant is useful when removing the front bumper from your vehicle.

\*Please be cautious when working with the bumper or any parts belonging to the vehicles' body prevent scratching.

\*Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



### TOOLS AND SUPPLIES REQUIRED

Trim Pad Remover

Flat head Screwdriver

¼" Drive Ratchet

10mm Socket

Phillips Screwdriver

If your Headlight is Halo type, you also need:

Wire Stripper

Wire Crimper

4 Blue Quick Splice Wire Connectors

4 Blue Male Quick Wire Connectors

4 Blue Female Quick Wire Connectors

2 Red Wires (8 inch)

2 Black Wires (8 inch)

### Product Part Numbers:

2LHP-ACD082JM-TM

2LHP-ACD082-TM

2LHP-ACD082G-TM



# 2008-UP HONDA ACCORD 2DR PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

- \*If you experience any difficulties that the instructions did not cover, Please seek assistance at local automotive shop.
- \*Please wear protection before you work on your vehicle.
- \*An assistant is useful when removing the front bumper from your vehicle.
- \*Please be cautious when working with the bumper or any parts belonging to the vehicles' body prevent scratching.
- \*Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. (10) plastic clips location



2. Remove the (10) plastic clips



3. Phillips head screw location



4. Remove the phillips head screw





5. (7) Plastic clips location



6. Remove the (7) plastic clips



7. Tug on the side of the front bumper



8. Remove the front bumper



9. (6) plastic clips location




10. Remove the (6) plastic clips






11. Remove the plastic moulding

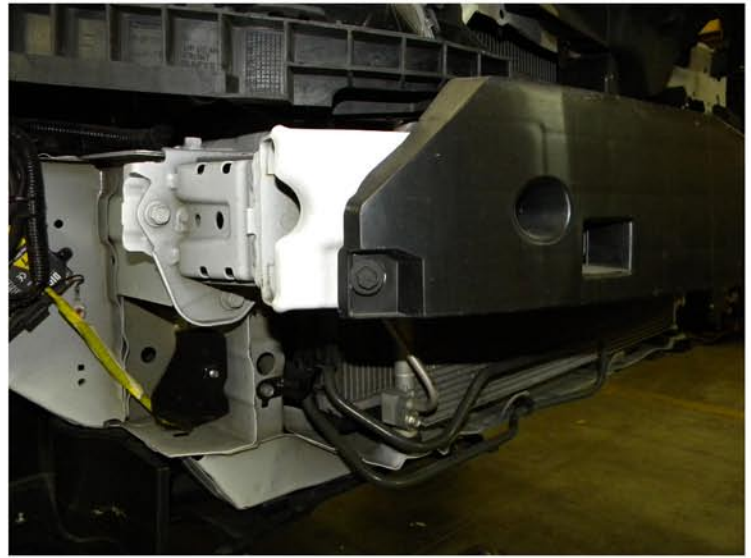

12. 10mm bolt location

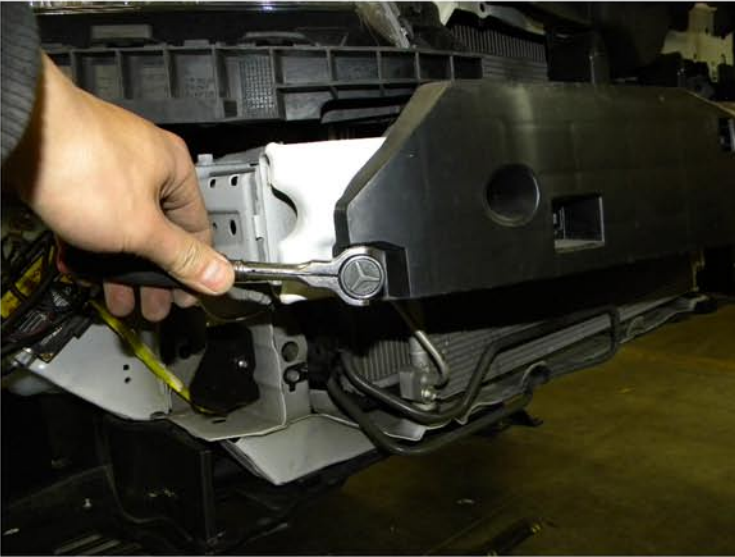

13. Remove the 10mm bolt



14. Remove the impact absorber



15. Place the new headlight in the stock location



16. Remove the 10mm bolt





17. 10mm bolt location



18. Remove the 10mm bolt



19. 10mm bolt location



20. Remove the 10mm bolt



21. Remove the headlight and unplug the headlight harness



22. Disconnect the headlight harness





23. Remove the (2) 10mm bolts



24. Remove the headlight bracket



25. Place the bracket on the new headlight and tighten the (2) 10mm bolts



26. Tighten the (2) 10mm bolts



27. Connect the headlight harness to the new headlight  
Please see the Halo and L.E.D installation instructions  
If your headlights don't have HALO or L.E.D. You can skip it



28. Connect the headlight harness to the new headlight





29. Connect the headlight harness to the new headlight



30. Connect the headlight harness to the new headlight



31. Place the new headlight in the stock location



32. Tighten the 10mm bolt



33.. Tighten the 10mm bolt




34. Tighten the 10mm bolt





35. Replace the impact absorber

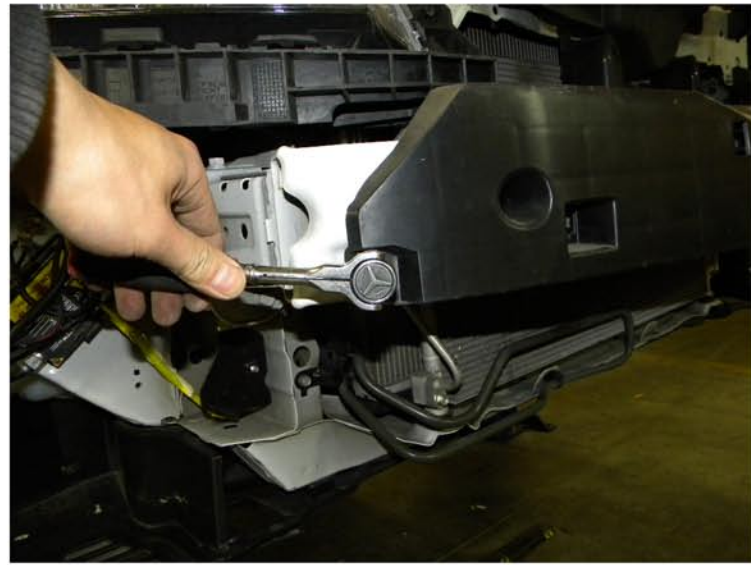


36. Tighten the 10mm bolt




37. Remove the plastic moulding



38. Replace the (6) plastic clips

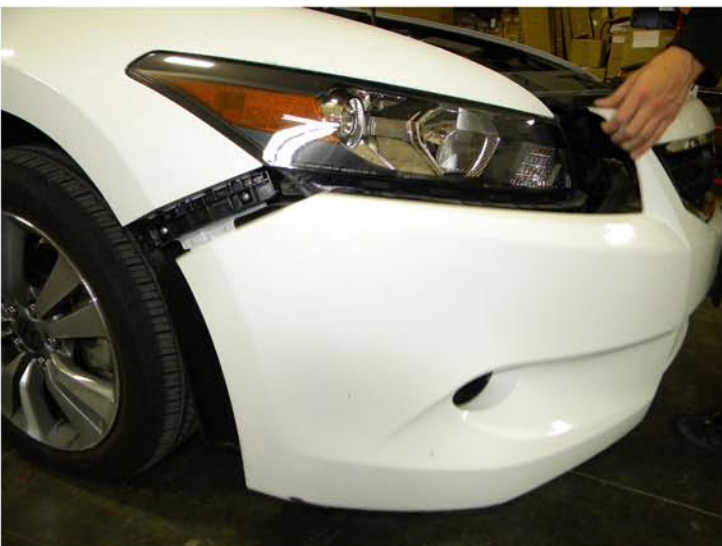

39. Replace the front bumper

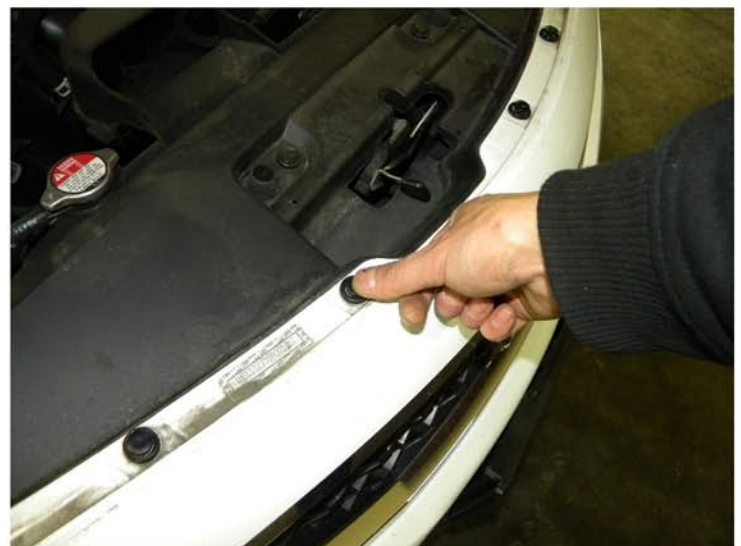

40. Replace the (7) plastic clips





41. Tighten the phillips head screw



42. Replace the (10) plastic clips

Please repeat the steps in order from 1 to 42 for the opposite side



43.. The installation is now complete

