

INSTALLATION & CARE

2007-2013 AVALANCHE LED PROJECTOR HEADLIGHT INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	7 mm socket	10 mm socket	6" Extension
Trim Pad Remover			

PRODUCT NUMBER

2LHP-AVA07-G2-TM
2LHP-AVA07G-G2-TM

2LHP-AVA07BK-G2-TM
2LHP-AVA07JM-G2-TM



LET'S START THE INSTALLATION



STEP 1

Remove the six 10mm bolts



STEP 2

Remove the two 7mm bolts and two plastic clips at the side of the front bumper



STEP 3

Gently pull out the side of the front bumper



STEP 4

Remove the 10mm headlight mounting bolt



STEP 5

Remove two 10mm headlight mounting bolts at the top



STEP 6

Unseat the factory headlight housing




STEP 7

Disconnect the headlight harness and remove the factory headlight housing



STEP 8

Remove the headlight harness from the factory headlights

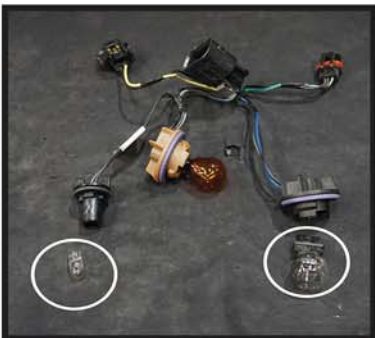

STEP 9

Remove the parking light bulbs and daytime running light bulbs from the harness



STEP 10

Connect the T10 parking light plug and the daytime running light plug from the new headlight housing



STEP 11

Connect headlight harness



STEP 12

Seat the new headlight assembly in place




STEP 13

Reinstall the two 10mm headlight mounting bolts at the top



STEP 14

Reinstall the 10mm headlight mounting bolt at the bottom of the headlights

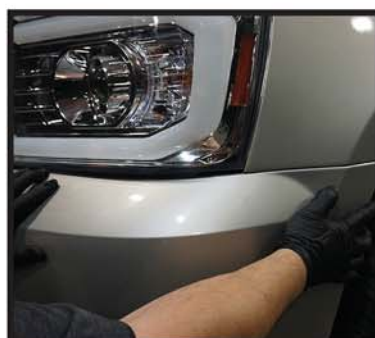


STEP 15

Reinstall the front bumper



STEP 16

Reinstall the two 7mm bolts and the two plastic clips at the side of the front bumper

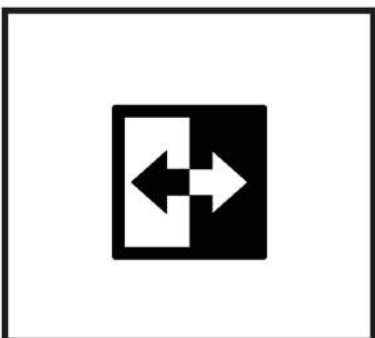

STEP 17

Please repeat the steps from 2 to 16 for the opposite side




STEP 18

Reinstall the six 10mm bolts



STEP 19

Close the hood to complete installation

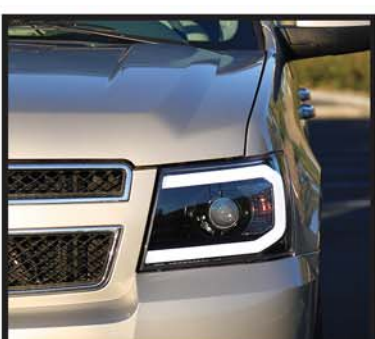

INSTALLATION & CARE

2007-2013 AVALANCHE LED PROJECTOR HEADLIGHT INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

2007-2013 AVALANCHE LED PROJECTOR HEADLIGHT INSTALLATION INSTRUCTIONS

