

Installation & CARE

2007-2013 CHEVY AVALANCHE/2007-2014 TAHOE SUBURBAN INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	7 mm socket	10 mm socket	Trim Pad Remover
			
6" Socket Extension			
			

PRODUCT NUMBER

2LH-AVA07-RS
2LH-AVA07G-RS
2LH-AVA07JM-RS
2LH-AVA07SM-RS




LET'S START THE INSTALLATION



STEP 1

Remove the six 10mm bolts

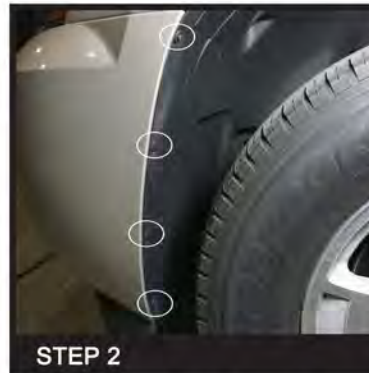

STEP 2

Remove the two 7mm bolts and the two plastic clips at the side of the front bumper



STEP 3

Gently pull out the side of the front bumper



STEP 4

Remove the 10mm headlight mounting bolt



STEP 5

Remove the two 10mm headlight mounting bolts at the top



STEP 6

Unseat the factory headlight housing



STEP 7

Disconnect the headlight harness and remove the factory headlight housing




STEP 8

Remove the headlight harness and the headlight bulbs from the factory headlight



STEP 9

Reinstall the headlight harness and headlight bulbs to the new headlight's housing

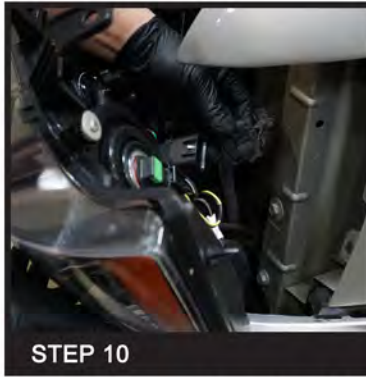

STEP 10

Connect the headlight harness and seat the new headlight assembly in place




STEP 11

Reinstall the two 10mm headlight mounting bolts at the top of the headlight




STEP 12

Reinstall the 10mm headlight mounting bolt at the bottom of the headlight

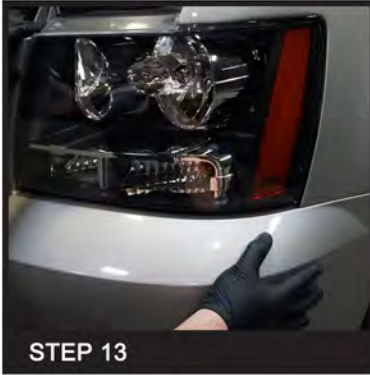

STEP 13

Reinstall the front bumper

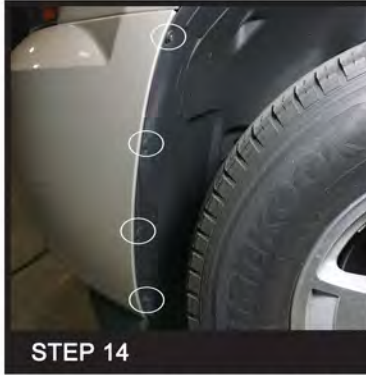

STEP 14

Reinstall the two 7mm bolts and the two plastic clips at the side of the front bumper



STEP 15

Please repeat the steps from 2 to 14 for the opposite side



STEP 16

Reinstall the six 10mm bolts



STEP 17

Close the hood to complete installation

Installation & CARE

2007-2013 CHEVY AVALANCHE/2007-2014 TAHOE SUBURBAN INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

2007-2013 CHEVY AVALANCHE/2007-2014 TAHOE SUBURBAN INSTALLATION INSTRUCTIONS

