

SPEC-D *Tuning*

2009-2010 TOYOTA COROLLA PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Trim Pad Remover
Phillips Screwdriver
¼" Drive Ratchet
10mm Socket


If your Headlight is Halo type, you also need:

| | |
|-------------------------------------|-------------------------------------|
| Wire Stripper | 4 Blue Male Quick Wire Connectors |
| Wire Crimper | 4 Blue Female Quick Wire Connectors |
| 4 Blue Quick Splice Wire Connectors | 2 Red Wires (8 inch) |
| | 2 Black Wires (8 inch) |

Product Part Numbers:

2LHP-COR09JM-TM

2LHP-COR09-TM

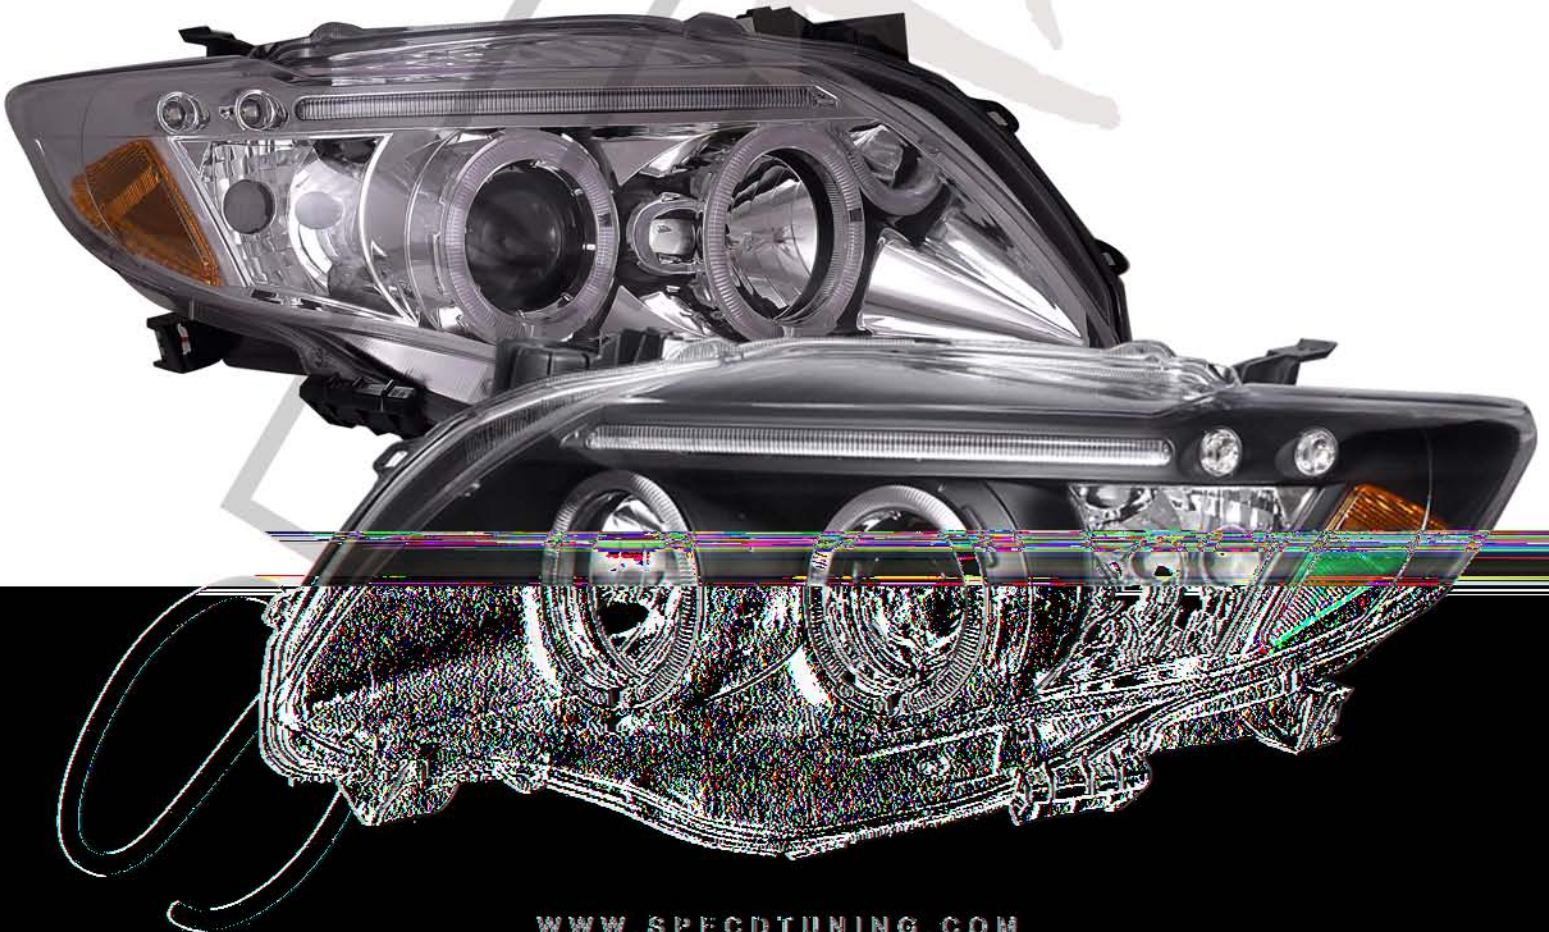

2009-2010 TOYOTA COROLLA PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (4) 10mm bolts location



2. Remove the (4) 10mm bolts



3. (2) plastic clips location



4. Remove the (2) plastic clips



5. (2) plastic clips location



6. Remove the (2) plastic clips



7. (4) phillips head screws location




8. Remove the (4) phillips head screws



9. Plastic clips hidden under the weather strip



10. Remove the (9) plastic clips

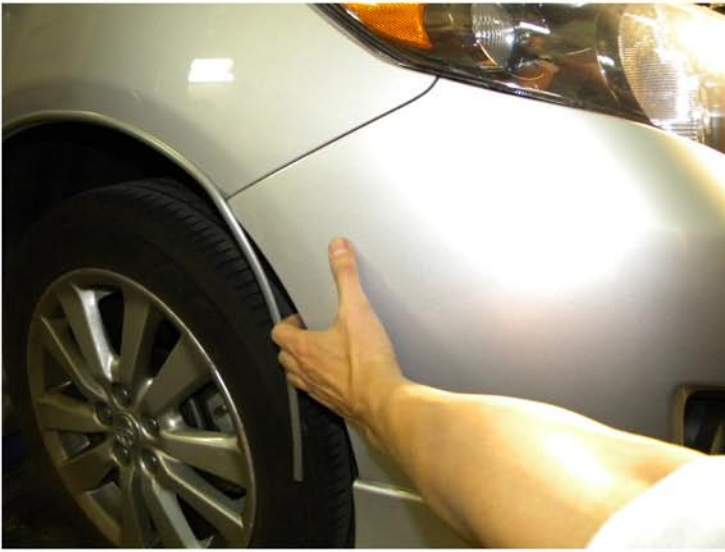

11. Tug on the side of the front bumper



12. Disconnect the fog light harness



13. Remove the front bumper



14. 10mm bolt location



15. Remove the 10mm bolt



16. (2) 10mm bolts location



17. Remove the (2) 10mm bolts



18. Disconnect the headlight harness and plug in to the new headlight



19. Connect the headlight harness to the new light

Please see the Halo and L.E.D installation instruction
If your headlights don't have HALO or L.E.D. You can skip it



20. Tighten the (2) 10mm bolts



21. Tighten the 10mm bolt



22. Replace the front bumper



23. Tighten the (4) phillips head screws



24. Replace the (9) plastic clips



25. Replace the (2) plastic clips



26. Replace the (2) plastic clips



27. Tighten the (4) 10mm bolts
Please repeat the step in order from 1 to 27 for
the opposite side



28. The installation is now complete