

# SPEC-D *Tuning*

## 2011 AND UP TOYOTA COROLLA PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

Trim Pad Remover  
Phillips Screwdriver  
¼" Drive Ratchet  
10mm Socket

If your Headlight is Halo type, you also need:

|                                     |                                     |
|-------------------------------------|-------------------------------------|
| Wire Stripper                       | 4 Blue Male Quick Wire Connectors   |
| Wire Crimper                        | 4 Blue Female Quick Wire Connectors |
| 4 Blue Quick Splice Wire Connectors | 2 Red Wires (8 inch)                |
|                                     | 2 Black Wires (8 inch)              |

### Product Part Numbers:

2LHP-COR11JM-TM

2LHP-COR11-TM

2LHP-COR11G-TM





## 2011 AND UP TOYOTA COROLLA PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop


Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

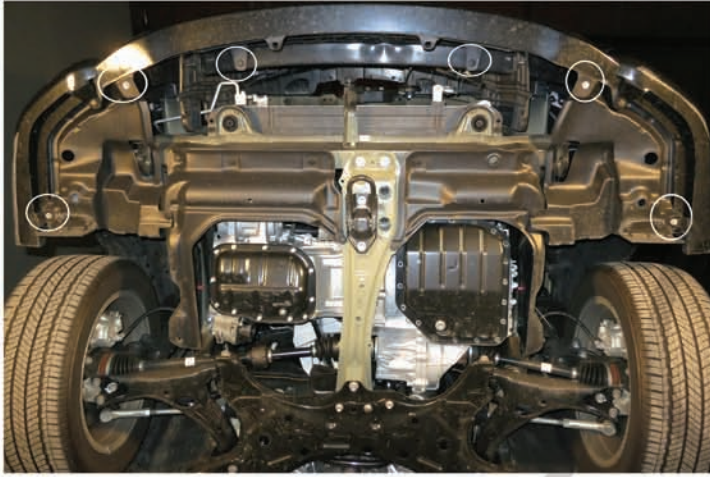

1. (6) 10mm bolt locations. Remove (6) bolts



2. (2) plastic clip locations



3. (2) Plastic clip locations



4. Remove the (4) plastic clips






5. Remove the (3) plastic clips, (2) phillips screws, and (2) 10mm bolts



6. Remove the (3) plastic clips, (2) phillips screws, and (2) 10mm bolts



7. Disconnect the foglight harness

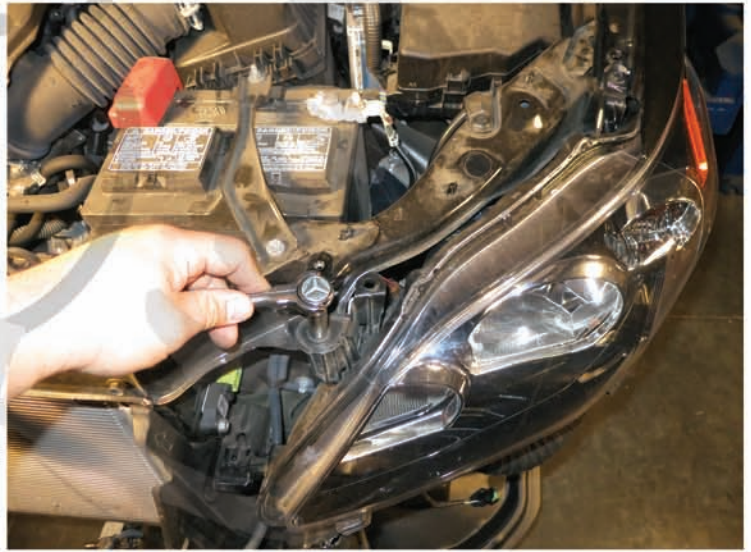

8. Remove the (2) 10mm bolts



9. Remove the 10mm bolt



10. Release locating tab





11. Release the locating tab



12. Disconnect the headlight harness



13. Remove the factory headlight



14. Remove the light socket



15. Remove the light socket



16. Plastic mounting bracket and (2) phillips head screw locations





17. Place the light socket into the new headlight and connect the headlight harness to the new headlight.

Please see the Halo and L.E.D installation instructions  
If your headlights don't have HALO or L.E.D. You can skip it



18. Place the new headlight in stock location



19. Connect the headlight harness to the new light



20. Replace the front bumper



21. Replace everything in reverse order. Please repeat the steps in order from 1 to 21 for the opposite side.  
The installation is now complete.