

# SPEC-D *Tuning*

## 2008-2013 CADILLAC CTS PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

3/8" Drive Ratchet

Flat Tipped Screwdriver

6" Extension

Handy Remover

10mm Socket

If your Headlight is Halo type, you also need:

Wire Stripper

4 Blue Female Quick Wire Connectors

Wire Crimper

2 Red Wires (8 inch)

4 Blue Quick Splice Wire Connectors

2 Black Wires (8 inch)

4 Blue Male Quick Wire Connectors

### Product Part Numbers:

2LHP-CTS08JM-RS

2LHP-CTS08-RS





## 2008-2013 CADILLAC CTS PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. Before



2. (6) plastic clips location



3. Remove the (6) plastic clips



4. Remove the (6) plastic clips






5. (2) plastic clips location



6. Remove the (2) plastic clips

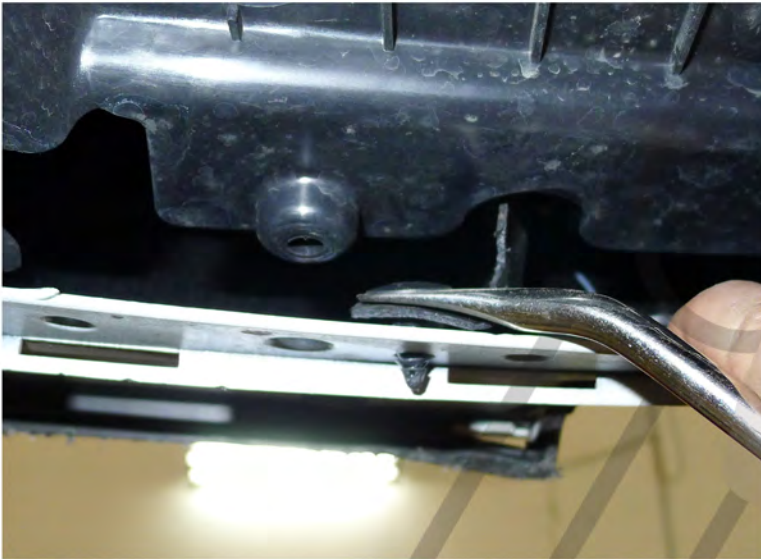

7. Remove the (2) plastic clips



8. (2) plastic clips location



9. Remove the (2) plastic clips



10. Remove the (2) plastic clips





11. Pull the fender liner aside



12. Remove the 10mm bolt



13. (6) plastic clips location



14. Remove the (6) plastic clips



15. Remove the weather strip from the plastic cover



16. Remove the plastic cover





17. (2) plastic clips and the (2) 10mm bolts location



18. Remove the (2) plastic clips



19. Remove the (2) 10mm bolts



20. Remove the (2) 10mm bolts



21. Remove the front bumper



22. 10mm nut and 10mm bolt location





23. Remove the 10mm bolt



24. Remove the 10mm nut



25. Remove the 10mm bolt



26. Remove the stock headlight



27. Disconnect the headlight harness



28. Connect the headlight harness to the new headlight  
Please see the "Halo and L.E.D installation instructions"  
If your headlights don't have HALO or L.E.D. you can skip it





29. Place the new headlight in the stock location



30. Tighten the 10mm bolt



31. Tighten the 10mm bolt



32. Tighten the 10mm nut



33. Replace the front bumper



34. Replace the plastic cover





35. Replace the weathers trip



36. Replace the (4) plastic clips



37. Replace the (6) plastic clips



38. Tighten the 10mm bolt



39. Replace the (2) plastic clips



40. Replace the (6) plastic clips





41. Replace the (6) plastic clips



42. Prep lace the (2) plastic clips  
Please repeat the steps from 1 to 42 for the opposite side



43. The installation is now complete