

SPEC-D *Tuning*

2006-2011 HONDA CIVIC 4DR. PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Drive Ratchet

Phillips Screwdriver

If your Headlight is Halo type, you also need:

4 Blue Male Quick Wire Connectors

6" Extension

Trim Pad Remover

Wire Stripper

4 Blue Female Quick Wire Connectors

10mm Socket

Wire Crimper

2 Red Wires (8 inch)

5mm Allen socket

4 Blue Quick Splice Wire Connectors

2 Black Wires (8 inch)

Product Part Numbers:

2LHP-CV064JM-TM

2LHP-CV064-TM



2006-2011 HONDA CIVIC 4DR PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (8) Plastic clips location



2. Remove the (8) plastic clips



3. Remove the phillips head screw




4. (4) Plastic clips location



5. Remove the (4) plastic clips



6. Remove the plastic moulding

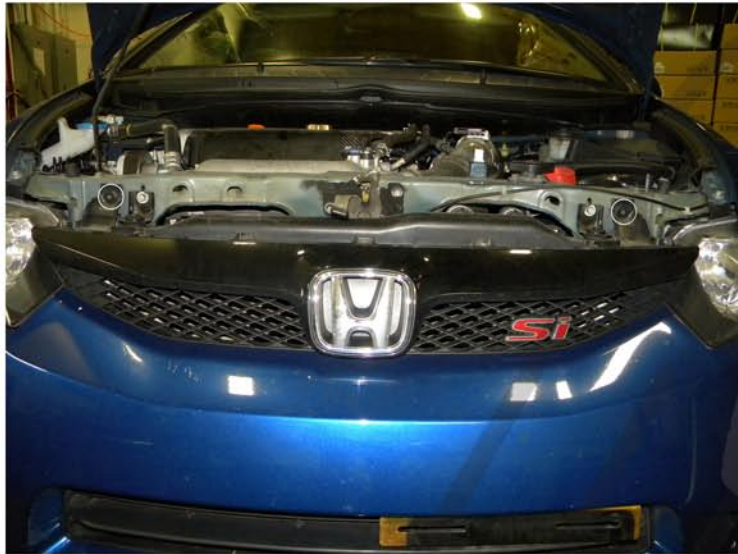

7. (2) 5mm allen head bolts location



8. Remove the 5mm allen head bolt



9. Tug on the sides of the front bumper



10. Disconnect the fog light harness



11. Remove the front bumper



12. (2) 10mm bolts location



13. Remove the 10mm bolt




14. Remove the other 10mm bolt



15. 10mm bolt location



16. Remove the 10mm bolt

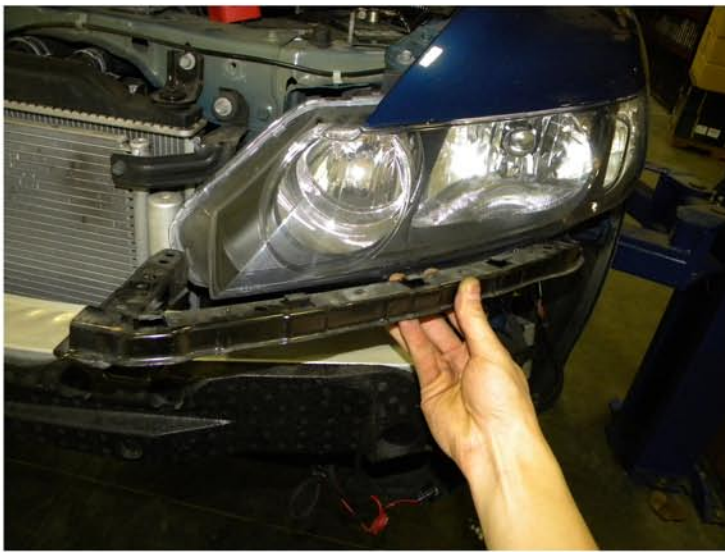

17. Remove the metal bracket



18. (2) 10mm bolts location



19. Remove the (9) 10mm bolts



20. Remove the 10mm bolt



21. Remove the headlight



22. Disconnect the headlight harness



23. Connect the headlight harness to the new headlight
Please see the "Halo and L.E.D installation instructions"
If your headlights don't have HALO or L.E.D. You can skip this step



24. Tighten the (2) 10mm bolts



25. Replace the metal bracket



26. Tighten the 10mm bolt



27. Tighten the 10mm bolt



28. Tighten the 10mm bolt



29. Connect the fog light harness



30. Replace the front bumper



31. Tighten the 5mm allen head bolt



32. Replace the plastic moulding and the (4) plastic clips



33. Tighten the phillips head screws and replace the (8) plastic clips
Please repeat the steps in order from 1 to 33 for the opposite side



34. The installation is now complete