

2012 HONDA CIVIC 2DR 4DR PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.

An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



Product Part Numbers:

2LHP-CV12JM-8-RS





2012 AND UP CIVIC 2DR 4DR PROJECTOR HEADLIGHTS

INSTALLATION INSTRUCTIONS


If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.

An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

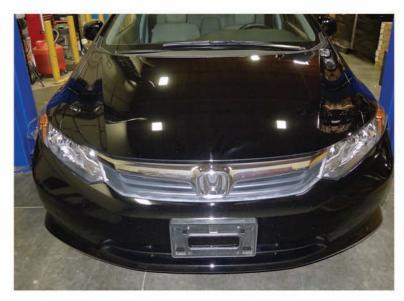



1. Before 2. (12) plastic clips location



4. Remove the (12) plastic clips



5. Remove the phillips head screw



5. (2) 5mm allen bolt location



6. Remove the (2) 5mm allen bolts



7. (2) plastic clips location



8. Remove the (2) plastic clips



9. Remove the front bumper



10. Remove the impact absorbing foam



11. Remove the 10mm bolt



12. Remove the 10mm bolt




13. Remove the 10mm bolt



14. Remove the headlight



15. Disconnect the headlight harness

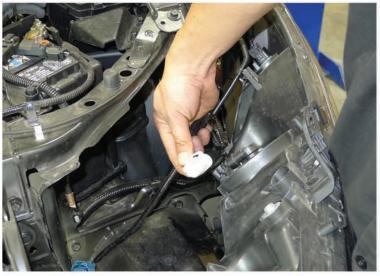

16. Disconnect the headlight harness



17. The 10mm bolt location



18. Remove the 10mm bolt



19. Remove the headlight bracket



20.. Install the headlight bracket on the new headlight



21. Connect the headlight harness to the new headlight Please see the "L. E. D. headlights installation instructions" If your headlights don't have L.E.D. You can skip the installation instruction.



22. Connect the headlight harness to the new headlight



23. Connect the headlight harness to the new headlight



24.Place the new headlight in the stock location



25. Tighten the 10mm bolt



26.. Tighten the 10mm bolt




27. Tighten the 10mm bolt



28. Replace impact absorber and place the front bumper



29. Replace the (2) 5mm allen bolts

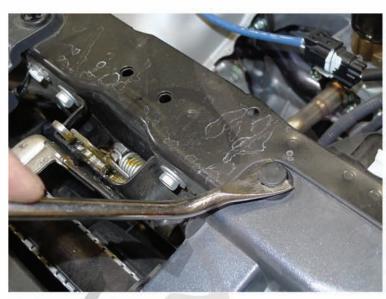

30. Replace the (2) plastic clips



31. Replace the (2) phillips head screws



32. Replace the (12) plastic clips



33. Replace the (12) plastic clips
Please repeat the steps from 1 to 33 for the opposite side



34. The installation now is complete