

SPEC-D *Tuning*

1992-1995 HONDA CIVIC 1PC PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

*If you experience any difficulties that the instructions did not cover, Please seek assistance at local automotive shop.

*Please wear protection before you work on your vehicle.

*An assistant is useful when removing the front bumper from your vehicle.

*Please be cautious when working with the bumper or any parts belonging to the vehicles' body prevent scratching.

*Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



TOOLS AND SUPPLIES REQUIRED

¼" Drive Ratchet
10mm Socket
Phillips Screwdriver

If your Headlight is Halo type, you also need:

Wire Stripper
Wire Crimper
4 Blue Quick Splice Wire Connectors
4 Blue Male Quick Wire Connectors

4 Blue Female Quick Wire Connectors
2 Red Wires (8 inch)
2 Black Wires (8 inch)

Product Part Numbers:

2LHP-CV923JM-TM
2LHP-CV923-TM
2LHP-CV923G-TM



1992-1995 HONDA CIVIC 1PC PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (2) 10mm bolts location



2. Remove the (2) 10mm bolts




3. Remove the Phillips head screw



4. (5) Phillips head screws location



5. Remove the (5) phillips head screws

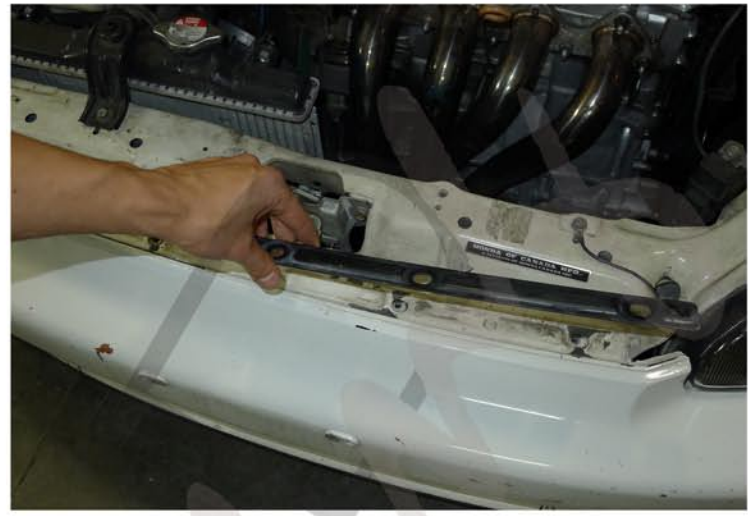

6. Remove the metal bracket



7. Remove the front bumper



8. (2) 5mm allen head bolt location



9. Remove the phillips head screws



10. Remove the corner light



11. Remove the front bumper




12. (2) 10mm bolts location



13. Remove the (2) 10mm bolts



14. Remove the metal bracket

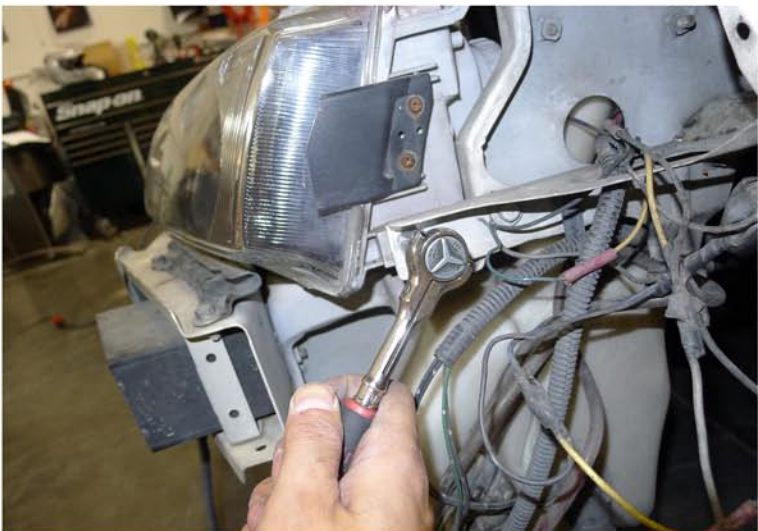

15. Remove the 10mm bolts




16. Remove the (2) 10mm bolts



17. Remove the headlight



18. Disconnect the headlight harness

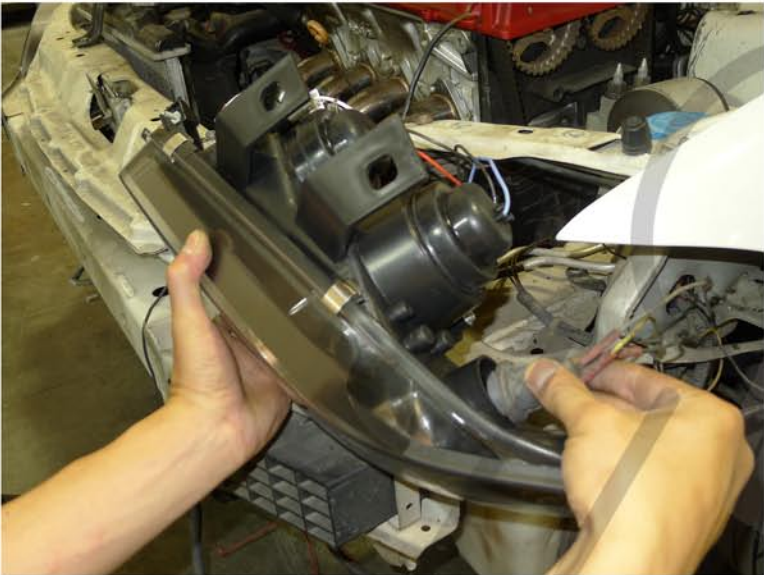


19. Install the corner light socket in the new headlight
Please see the Halo and L.E.D installation instructions
If your headlights don't have HALO or L.E.D. You can skip it



20. Connect the headlight harness




21. Place the new headlight in the stock location

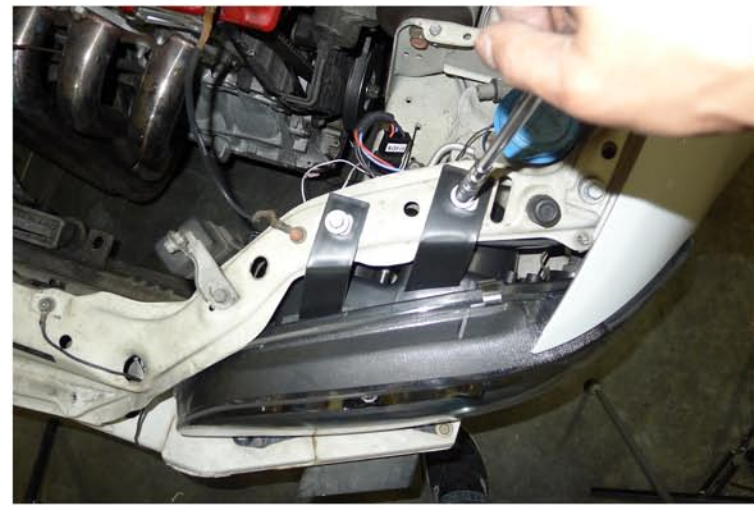

22. Tighten the (2) 10mm bolts



23. Replace the (10) plastic clips

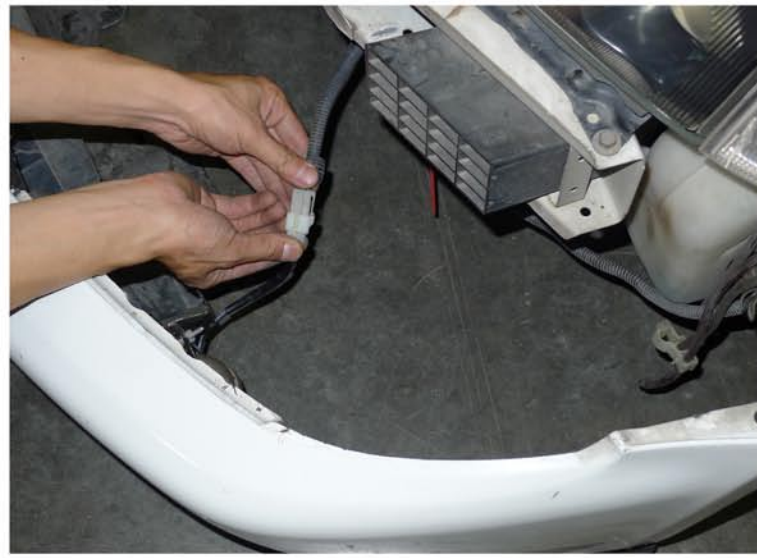

24. Connect the fog light harness



25. Replace the front bumper



26. Replace the metal bracket and tighten the (5) phillips head screws



27. Tighten the phillips head screw



28. Tighten the (2) 10mm bolts



29. The installation is now complete

Please repeat the steps in order from 1 to 28 for the opposite side