

# INSTALLATION & CARE

## 2013-2016 DODGE DART DRL PROJECTOR HEADLIGHT WITH SWITCHBACK & BREATHING EFFECT

### BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.


### TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	10 mm Socket	8 mm Socket	Plastic Pry Bar
			
12" Socket Extension			
			

### PRODUCT NUMBER

2LHP-DRT13-SQ-RS  
2LHP-DRT13G-SQ-RS  
2LHP-DRT13JM-SQ-RS

### LET'S START THE INSTALLATION

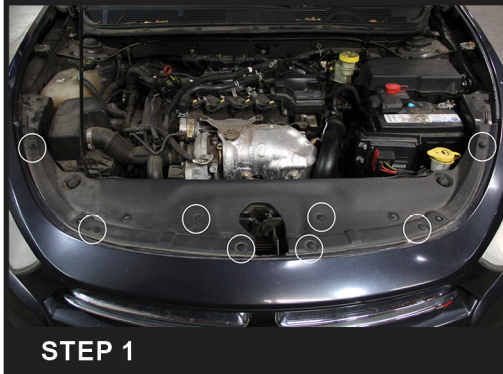


**STEP 1**

Remove the eight plastic fasteners on the radiator upper support cover



**STEP 2**

Remove the radiator upper support cover

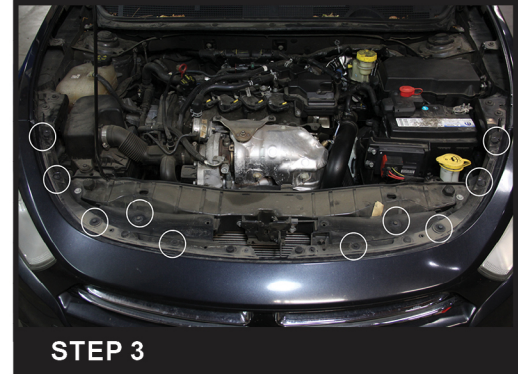


**STEP 3**

Remove the four plastic fasteners and the six 10mm bolts at the top of the front bumper




**STEP 4**

Unseat the front bumper top edge

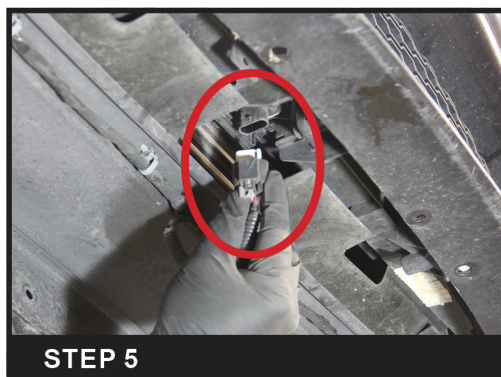

**STEP 5**

Disconnect the connector located underneath the front bumper

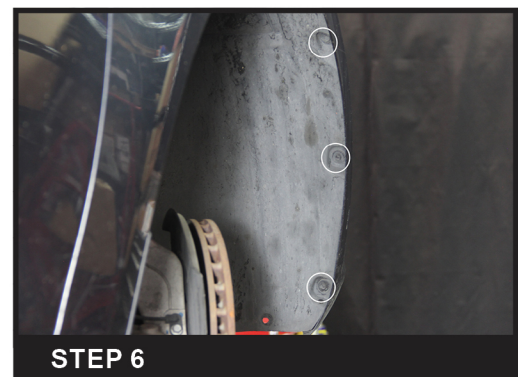

**STEP 6**

Remove the three 8mm bolts on the fender liner



**STEP 7**

Remove the 10mm front bumper mounting bolt



**STEP 8**

Grab the edge to unseat the front bumper, repeat for the opposite side



**STEP 9**

Remove the front bumper



**STEP 10**

Remove the three 10mm bolts on the headlight upper bracket, and remove the headlight upper bracket



**STEP 11**

Remove the 8mm headlight mounting bolt



**STEP 12**

Remove the 10mm bolt at the side of the headlight



**STEP 13**

Remove the plastic fastener at the top of the headlight




**STEP 14**

Disconnect the headlight harness and remove the factory headlight housing



**STEP 15**

Transfer the 9005 bulb from the factory headlight to the new headlight

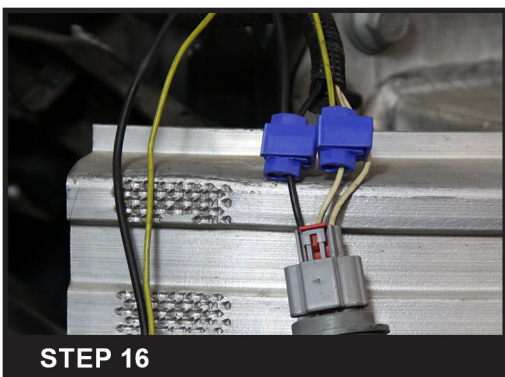


**STEP 16**

Connect the turn signal wire harness, yellow to white and black to black



**STEP 17**

Connect the headlight harness and seat the new headlight assembly in place

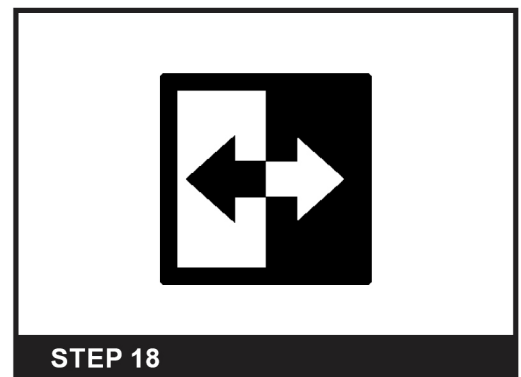


**STEP 18**

Please repeat the steps from 4 to 17 for the opposite side




**STEP 19**

Remove fuse box cover

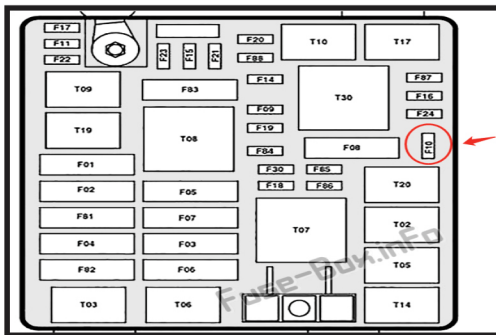

**STEP 20A**

Remove the #10 fuse

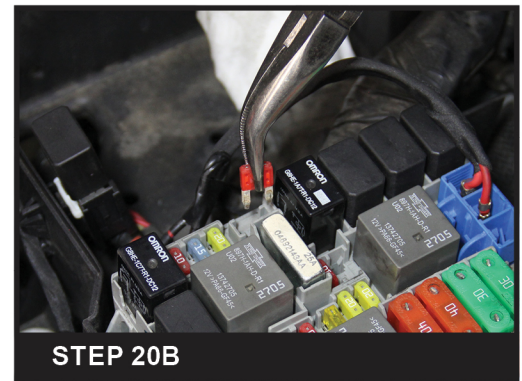

**STEP 20B**

Remove the #10 fuse



**STEP 21A**

Install the ACC wire fuse to the #10 fuse spot



**STEP 21B**

Install the ACC wire fuse to the #10 fuse spot



**STEP 22**

Reinstall the fuse box cover



**STEP 23**

Connect the ACC wire to the LH headlight connector




**STEP 24**

Connect the ACC wire to the RH headlight connector



**STEP 25**

Start the car to make sure the LED light bar is working before reinstall the front bumper

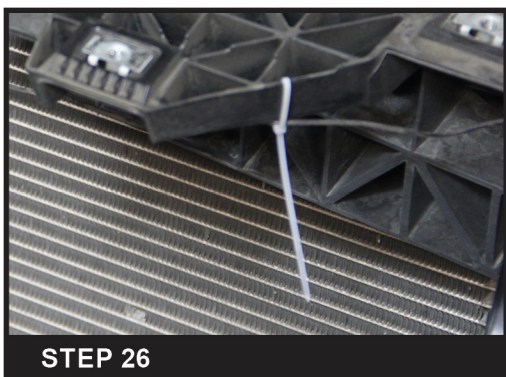

**STEP 26**

Cable ties the loose wires



**STEP 27**

Reinstall the plastic fastener at the top of the headlight




**STEP 28**

Reinstall the 8mm headlight mounting bolt



**STEP 29**

Reinstall the headlight upper bracket

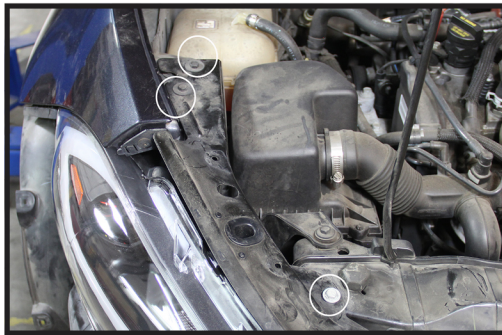


**STEP 30**

Reinstall the three 10mm bolts on the headlight upper bracket



**STEP 31**

Reinstall the 10mm bolt at the side of the headlight

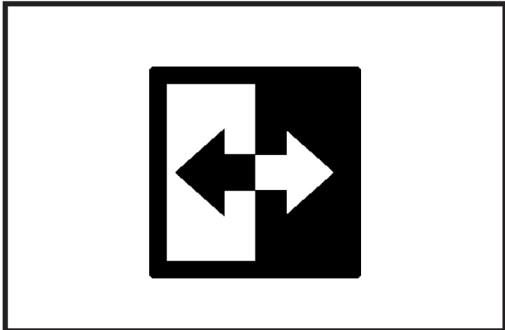

**STEP 32**

Please repeat the steps from 26 to 31 for the opposite side



**STEP 33**

Reinstall the front bumper



**STEP 34**

Buckle the side of the front bumper




**STEP 35**

Buckle the top edge of the front bumper




**STEP 36**

Reinstall the 10mm front bumper mounting bolt

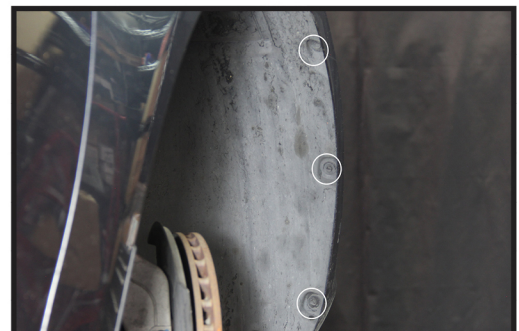

**STEP 37**

Reinstall the three 8mm bolts on the fender liner

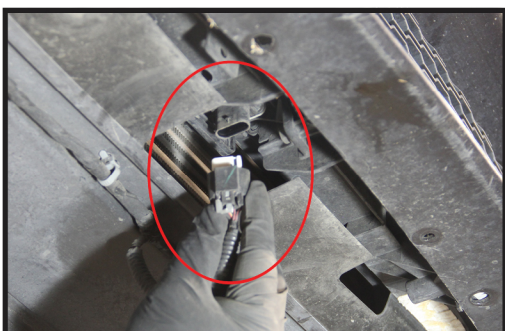

**STEP 38**

Reconnect the connector located underneath the front bumper



**STEP 39**

Reinstall the four plastic fasteners and the six 10mm bolts at the top of the front bumper



**STEP 40**

Reinstall the radiator upper support cover



**STEP 41**

Reinstall the eight plastic fasteners on the radiator upper support cover



**STEP 42**

Close the hood to complete the installation

