

SPEC-D *Tuning*

2007-2010 FORD EDGE PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Drive Ratchet

7/32" Socket

6" Extension

Phillips Screwdriver

10mm Socket

Trim Pad Remover

If your Headlight is Halo type, you also need:

Wire Stripper

Wire Crimper

4 Blue Quick Splice Wire Connectors

4 Blue Male Quick Wire Connectors

4 Blue Female Quick Wire Connectors

2 Red Wires (8 inch)

2 Black Wires (8 inch)

Product Part Numbers:

2LHP-EDG07-TM

2LHP-EDG07G-TM

2LHP-EDG07JM-TM



2007-2010 FORD EDGE PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (4) plastic clips and (2) 7-36in bolts location



2. Remove the (2) 7-32in bolts



3. Remove the (2) 7-36in bolts



4. Remove the (4) plastic clips



5. Remove the (4) plastic clips



6. (3) plastic clips and (4) 6-32in bolts location



7. Remove the (3) plastic clips



8. Remove the (3) Plastic clips



9. Remove the (4) 7-32in bolts



10. Remove the (4) 7-32in bolts



11. Remove the (3) 7-32in bolts



12. Unplug the fog light harness



13. Remove the front bumper



14. Remove the (2) 10mm bolts



15. Remove the 10mm bolt



16. Remove the 10mm bolt




17. Remove the turn signal light bulb socket



18 Disconnect the headlight harness



19. Remove the headlight

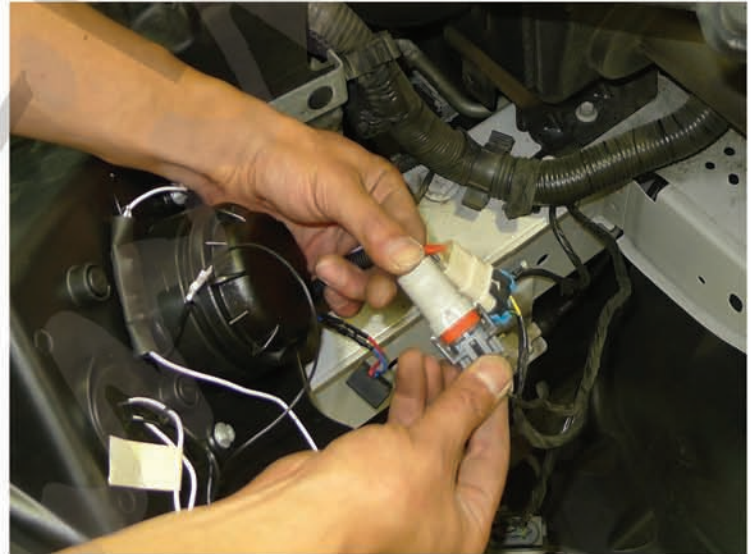

20. Connect the headlight harness to the projector headlight
Please see the Halo and L.E.D installation instruction
If your headlights don't have HALO or L.E.D. You can skip it



21. Place the projector headlight in the stock location



22. Tighten the 10mm bolt



23. Tighten the 10mm bolt



24. Tighten the (2) 10mm bolts



25. Replace the front bumper



26. Replace the (4) plastic clips



27. Tighten the (2) 7-32in bolts



28. Tighten the (3) 7-32in bolts



29. Reconnect the fog light harness



30. Tighten the (4) 7-36in bolts



31. Replace the (3) plastic clips



32. Please repeat the steps in order from 1 to 31 for the opposite side. The installation is now complete